


# OPERATING AND INSTALLATION MANUAL SURFACE-MOUNTED UNIT LG 100 AP



EU-regulation  
1253/2014



EPREL

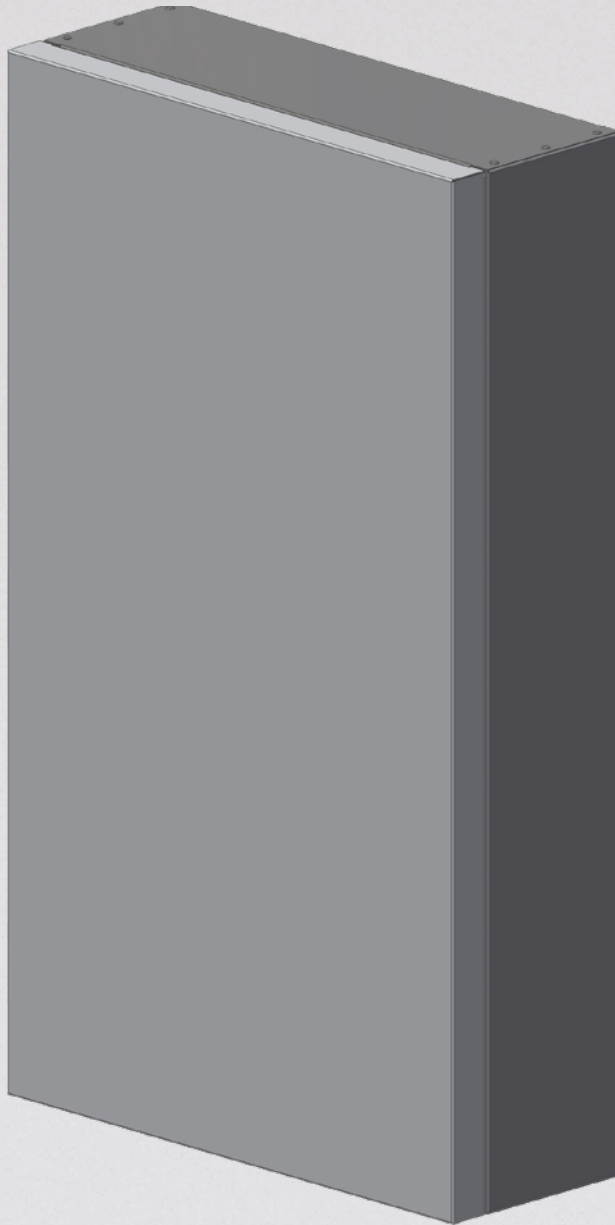

**COMFORT  
VENTILATION**

 **PICHLER**

*Systematic ventilation.*

## Contents

### GENERAL

#### 1. Introduction

**Page 4**

#### 2. General information

**Page 4**

### USER

#### 2.1. UNIT IN SURFACE-MOUNTED DESIGN

PAGE 5

#### 2.2. OVERVIEW OF COMPONENTS

PAGE 6

#### 3. Functionality of the ventilation system

**Page 7**

#### 4. Designated use

**Page 7**

##### 4.1. INTENDED USE

PAGE 7

##### 4.1.1. STIPULATIONS FOR OPERATION WITH FIREPLACES

PAGE 8

##### 4.1.2. STIPULATIONS FOR OPERATION WITH EXTRACTOR HOODS

PAGE 8

##### 4.1.3. LIABILITY

PAGE 8

##### 4.1.4. WARRANTY

PAGE 8

#### 5. Safety

**Page 9**

##### 5.1. SYMBOLS USED IN THIS DOCUMENT

PAGE 9

##### 5.2. SAFETY REGULATIONS

PAGE 9

##### 5.3. SETTING UP THE UNIT

PAGE 10

##### 5.4. ELECTRICAL CONNECTIONS

PAGE 10

##### 5.5. PLANT OPERATION

PAGE 10

#### 6. Customer service

**Page 11**

#### 7. Design of the ventilation unit

**Page 11**

#### 8. How to operate the unit

**Page 12**

#### 9. MINI control unit

**Page 13**

##### 9.1. FUNCTIONS

PAGE 13

##### 9.2. BUTTONS AND LEDS

PAGE 13

#### 10. Operation via PICHLER APP and PICHLER Connect

**Page 15**

##### 10.1. EASY OPERATION WITH THE PICHLER APP

PAGE 15

##### 10.2. REMOTE ACCESS WITH PICHLER CONNECT

PAGE 15

##### 10.3. DATA PROTECTION

PAGE 15

##### 10.4. CREATING AN ACCOUNT

PAGE 16

#### 11. Error & warning messages

**Page 18**

##### 11.1. LED ON THE VENTILATION UNIT

PAGE 18

##### 11.2. MINI CONTROL UNIT

PAGE 18

##### 11.3. PICHLER-APP

PAGE 18

#### 12. Filter service

**Page 19**

##### 12.1. MINI CONTROL UNIT FILTER MESSAGE

PAGE 19

##### 12.1.1. CLEARING THE MINI CONTROL UNIT FILTER MESSAGE

PAGE 19

##### 12.2. FILTER MESSAGE ON THE UNIT

PAGE 19

##### 12.3. FILTER MESSAGE VIA PICHLER APP

PAGE 19

##### 12.4. FILTER CHANGE

PAGE 19

##### 12.5. PROCEDURE FOR THE FILTER CHANGE

PAGE 20



## SPECIALIST PERSONNEL - ASSEMBLY / INSTALLATION

### 13. Transport, storage and disposal

13.1. TRANSPORT, STORAGE AND PACKAGING

13.2. DISPOSAL

### 14. Technical data

14.1. DEVICE STRUCTURE AND DIMENSIONS

14.2. SYSTEM DIAGRAM

14.3. SAFETY DEVICES

14.4. DEVICE DATA

14.5. SOUND DATA

### 15. Closed-loop control

15.1. FROST PROTECTION WITH PRE HEATING BATTERY

15.2. MOISTURE PROTECTION

15.3. FROST PROTECTION WITHOUT PRE-HEATING BATTERY

15.4. VOC/ECO2 CONTROL

15.5. OUTDOOR AIR QUALITY CONTROL

### 16. Installation

16.1. PRELIMINARY WORK

16.1.1. REMOVING THE SLIDE-IN MODULE FROM THE SURFACE-MOUNTED HOUSING

16.1.2. REMOVING THE DRILLING TEMPLATE FROM THE PACKAGING BOARD

16.1.3. STRUCTURAL MEASURES FOR ASSEMBLING THE SURFACE-MOUNTED HOUSING

16.2. INTERIOR WORK

16.2.1. MOUNTING THE OUTDOOR AIR AND EXHAUST AIR CONNECTIONS

16.2.2. ASSEMBLY OF THE SURFACE-MOUNTED HOUSING

16.2.3. INSERTING THE SLIDE-IN MODULE INTO THE SURFACE-MOUNTED HOUSING

16.3. ELECTRICAL CONNECTION

16.4. EXTERIOR WORK

16.4.1. DESIGN OF THE WEATHER PROTECTION GRILLE

16.4.1.1. ASSEMBLY FROM THE OUTSIDE

16.4.1.2. ASSEMBLY FROM THE INSIDE

16.4.2. ASSEMBLY OF THE DESIGN FRONT

## SPECIALIST PERSONNEL - COMMISSIONING

### 17. Maintenance and cleaning

17.1. SAFETY INSTRUCTIONS

17.2. MAINTENANCE INSTRUCTIONS

17.3. ENTHALPY EXCHANGER

17.4. UNIT HOUSING - INTERIOR CLEANING

16.5. MAINTENANCE TABLE

### 18. Commissioning

18.1. BASIC QUESTIONS WITH REGARD TO COMMISSIONING

18.2. SETTING THE SYSTEM PARAMETERS

### 19. Error description

19.1. ERROR DESCRIPTION OF THE MINI CONTROL UNIT

19.2. ERROR DESCRIPTION OF THE UNIT

### 20. Installation/operation service software and firmware updates

### 21. Spare parts and accessories

21.1. CONTROL ELEMENTS

21.2. AIR FILTER

21.3. GATEWAY

### 22. Changes reserved

### 23. EC Declaration of Conformity

**Page 21**

PAGE 21

PAGE 21

**Page 22**

PAGE 22

PAGE 23

PAGE 23

PAGE 24

PAGE 25

**Page 26**

PAGE 26

PAGE 26

PAGE 26

PAGE 27

PAGE 27

**Page 28**

PAGE 28

PAGE 28

PAGE 29

PAGE 30

PAGE 31

PAGE 31

PAGE 32

PAGE 33

PAGE 33

PAGE 36

PAGE 36

PAGE 36

PAGE 37

PAGE 37

**Page 38**

PAGE 38

PAGE 38

PAGE 38

PAGE 39

PAGE 40

**Page 42**

PAGE 42

PAGE 42

**Page 43**

PAGE 43

PAGE 44

**Page 44**

**Page 45**

PAGE 45

PAGE 45

PAGE 45

**Page 45**

**Page 46**

GENERAL

USER

SPECIALIST PERSONNEL




## 1. Introduction

Dear customer,

Thank you for choosing the decentralised compact ventilation unit LG 100 from PICHLER.


To operate your compact ventilation unit safely, properly and economically, please read this manual carefully and follow the instructions provided. Keep this operating manual in a safe place and readily available. These units are subject to ongoing improvement and further development. Your unit may therefore vary slightly from the description in this manual.

Use the ventilation unit only when in perfect condition and for its designated use, be aware of safety and any hazards and cognisant of all the notes and information contained in this Manual.



J. Pichler  
Gesellschaft m.b.H

AUSTRIA 9021  
KLAGENFURT  
Karlweg 5  
T +43 (0) 463 32769  
www.pichlerluft.at



**Equipment type:** 08LG100DEFV

**Volume flow:** max. 80 m<sup>3</sup>/h

**Dimensions WxHxD:** 599x945x203 mm

**Voltage/frequency:** 230V / 50 Hz


**Power consumption:** max. 320 W

**Order number:**


**Serial number:**

**Year of manufacture:**

**Weight:** approx. 35 kg




*Compact ventilation unit LG 100 ceiling variant  
with pre-heating battery*



J. Pichler  
Gesellschaft m.b.H

AUSTRIA 9021  
KLAGENFURT  
Karlweg 5  
T +43 (0) 463 32769  
www.pichlerluft.at



**Equipment type:** 08LG100APFV

**Volume flow:** max. 60 m<sup>3</sup>/h

**Dimensions WxHxD:** 525x910x203 mm

**Voltage/frequency:** 230V / 50 Hz


**Power consumption:** max. 320 W

**Order number:**


**Serial number:**

**Year of manufacture:**

**Weight:** approx. 25 kg




*Compact ventilation unit LG 100 surface-mounted variant  
with pre-heating battery*



J. Pichler  
Gesellschaft m.b.H

AUSTRIA 9021  
KLAGENFURT  
Karlweg 5  
T +43 (0) 463 32769  
www.pichlerluft.at



**Equipment type:** 08LG100UPFV

**Volume flow:** max. 80 m<sup>3</sup>/h

**Dimensions WxHxD:** 504x882x192 mm

**Voltage/frequency:** 230V / 50 Hz


**Power consumption:** max. 320 W

**Order number:**

**Serial number:**

**Year of manufacture:**

**Weight:** approx. 15 kg



*Compact ventilation unit LG 100 flush-mounted variant  
with pre-heating battery*

Please always keep the model and serial number (see name-plate on unit) at hand in the case of queries or when ordering spare parts.

Please contact us if you have any further questions or if you lose this documentation.

Your PICHLER team



J. Pichler Gesellschaft m.b.H.

**9021 KLAGENFURT**  
Karlweg 5, Postfach 32  
T +43 (0)463 32769

## 2. General

This manual contains notes and information regarding the safe operation and proper installation of the decentralised compact ventilation unit LG 100 as well as its use and servicing. Furthermore, reference this manual during servicing to ensure proper execution of the tasks.

Troubleshooting and procedures may be performed by an installation company (specialist company) only.

Changes reserved: This manual has been compiled with the utmost care. This does not, however, imply any rights. Your unit may therefore vary slightly from the description in this manual.


Our "General terms and conditions" in their latest version apply.



## 2.1. Design of the surface-mounted unit

The compact ventilation unit LG 100 in surface-mounted design comprises a surface-mounted housing (3) and a ventilation unit as slide-in module (2).

The ventilation unit is closed with a design front (1) at its front side. The outdoor air and exhaust air connections are led to the outside via PVC pipe (4) and closed with the weather protection grille (5).

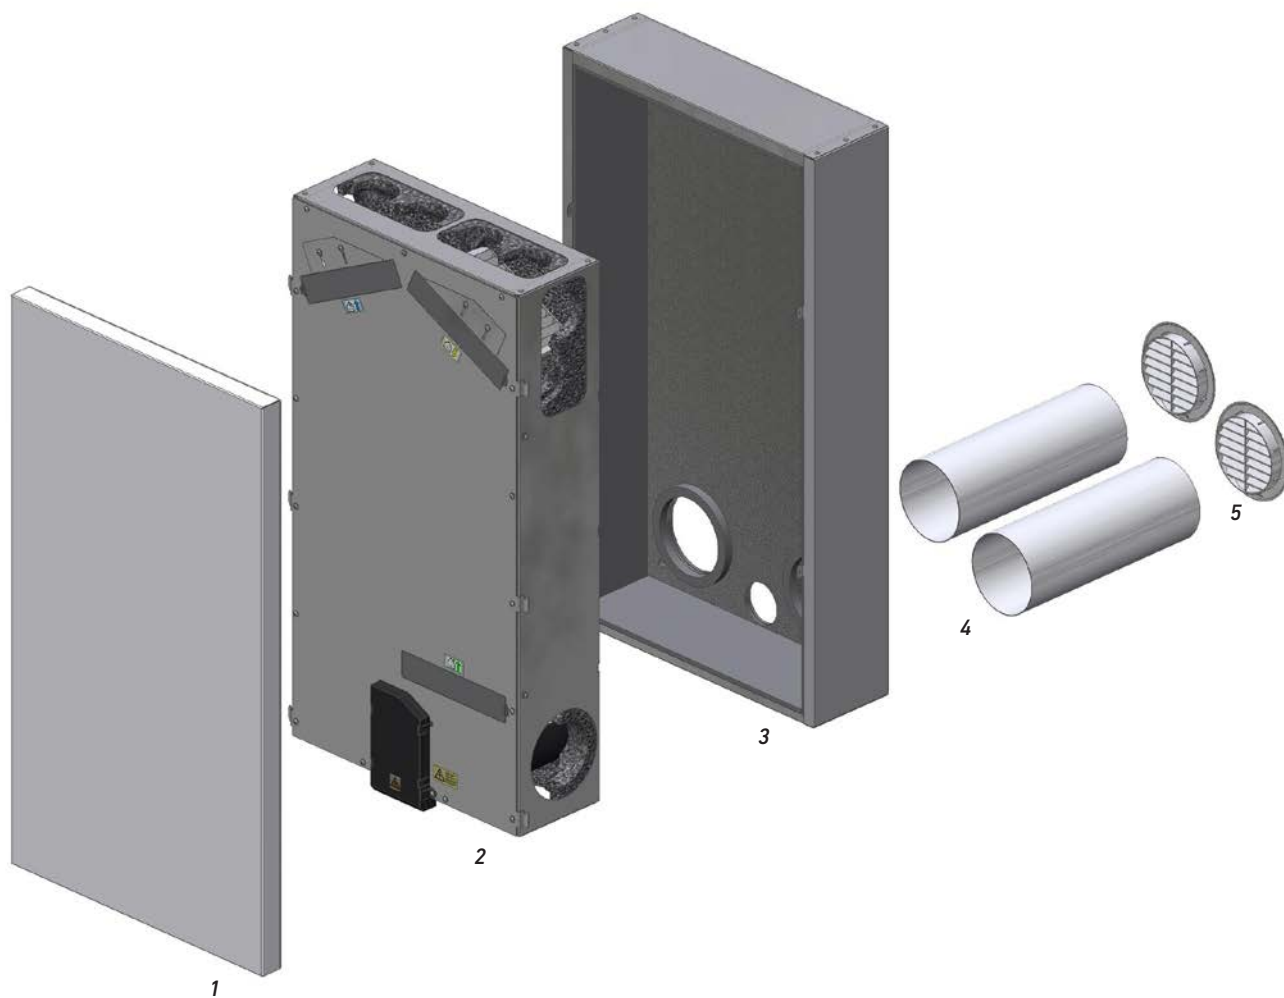

*Components of a surface-mounted unit*







GENERAL

USER

SPECIALIST PERSONNEL



## 2.2. Overview of components

Overview of components		
Designation	Item number	Drawing
Surface-mounted unit Surface-mounted unit with pre-heating battery	08LG100APF 08LG100APFV	
Design front	08LG100UPAPDF1A	
Plastic pipe DN125, 1m	08R1251000	
Drilling template	30KARTONLG10012A	
Components for the façade finish		
Plastic grille NW155 for pipe diameter 80-125 mm	10TU125B	
Plastic grille NW170, foldable, mountable from the inside, for pipe diameters 100-140 mm	10DF140B	



### 3. Functionality of the ventilation system

With the ventilation unit LG 100 you can provide a maximum degree of flexibility to your ventilation concept. The used air is extracted from the living areas, and fresh, filtered outdoor air is supplied again. In this process, the high-quality enthalpy exchanger allows for efficient heat and moisture recovery and ensures a well-balanced room humidity and a pleasant room climate.

Highly efficient and low noise EC radial fans allow for extremely energy-saving and low-noise operation. In the switched-off state, the outdoor and exhaust air openings are automatically closed mechanically. The integrated sensors record the VOC and eCO<sub>2</sub> concentration of the extract air and, in automatic mode, allow for an operation depending on the room air quality.

The decentralised compact ventilation unit LG 100 is operated easily and intuitively by means of a pushbutton directly on the unit or via the PICHLER APP. Therefore the unit comes with a WLAN connection as a standard feature. Optionally you can additionally connect an external control unit via cable connection. To ensure a stable WLAN connection of the LG 100 it may be required to boost the WLAN signal by using WLAN repeaters or to establish a mesh network.

### 4. Designated use

#### 4.1. Intended use

The compact ventilation unit LG 100 is intended for the installation into ventilation and air conditioning systems for controlled domestic ventilation in small and medium-sized residential units (approx. 80 m<sup>2</sup>). The purpose of controlled mechanical ventilation and deaeration of domestic areas is to improve air quality and reduce the heating energy demand through the use of a highly efficient heat recovery system, and to influence indoor air humidity. The scope and intended use for the unit are limited to the use in residential and recreation spaces for the extraction of used air and the supply of fresh, tempered outdoor air at maximum flow media temperatures of -15 °C to +35 °C. Furthermore, the air conveyed must be free from aggressive vapours and substances enhancing wear. Any other use shall be deemed contrary to designated use. The manufacturer shall accept no responsibility for damages or consequential damages arising from improper use. Designated use also includes adherence to our prescribed operating and installation manual. This unit is available to the general public and is intended for the installation in residential or industrial buildings. The unit is used for mechanical aeration and ventilation of indoor air and, when combined with a heater battery, is also used to preheat air. The compact ventilation unit LG 100 is not suitable for outdoor installation and may be installed in suitable and frost-free interior areas only. The ventilation unit is not suitable for drying new buildings.

This unit can be used by children from an age of 8 years and furthermore by persons with reduced physical, sensory or mental capabilities or a lack of experience or knowledge, if they are supervised or if they have been instructed on how to use the unit safely and if they understand the hazards resulting therefrom. Children must not play with the unit. Cleaning and user maintenance must not be carried out by children without supervision.



**In order to prevent an uncontrolled formation of condensate in the unit, continuous operation with an extract air humidity of more than 60 % has to be avoided at outdoor temperatures below 0°C (e.g. private spa area).**

The compact ventilation unit is not a ready-to-use product. It must not be put into operation until it has been properly installed and connected. Only qualified and instructed personnel may carry out connection and service work on the unit.



**Persons transporting, installing or working on the unit must have read and understood the operating instructions, in particular Section 5 "Safety". The end user must also be instructed on potential hazards.**





#### 4.1.1. STIPULATIONS FOR OPERATION WITH FIREPLACES

Local requirements must be taken into consideration by compliance with corresponding standards, laws and directives. The decentralised compact ventilation unit LG 100 may only be installed in rooms, flats or utilisation units of a comparable size in which fireplaces dependent on room air are installed, if:

- simultaneous operation of room air-dependent fireplaces and the air extraction unit is prevented by safety devices, or
- the flue gas evacuation of the room air-dependent fireplace is monitored by special safety devices. In the case of room-air dependent fireplaces for liquid or gaseous fuels, activation of the safety device must lead to the switch-off of the fireplace or ventilation unit. In the case of room-air dependent fireplaces for solid fuels, activation of the safety device must lead to the switch-off of the ventilation unit.

The ventilation units for the controlled aeration and ventilation of a flat or a comparable living unit must not be installed if room air-dependent fireplaces in the living unit are connected to exhaust gas systems, which themselves have multiple connections. Normal operation requires the possibility of shutting potentially available combustion air ducts as well as exhaust gas systems off from room air-dependent fireplaces. In the case of exhaust gas systems of fireplaces for solid fuels, it must be ensured that the shut-off device can only be operated manually. The position of the shut-off device must be identifiable by the setting of the operating handle. This specification is considered as complied with if a shut-off device against soot is used. With regard to the fire protection installation regulations for the set-up of the ventilation unit, the provisions of national law, in particular the building regulation concerning the fire protection requirements with regard to ventilation systems in the relevant latest version must be observed.

#### 4.1.2. STIPULATIONS FOR OPERATION WITH EXTRACTOR HOODS

Due to the heavy load as well as the irregular operation, the extract air of an existing kitchen extractor hood must not be integrated into the dwelling's ventilation system. Extract air from such extractor hoods must be conducted separately by means of an exhaust air pipe over the roof. The supply air must be provided for separately (e.g. by window ventilation).

If an extractor hood without the separate provision of supply air is operated, the balance of the air volume in the dwelling is no longer kept and the proper function of the dwelling's ventilation system is no longer ensured (odour diversion, etc.). Another option is to operate the extractor hood in recirculation mode.

#### 4.1.3. LIABILITY

The compact ventilation unit LG 100 has been developed and manufactured for controlled mechanical ventilation and deaeration of spaces with purposes similar, for example, to seminar rooms and small offices. Proper use requires that combustion air lines and exhaust systems have the facility to be shut off from fireplaces dependent on ambient air.

Any other use than that described in Section 4 shall be deemed improper and may cause personal injury or damage to the ventilation unit, for which the manufacturer shall accept no liability.

**The manufacturer accepts no responsibility for any damage due to:**

- non-compliance with the safety, operating and servicing instructions given in this operating and installation manual.
- the installation of spare parts that have not been supplied by the manufacturer, the responsibility for the use of such spare parts being fully borne by the system builder/installer.
- Normal wear and tear.

#### 4.1.4. WARRANTY

The warranty period shall commence after the unit is put into operation, but no later than one month after delivery. Warranty details can be found in our "General terms and conditions" in their latest version as well as the merchant conditions of your respective country. The warranty shall be subject to proof of services performed as per our instructions and executed by a licensed installer/specialised company. Warranty claims shall be limited to material and/or constructional defects occurring during the warranty period. In the event of a warranty claim, the compact ventilation unit LG 100 must not be dismantled without prior written authorisation from the manufacturer. The manufacturer's liability shall be limited to spare parts installed by an installation company approved by the manufacturer. The warranty shall automatically lapse at the end of the warranty period, following improper operation such as operation without a filter, if parts other than original manufacturer-supplied parts are installed, or if unauthorised changes are made to the unit. Furthermore, the warranty is automatically rendered void by failure to comply with the information in this operating and installation manual.





## 5. Safety

Read this operating and installation manual carefully and observe the safety instructions while you carry out installation, commissioning, servicing or general work on the ventilation unit. Keep the operating and installation manual near the unit for its entire service life.

Always observe the safety regulations, warnings and instructions given in this operating manual.

The specifications given in this document must not be altered. Non-observance of these safety regulations, warnings and instructions may lead to physical injury or damage to the compact ventilation unit.

The conclusion of a service contract is recommended to ensure that the unit will be checked at regular intervals. Ask your supplier about approved specialised companies/installers in your area.

### 5.1. Symbols used in this document

The following Safety symbols highlight text containing warnings in respect of danger and potential hazards.

Please familiarise yourself with these symbols.



**Attention/Note!**



**Attention! Ignoring this warning may lead to injury or threat to life and limb and/or damage to the unit.**



**Attention – High voltage! Ignoring this warning may lead to injury or threat to life and limb.**

### 5.2. Safety regulations

Installation, initial start-up, maintenance and repairs must only be carried out by an authorised specialist company.

Over and above this operating and installation manual, local and national regulations and standards shall also apply to the operation of this unit without limitation.

Take instruction from your installer on the unit and on its control unit following installation. The ventilation unit may only be used in accordance with the information provided in Section 4 "Designated use".

All safety and danger notices attached to the unit and specified in this description must be observed.

In the event of malfunctioning, switch off the unit immediately and disconnect all poles to switch the unit to zero potential. The unit must be appropriately secured against restart. Faults must be remedied immediately.

After repairs and maintenance work, qualified personnel must verify that the unit is safe to operate.

Attachment or installation of additional parts and components is not permitted. Any modification of the compact ventilation unit is prohibited. Only original spare parts may be used.

Modifications and alterations to the ventilation unit are prohibited and absolve the manufacturer from all warranties and liability.

Ensure that children do not play with the unit.



### 5.3. Setting up the unit



**The national and local regulations must be heeded when installing and setting up the unit. The unit may only be installed in compliance with national installation regulations.**

Installation shall be carried out in accordance with the general local building, safety and installation regulations of the relevant community or the water and electricity department and other bodies. The unit may only be installed in frost-free and dry rooms. The room temperature at the place of installation must be consistently between +5 °C min. and +35 °C max. The unit is designed for upright installation or wall installation and may only be set up on a suitable, load-bearing construction. The unit must not be exposed to vibration of any kind.

Components of the ventilation unit, e.g. air ducts which may need to be installed in unheated areas, must be suitably insulated to prevent heat loss or condensate formation (for temperatures under dewpoint). Observe all locally-applicable construction and fire protection guidelines, regulations and standards. If necessary, appropriate suitable measures should be taken when installing the unit, e.g. installation of fire dampers in air ducts, etc.

### 5.4. Electrical connections



**Warning: hazardous electrical voltage! Ignoring the danger may result in death, injuries or material damage. Before carrying out any work on live parts, the unit must always be disconnected completely from the power supply (all poles) and secured against being switched back on.**



**Electrical connection work and work on the system's electrical components may be carried out by authorised electricians only, in compliance with national and local regulations.**



**Before opening the unit and when carrying out work on the unit e.g. maintenance work and repairs, the unit must be isolated from the mains (all poles disconnected) and secured against being switched back on for the duration of the work. The compact ventilation unit must be connected to a 230 V / 50 Hz voltage supply and with correct phase polarity. The mains supply line must be provided with a strain relief.**

**To the external interfaces exclusively fittings may be connected for which it is proven that there is an electrically protective separation between the interface and those active parts of the fitting, which are not operated with safety extra-low voltage (SELV/PELV), in compliance with DIN EN 61140, e.g. by double or reinforced insulation complying with DIN EN 60335-1 or DIN EN 60730-1.**



**Any work practices that could potentially impair the safety of the unit are prohibited! To ensure safe operation, safety devices must not be removed or bypassed.**

Electrical equipment and the unit's warning and protective devices must be inspected regularly to ensure that they are in perfect working order. In the event of faults in the electrical power supply or identification of defects, e.g. loose connections or burnt cables, the unit must be switched off immediately. Damaged or faulty power supply cables to the unit must be repaired immediately to avoid hazards. The unit may not be operated until safe operational conditions are restored. Fault finding and immediate remediation of electrical defects and malfunctions shall be carried out by authorised electricians only. All protective measures must be inspected (e.g. earth resistance, etc.) after completion of electrical work on the unit.



## 5.5. Plant operation



Operation of the ventilation unit is permitted only if all built-in parts provided e.g. silencers etc., have been properly connected



In the event of any errors or defects that can cause harm to persons or property, the system must be put out of operation immediately. Further use must be actively prevented until the unit is fully repaired.

If error messages are output or in the case of damage, the ventilation unit must be switched off and disconnected from the mains immediately. Ensure that you are safety conscious and aware of risks when you open the unit and when you remove cover plates. Any work practices that could potentially impair the safety of the unit are prohibited.



Operation of the unit is exclusively permissible with a connected air duct or mounted system components such as silencers, in order to ensure that, for example, fans or electrical installation parts, cannot be touched with the hand.

The compact ventilation unit may be operated only in accordance with the project documentation, which shall comply with the Equipment and Product Safety Act and the pertinent provisions of the EC Directives and Standards. Consider environmental impacts and refrain from installing the ventilation unit in the vicinity of flammable liquids or gases, in swimming pools or in areas exposed to chemicals or hazardous substances. Never operate the ventilation unit without an air filter. Air filters must be checked regularly for dirt and damage and replaced, if necessary. The air filters must be changed at least every six months or when the "Change Filter" message appears on the control unit. Use original replacement filters only. If the plant is not used in summer, the air filters must, for hygienic reasons, be replaced prior to restarting.

Comply with safety requirements and standards when operating the ventilation unit simultaneously with ambient air-dependent fireplaces. When using fireplaces dependent on ambient air, combustion air supply must be provided separately. Due to the heavy load as well as the irregular operation, extractor hoods must in no case be integrated into the exhaust duct of the compact ventilation unit. Exhaust air extractor hoods must be operated via separate air pipes with suitable air replenishment e.g. by means of window ventilation or in air recirculation mode. For corresponding details see Sections 4.1.1. and 4.1.2.

## 6. Customer service

Please contact the installer of your ventilation and air conditioning system or contact us directly for any questions relating to the delivered compact ventilation unit LG 100.



J. Pichler Gesellschaft m.b.H.


**9021 KLAGENFURT**  
Karlweg 5, Postfach 32  
T +43 (0)463 32769

## 7. Design of the ventilation unit

The compact ventilation unit LG 100 comprises:

- a compact, thermally insulated and soundproof EPP housing
- a casing of galvanised steel sheet, powder-coated in RAL 9003
- a design front that comes with an outside powder coating in RAL 9003 as a standard
- a highly efficient enthalpy exchanger
- energy-saving EC radial fans
- an integrated sensor system for measuring the volumetric flow, temperature, relative humidity and VOC/eCO<sub>2</sub> concentration
- outdoor air and extract air filter ISO Coarse 70 % and supply air filter ISO ePM1 55%
- an integrated filter monitoring function - when the time interval is reached
- standard operation via pushbutton on the unit, WLAN interface for controlling the PICHLER-APP and for providing remote access via PICHLER Connect, and optionally with the "MINI" control unit for setting the basic functions.



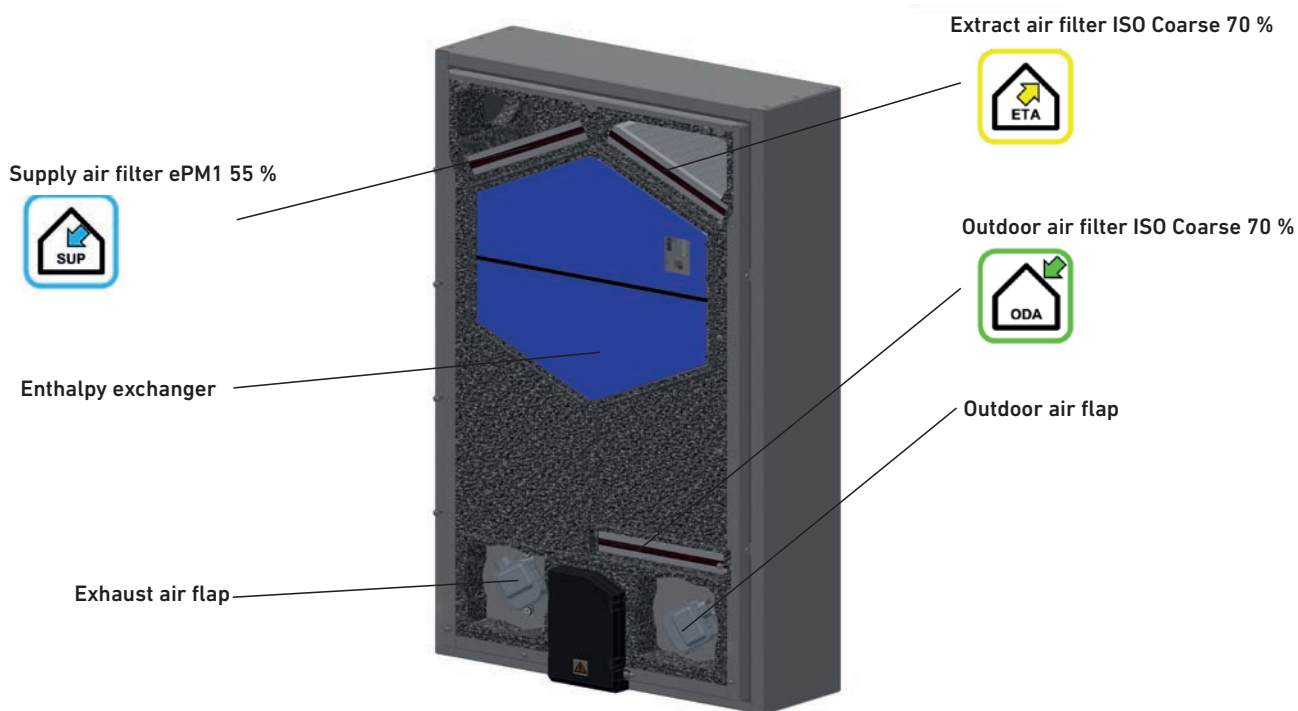

Description of the unit design


## 8. How to operate the unit

The ventilation unit without a control unit is operated via a pushbutton on the lower end of the unit. A green LED indicates the different operating states of the ventilation unit. A red LED indicates an error or a warning message of the unit. A detailed description of the error codes can be found in Section 19.2.

Pattern	Description
Flashing red 1-5 times	Switch the unit to a deenergised state by switching it off and on. If the error message remains active, please contact the customer service.
Flashing red 6 times	Merely indicates a risk of frost or condensation, but is still in operation.
Flashing red 7 times	The unit cannot establish an Internet connection.



LED and operating button on the bottom side of the unit

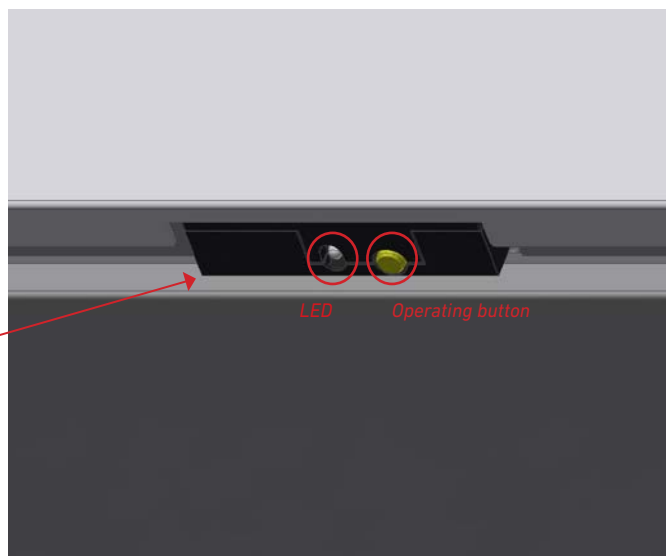

Detailed view



The ventilation unit is switched on by pressing the operating button twice and starts running at ventilation level 1. The LED blinks three times at frequent intervals with one green flash in each case. The outdoor air and exhaust air flap opens and the fans convey the selected operating volume flow of ventilation level 1. With every further push of the button the ventilation unit is switched to the next higher ventilation level. When the "Automatic" ventilation level (LED flashing green 4 times) has been reached, the ventilation unit switches back to the "Standby" mode, and switching starts again from the first level. In the Standby mode, the fans switch off, and the outdoor air and exhaust air flap closes. The current operating state is indicated by the flashing patterns specified in the table below.

#### Wake-up call:

After showing the respective flashing pattern, the LED changes to the "Sleeping mode", the ventilation unit continuing its operation at the ventilation level currently set.

By pressing the operating button, a "wake-up call" is carried out first and the sleeping mode of the LED is stopped. The LED indicates the current operating status (ventilation level, error and filter messages) by the different flashing modes. The flashing modes are repeated 3x, then the LED returns to the sleeping mode again.

In order to change the ventilation level, the button on the ventilation unit must be pressed after the "wake-up call" and within the flashing pattern (3 repetitions).

Pattern	Operation
Flashing green once	Ventilation level 1
Flashing green twice	Ventilation level 2
Flashing green 3 times	Ventilation level 3
Flashing green 4 times	"Automatic" ventilation level
LED flashing green permanently	Access point for coupling to the WLAN

## 9. MINI control unit

### 9.1. Functions


The unit can also be operated via the optional "MINI" control unit.

The following functions of the compact ventilation unit can be indicated and configured by means of the "MINI" control unit:

- Ventilation level of the compact ventilation unit
- Display of the filter change message
- Display of the fault messages via LED
- Boost ventilation mode for a defined time
- WIFI modes



MINI control unit

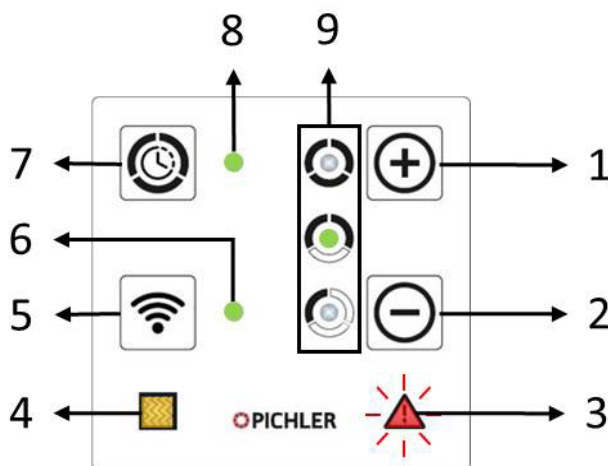

Functions of the MINI control unit



**1. Plus button**

Increasing the ventilation level

**2. Minus button**

Reducing the ventilation level

**3. Error LED**

Indicates errors with different flashing patterns that light up

**4. Filter LED**

After the filter time has elapsed, the filter has to be checked. For acknowledging the filter message, simultaneously press the plus and minus buttons for 5 seconds.

**5. WIFI button**

- press once to activate the WIFI mode
- press for 2 seconds to deactivate the WIFI mode
- press for 5 seconds to call the Access Point mode

**6. WIFI LED**

- LED off = WIFI deactivated
- LED is lit = WIFI mode
- LED flashes = Access Point mode

**7. Boost button**

Activates ventilation level 3 (boost ventilation level) for a defined period of time (standard: 60 minutes)

**8. Boost LED**

Is lit when the boost ventilation mode is active.

The LED of the current ventilation level is lit and the LED of ventilation level 3 flashes.

**9. Ventilation level LEDs**

Indicate the current ventilation level

When all three LEDs are active, this corresponds to the automatic mode. The ventilation unit follows a demand-controlled air volume flow regulation via VOC.


Pattern	Operation
Green LED level 1 is lit	Ventilation level 1
Green LED level 2 is lit	Ventilation level 2
Green LED level 3 is lit	Ventilation level 3
All three LEDs are lit green	"Automatic" ventilation level



**Ventilation level 1**  
*Boost ventilation mode  
for a defined time*



**Ventilation level 2**  
*Boost ventilation mode  
for a defined time*

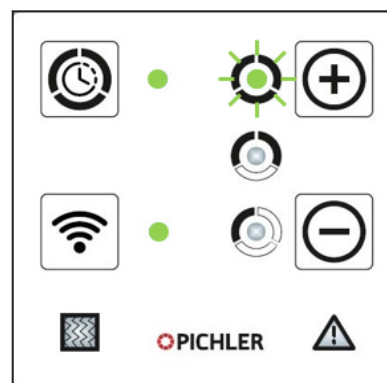

**Ventilation level 3**  
*Boost ventilation mode  
for a defined time*

When the defined time (configurable) has elapsed in the highest ventilation level, ventilation operation switches back automatically to the ventilation level set last. Alternatively, you can end the boost ventilation mode manually before the time has passed. Simply press the [-] button on your control unit.



## 10. Operation via PICHLER APP and PICHLER Connect

To ensure a stable WLAN connection of the LG 100 it may be required to boost the WLAN signal by using WLAN repeaters or to establish a mesh network.


### 10.1. Easy operation with the PICHLER APP



*User-friendly:* The compact ventilation unit can be operated easily with our free smartphone App for Android and iOS, whether you are at home or out and about:

Load and install the PICHLER-APP from the APP store or from the Google Play store. The PICHLER APP can control the ventilation unit directly or via the Internet.

By pressing the WIFI button for 5 seconds (see red marking in the illustration on the left), the Access Point mode of the ventilation unit is activated and indicated by a green flashing of the WIFI-LED.

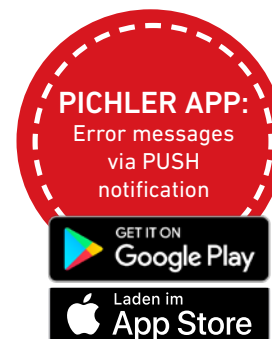

As an alternative, the Access Point mode is also activated if the control button on the unit is pressed for 10 seconds. The mode is indicated by an LED that is flashing green permanently.

### 10.2. Remote access with PICHLER Connect

*Operational safety:* Remote access allows the PICHLER customer service to respond quickly and easily in the event of faults.



### 10.3. Data protection

When you have installed the PICHLER APP and establish a connection to the device, we assume that you accept our current data privacy statement (see: [www.pichlerluft.at/datenschutz.at](http://www.pichlerluft.at/datenschutz.at)).







## 10.4. Creating an account

When the Access Point mode is active, the ventilation unit is visible via the WLAN settings of the smartphone. Select the network of the name "LG100AHU" and enter the password "Pichler1234". When you have successfully established a connection with the ventilation unit, open the PICHLER APP.

The following screen is shown:

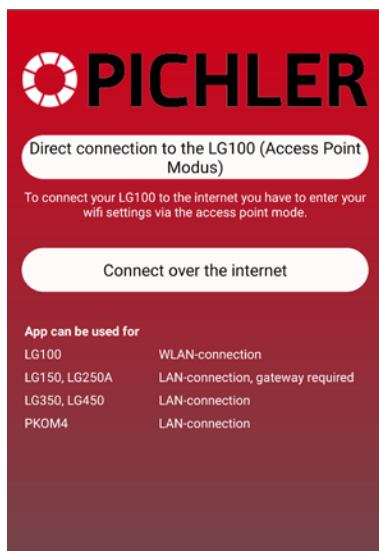

Press the "LG100 Access Point" button in order to establish a direct connection with the ventilation unit.

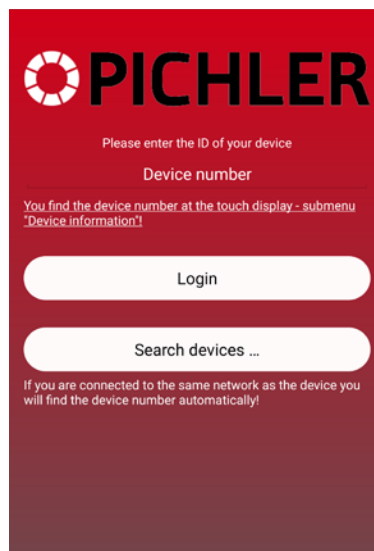


Afterwards press the "Search for units..." button

If the ventilation unit is found via the Access Point mode, a 12-digit number is shown.



If no number is shown, the smartphone is not connected to the ventilation unit.

**Start again!**

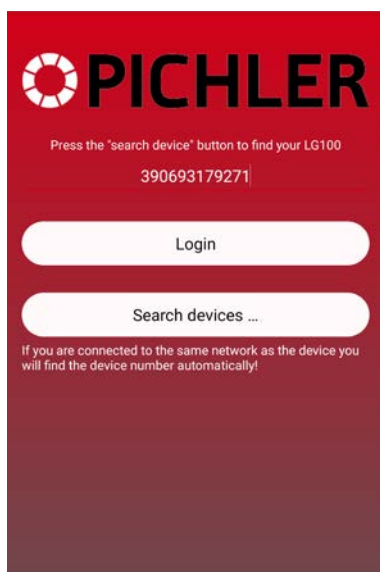

Press the "Login" button. The APP checks the connection and loads the data of the ventilation unit.


The following screen will open:




Go to the "WIFI settings" menu.



In order to connect the ventilation unit to the Internet router, you must enter the network name (WIFI-SSID), the WIFI password and the WIFI encryption. Then press "Accept". The direct connection between the ventilation unit and your smartphone is interrupted.

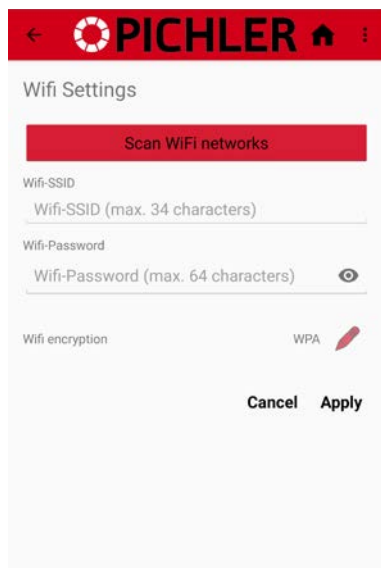



Connect your smartphone to the Internet router and select "Connect via Internet" on the screen now.

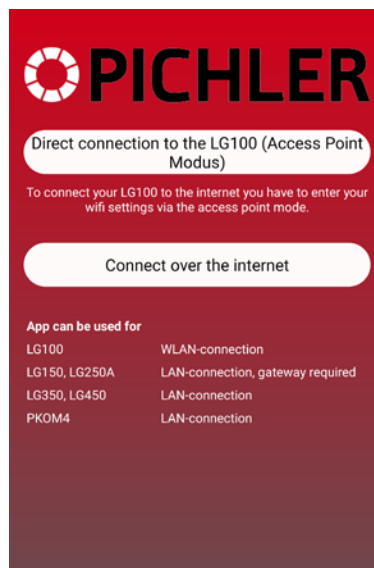

Since you are connected to the same network, press the "Search for units..." button.

The same 12-digit number as in the Access mode is shown.

→ If no number is shown, either the ventilation unit or your smartphone is not connected to the Internet router. Start again!

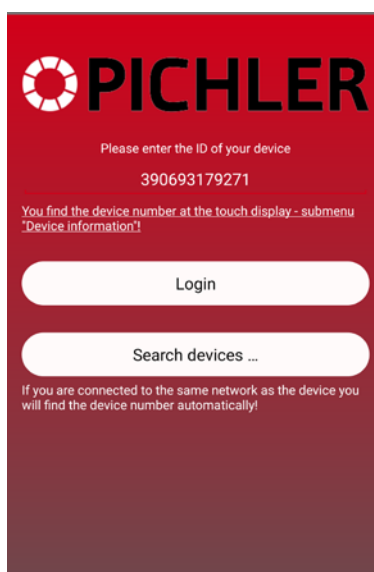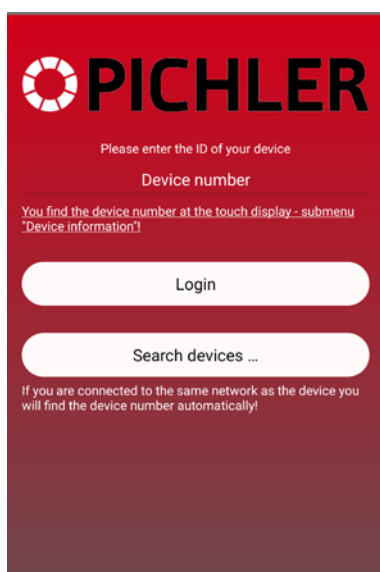

If the Internet connection with the ventilation unit and your smartphone has been established successfully, you must allocate an account name, email address and a password. Press the "Save" button and your account is created. Then you can control your ventilation unit worldwide using your smartphone.




## 11. Error & warning messages

### 11.1. LED on the ventilation unit



The error messages of the compact ventilation unit are indicated in red by flashing patterns on the LED on the lower end of the ventilation unit .

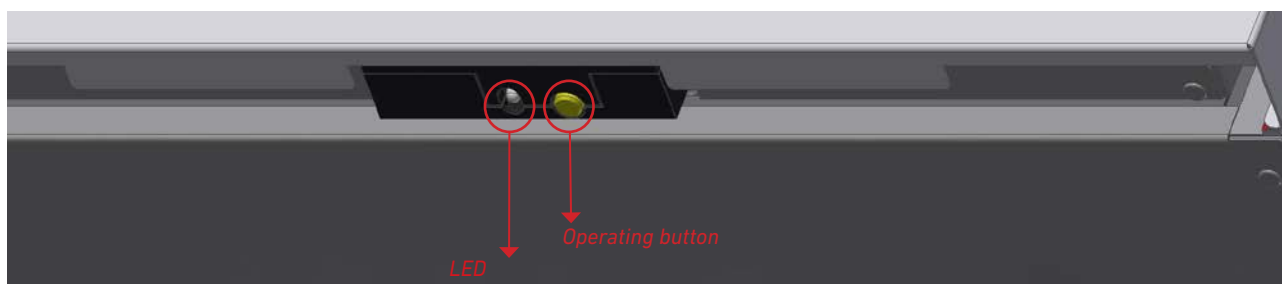


*Display of error messages on the unit*

The meaning of the different flashing codes is described in greater detail in Section 19 "Error description" ("Specialized personnel" section). In any case, check the Internet connection and switch the unit on and off before consulting an expert.

### 11.2. MINI control unit



The error messages of the compact ventilation unit on the MINI control unit are indicated by red error LED flashing patterns.

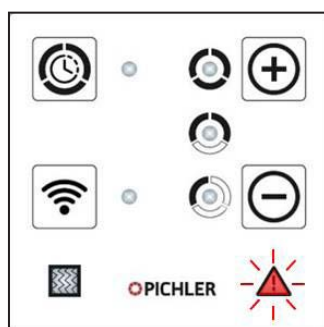

*MINI control unit error message*

The meaning of the different flashing codes is described in greater detail in Section 19 "Error description" ("Specialized personnel" section). In any case, check the Internet connection and switch the unit on and off before consulting an expert.

### 11.3. PICHLER APP

The APP indicates a group error message via PUSH notification. To obtain an exact error indication, please read off the flashing pattern from the control unit or the ventilation unit.



## 12. Filter service



At every filter maintenance always all 3 filters must be replaced.

### 12.1. MINI control unit filter message

When the filter service life has elapsed (factory setting 6 months) the control unit reports the necessity of a filter check. This takes place via the LED provided for this purpose (on the bottom left), which will then be lit yellow permanently.

#### 12.1.1. Clearing the MINI control unit filter message

##### Required filter change


Reset the filter counter after changing the filter.

Press the [+] and the [-] button at the same time for 5 seconds in order to do this. The filter message disappears after entering this combination.


##### Premature filter change

If the air filters are replaced prematurely, the filter counter must be reset without a pending filter message.

To do this, you again press the [+] and the [-] button simultaneously for five seconds.

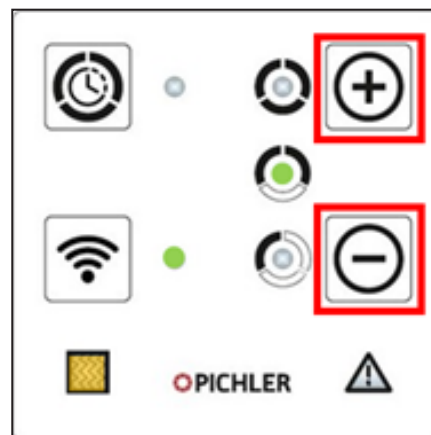

MINI control unit filter message

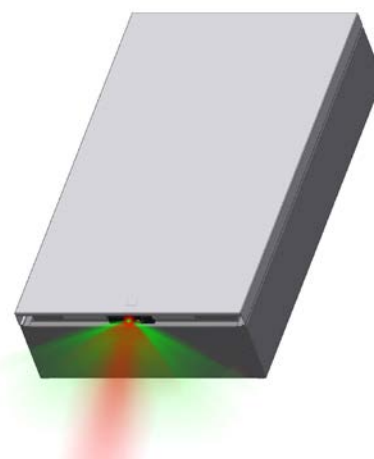

Flashing LED

### 12.2. Filter message on the unit

When the filter service life has elapsed (factory setting 6 months), the unit indicates a filter change on the control by the LED alternately flashing in green and red. To acknowledge the filter message, press the button for **5 seconds**.

### 12.3. Filter message via PICHLER APP

When the filter service life has elapsed, the APP shows a filter message via PUSH notification.

### 12.4. Filter change






Only original replacement filters of the specified quality class may be used.



When replacing the air filters, avoid soiling the unit and its components. Dirty air filters must be immediately and suitably disposed of. The used air filters can be disposed of as residual waste.




Symbol	Designation	Item no.:
	ODA pre-filter (outdoor air)	40LG0500006A
	ETA filter (extract air)	
	SUP fine filter (supply air)	40LG0500007A

## 12.5. Procedure for the filter change

1. Filter message on the MINI control unit or via the Pichler APP.
2. Set the unit to Standby.
3. Remove design front.
4. Remove the filter covers by pressing the latches positioned at the sides towards the inside.
5. Remove the respective air filter by the flaps. Note the direction of the air stream!
6. Insert the new air filter and close the filter cover. Note the direction of the air stream!
7. Mount the design front again.
8. Acknowledge the filter message by keeping the button pressed for 5 seconds.



When inserting the new filters, observe the mounting position (direction of air).




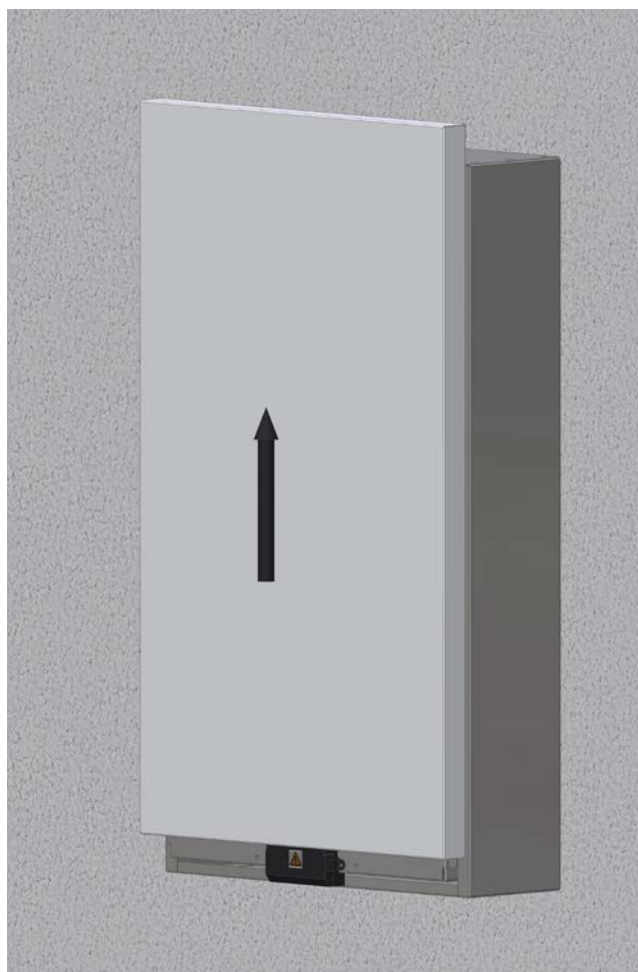


Push the design front upwards



Remove the design front

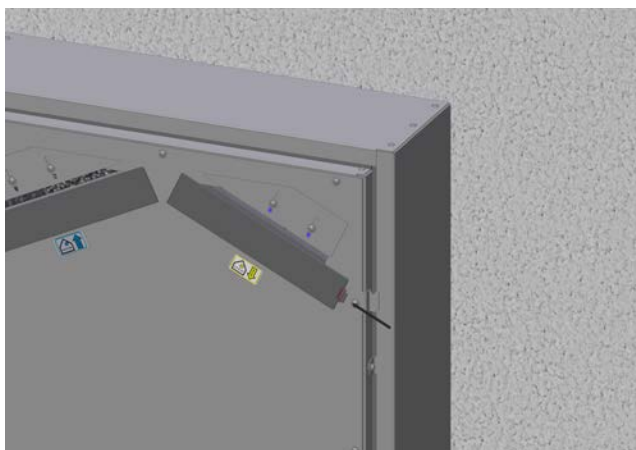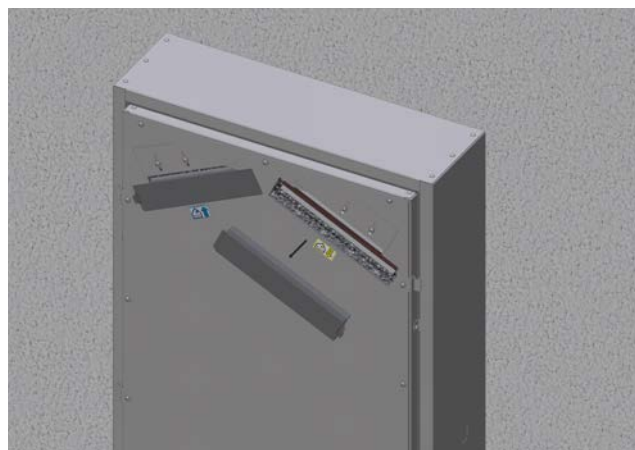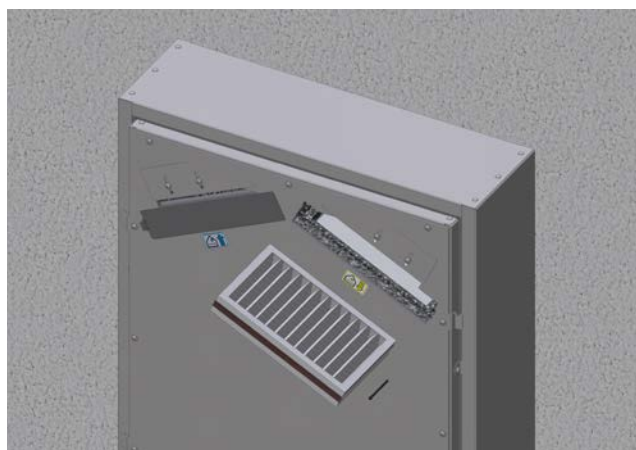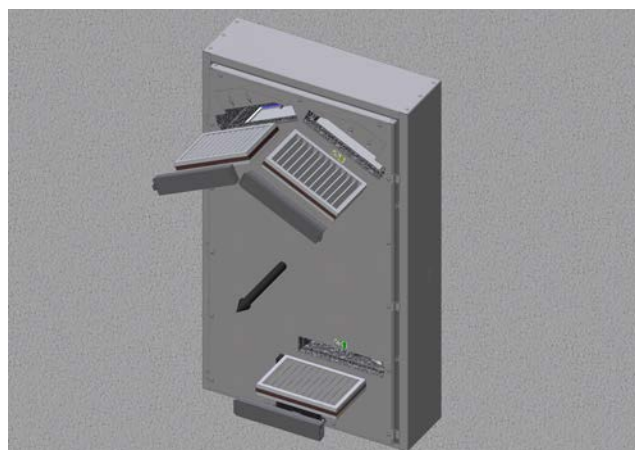

*Open the flap**Remove the filter cover**Remove the filter**All 3 filters removed*

## SPECIALIST PERSONNEL - ASSEMBLY/INSTALLATION

### 13. Transport, storage and disposal



Any transport damage and/or missing parts must be reported immediately in writing to the forwarder or supplier.

#### 13.1. Transport, storage and packaging

The compact ventilation unit is delivered in a transport packaging. The safety markings on the packaging must be observed. The unit must be stored in its packaging in suitable dry rooms.

In order to prevent possible transport damage, handle the compact ventilation unit LG 100 with care and secure it correspondingly during transport. Ensure that the unit is not damaged from being toppled or overturned. Avoid knocks and blows during transportation. Applicable safety and accident regulations must be complied with during transportation. If transported manually, ensure that necessary human lifting and carrying forces are reasonable.

#### 13.2. Disposal



The packaging materials must be disposed of in accordance with local regulations; wooden pallets or cartons must be recycled, for instance.

Units that are no longer in working order must be dismantled by a specialised company and properly disposed of via suitable collection centres in accordance with the Waste Electrical and Electronic Equipment Ordinance (WEEE), which provides for the implementation of community law, Directive 2002/95/EC (RoHS) and Directive 2002/96/EC (WEEE Directive).










## 14. Technical specifications


### 14.1. Unit set-up and dimensions

- 1 Supply air
- 2 Extract air
- 3 Outdoor air (100 mm)
- 4 Exhaust air (100 mm)
- 5 Enthalpy exchanger
- 6 Outdoor air fan
- 7 Exhaust air fan
- 8 Controller
- 9 Outdoor air flap
- 10 Exhaust air flap
- 11 Outdoor air filter ISO Coarse 70%
- 12 Supply air filter ePM 55 %
- 13 Exhaust filter ISO Coarse 70%
- 14 Cable inlets
- 17 Electric pre-heating battery

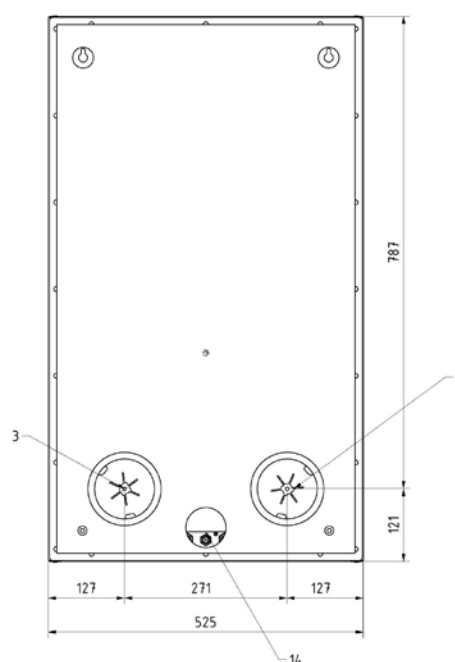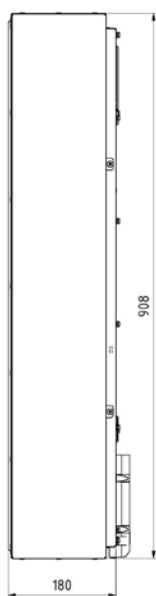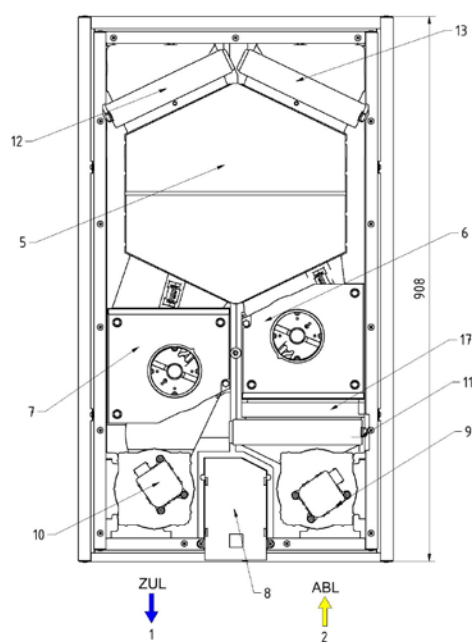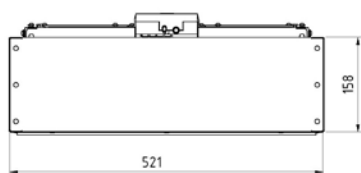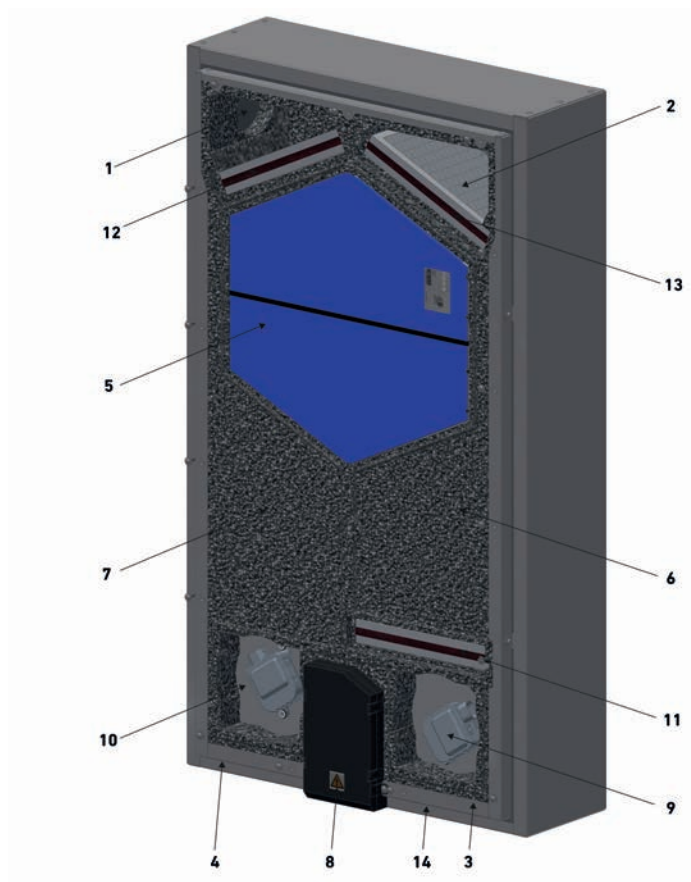



## 14.2. System diagram

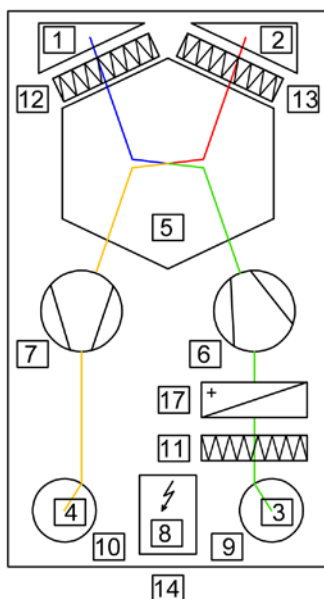

1. Supply air (SUP)	Supply air is the air supplied to the room.
2. Extract air (ETA)	Extract air is the air that is extracted from the room.
3. Outdoor air (ODA)	Outdoor air is the air that is drawn in from outside.
4. Exhaust air (EHA)	Exhaust air is the air that is blown out into the open.
5. Enthalpy exchanger	Serves to transfer heat and recover humidity from the warmer to the colder air.
6. Outdoor air fan	Provides for the required air volume flow in the supply air.
7. Exhaust air fan	Provides for the required air volume flow in the extract air.
8. Controller	The ventilation unit is regulated in a demand-oriented fashion via the VOC/eCO <sub>2</sub> sensor system integrated into the ventilation unit. The ventilation unit can be controlled optionally by using the pushbutton on the unit, via Pichler APP or via the "MINI" control unit.
9. Outdoor air flap	Closes the outdoor air connection of the unit when the unit is switched off.
10. Exhaust air flap	Closes the exhaust air connection of the unit when the unit is switched off.
11. Outdoor air filter ISO Coarse 70%	Serves to pre-filter the outdoor air and to protect the unit interior. Furthermore the filter replacement intervals of the supply air filter are prolonged.
12. Supply air filter ISO ePM1 55 %	Serves to filter particulate matter in the supply air.
13. Exhaust filter ISO Coarse 70 %	Serves to filter the coarse impurities from the extract air, in order to protect the unit's interior from being contaminated.
14. Cable inlets	Electric connecting cable
15. Supply air connections for multi-room applications	Serves to provide the KOMFLEX system connection with the possibility of ventilating further rooms.
16. Extract air connections for multi-room applications	Serves to provide the KOMFLEX system connection with the possibility of air extraction from further rooms.
17. Electric pre-heating battery	Provides protection against the formation of condensate and against freezing in the heat exchanger at very cold outdoor temperatures. The optional electric pre-heating battery serves to preheat the outdoor air as a function of the outdoor and exhaust air temperature.

## 14.3. Safety devices



To ensure safe operation of the system, safety devices and covers must by no means be rendered inoperative; nor may measures be taken to bypass or dismantle them.

In the event of any errors or defects on the ventilation system, which may cause harm to persons or property, the system must be put out of operation immediately or be protected against restart. Further use must be actively prevented until the unit is fully repaired. The unit may only be repaired by a specialised company.



## 14.4. Device data

Equipment type	LG 100 AP - surface-mounted
Application	Single-room application
Article number ventilation unit	08LG100APF
Article number ventilation unit with pre-heating battery	08LG100APFV
Article number design front, RAL 9003	08LG100UPAPDF1A
<b>Device data</b>	
Ventilation stages	1 - 2 - 3 - automatic
Level 1 - basic ventilation	25
Level 2 - normal ventilation	42
Level 3 - boost ventilation	60
Automatic (demand-based)	25 - 60
Energy efficiency class	A
<b>Properties</b>	
Volume flow constant function	yes
Humidity control	yes
Air quality control (VOC, eCO <sub>2</sub> )	yes
Mechanical cover flap in the outdoor air and exhaust air pipe	yes
<b>Characteristic values in compliance with EN13141-8:2014 <sup>1)</sup></b>	
Temperature ratio	83.6 %
Humidity ratio supply air	69.1 %
Specific input power SIP	0.28 Wh/m <sup>3</sup>
<b>Classification of air filters in accordance with EN ISO 16890</b>	
ODA filter (outdoor air - pre-filter)	ISO Coarse 70 %
SUP filter (supply air - fine filter)	ISO ePM1 55 %
ETA filter (extract air)	ISO Coarse 70 %
<b>Operating conditions</b>	
Permissible operating temperature (outdoor air) with / without preheating battery	-15 °C / -5 °C
Condensate drainage	not required <sup>2)</sup>
<b>Electrical system</b>	
Electrical connection	230V / 1 ~ / 50 Hz / 13 A
Power consumption of ventilation unit	8 - 40 watts
Electrical power consumption pre-heating battery	280 watts
<b>Materials and components</b>	
Inner part	EPP and galvanised steel sheets
Housing and design front	Steel sheet, galvanised and powder-coated
Heat exchanger	Enthalpy counterflow heat exchanger with a polymer membrane
Fans	EC radial fans
<b>Air connections</b>	
Outdoor / exhaust air	100 mm
<b>Sound levels</b>	
Level of acoustic insulation standby	55 dB(A)
Level of acoustic insulation operation	55 dB(A)



Dimensions and weight	
Unit dimensions W x H x D (without connections)	525 x 908 x 200 mm
Weight	25 kg
Design front	525 x 908 x 43 mm
Weight	5 kg
Certifications	
TÜV-tested	yes
Building inspection approval (DIBt (German Institute for Structural Engineering))	Z-51.3-489

<sup>1)</sup> At 70% of the max. volume flow; corresponds to ventilation level 2

<sup>2)</sup> When used as intended as living space ventilation unit, no condensate will form

## 14.5. Sound data

SINGLE-ROOM APPLICATION	Volume flow m³/h		
	25	42	60
Housing			
Sound pressure level at a distance of 1m $L_{PA1m}$ dB(A)	< 20	22	29
Sound power level $L_{WA}$ dB(A)	29	35	43
Outdoor air / exhaust air			
Sound pressure level $L_{PA}$ dB(A) weather protection	41	53	62
Sound power level $L_{WA}$ dB(A) reveal	39	50	58



## 15. Control

### 15.1. Frost protection with a pre-heating battery

Optionally, the ventilation unit LG 100 is available with an integrated electric PTC pre-heating battery. When the pre-heating battery is active, the cold outdoor air is pre-heated via the electrical PTC heating element. This operating mode provides a guaranteed balanced air flow volume between the supply air and extract air.

- With a very low outdoor temperature, when a defined exhaust temperature is underrun, and when the defined temperature difference between extract air and supply air is exceeded, the pre-heating battery is switched on and remains active for a minimum running time.
- When the exhaust air temperature exceeds the value defined, the pre-heating battery is switched off after the minimum running time.
- If the unit is switched off and the pre-heating battery had been active beforehand, the fans continue running for a while.

### 15.2. Moisture protection

In order to prevent the formation of condensate, above an exhaust air humidity value defined, the ventilation unit adjusts itself to ventilation level 3. If the exhaust air humidity level subsequently continues to rise nevertheless, the supply air volume flow is slightly reduced, and the unit runs in disbalance, ensuring an effective humidity removal. This means that less supply air is fed to the rooms by the ventilation unit than is discharged via the extract air. The slight negative pressure in the living space is compensated by an inflow of air due to leakages in the building (e.g. entrance door).

**Note:** If the disbalance control mode is not required or is not permissible (e.g. if there is a gas hot water heater), this function must be deactivated during commissioning by the specialist personnel.

The ventilation unit only regulates back when the exhaust moisture falls below the value defined.

If the exhaust air humidity remains at a very high level in spite of this safety function, the ventilation unit switches to the Standby mode after about 30 minutes. After approximately one hour in standby operation, the ventilation unit will restart automatically, initiating a restart of the safety function.

### 15.3. Frost protection without a pre-heating battery

For ventilation units without pre-heating batteries there is the risk that the heat exchanger freezes when outdoor temperatures are very cold. Since the ventilation unit is not provided with a condensate connection, the formation of condensate is to be avoided by all means. Therefore, for reasons of safety, the ventilation unit is switched off automatically for approximately one hour when outdoor air temperatures fall below -5°C and the mechanical flaps in the outdoor air and exhaust air vents are closed automatically. After this time, the ventilation unit is automatically restarted.



**Attention! This safety function interrupts the ventilation operation at low outdoor temperatures.**





## 15.4. VOC/eCO2 control

The room air quality is measured via VOC and eCO2 sensors, and the air volume flow is controlled in a demand-oriented fashion. In the automatic mode, the ventilation unit regulates the air volume flow as a function of the air quality (VOC) or the eCO2 values on a needs-based basis. The greater the value, the larger the volume flow.

Acceptable room air should not exceed a CO2 value of approx. 1000 ppm and have air quality class 1 to 2.

Room air quality/ IAQ rating	Reference Level	TVOC (mg/m <sup>3</sup> )	Air quality
< 2.0	Level 1	< 0.3	Very good
2.0 to 2.99	Level 2	0.3 to 1.0	Good
3.0 to 3.99	Level 3	1.0 to 3.0	Medium
4.0 to 4.99	Level 4	3.0 to 10	Poor
5.0	Level 5	> 10	Bad

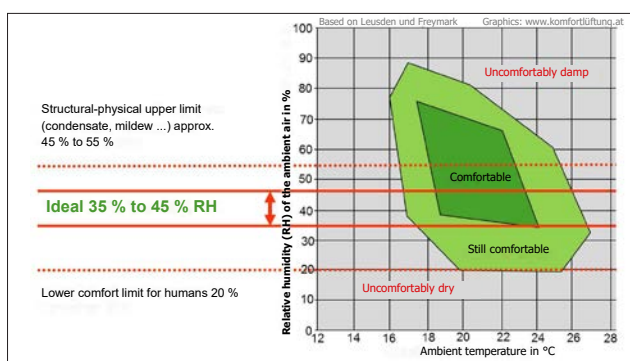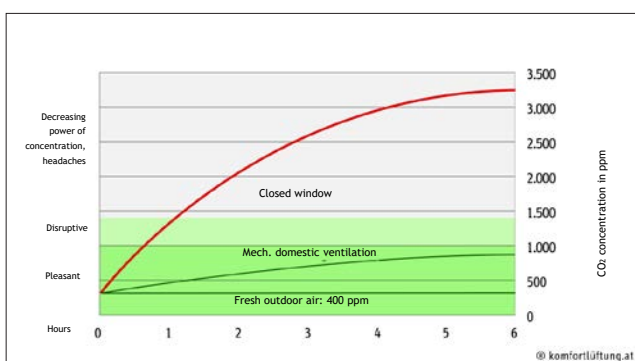

## 15.5. Outdoor air quality control

If the ventilation unit has been configured by the factory with an (optional) VOC/eCO2 sensor in the outdoor air, the function can be activated via the APP. If the outdoor air quality (VOC value) is less than class 4 for a certain time, the ventilation unit changes to the Standby mode. After approx. one hour in standby operation, the ventilation unit is restarted automatically.




## 16. Mounting

### 16.1. Preparatory work

#### 16.1.1. Removing the slide-in module from the surface-mounted housing


In order to be able to mount the surface-mounted housing, you first have to remove the slide-in module from the surface-mounted housing and set it aside.

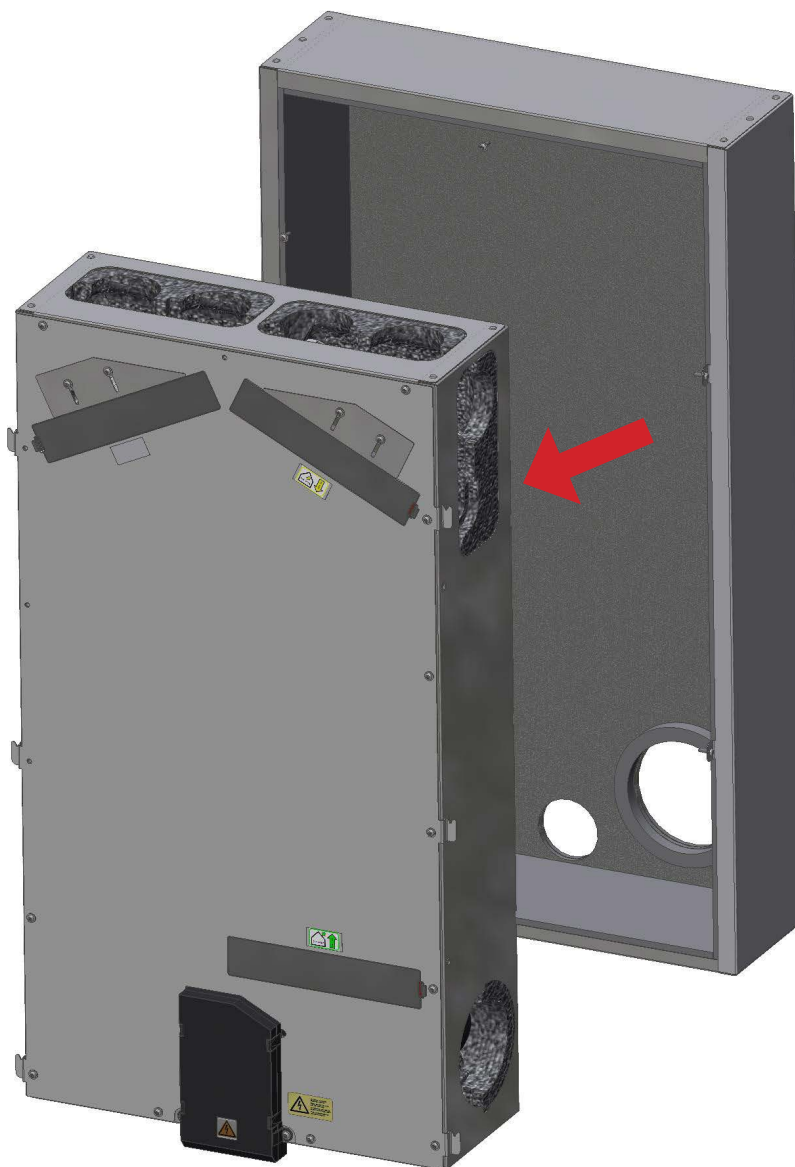

*Removing the slide-in module from the surface-mounted housing*


### 16.1.2. Removing the drilling template from the packaging board

The scope of supply includes a template to implement the core drilling of the outdoor air and exhaust air opening as well as the mounting point.

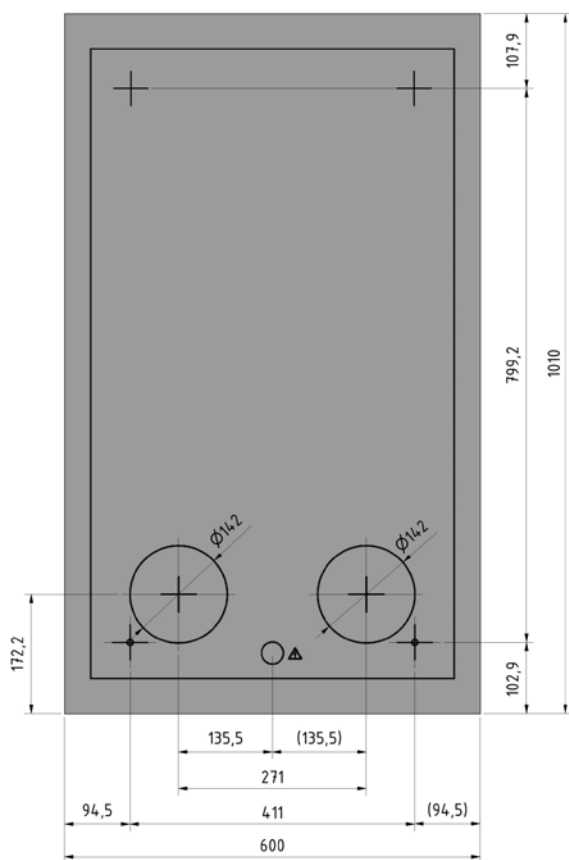

*Dimensioning of the mounting template for the LG 100 surface-mounted housing*

The drilling template must be aligned vertically and horizontally and fastened to the wall.

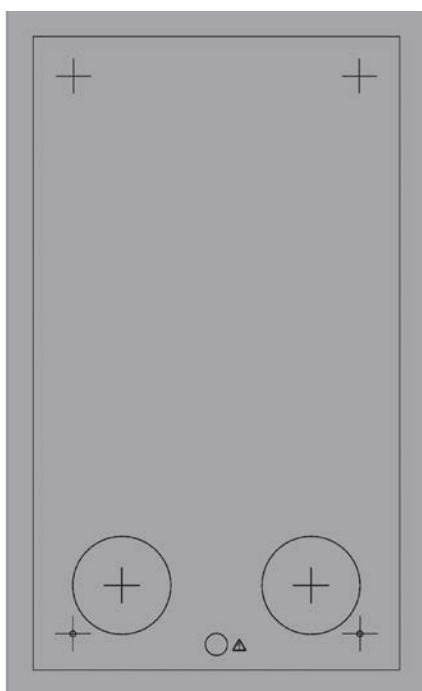


*Mounting template for the LG 100 surface-mounted housing*





### 16.1.3. Structural measures for the installation of the surface-mounted housing

Before the core drilling for the outdoor air and exhaust air duct can be made, mark them using the drilling template supplied. The drilling template for this purpose is provided with markings for the holes of the screws by means of which the surface-mounted housing is fitted as well as an indication of the position for the cable gland.

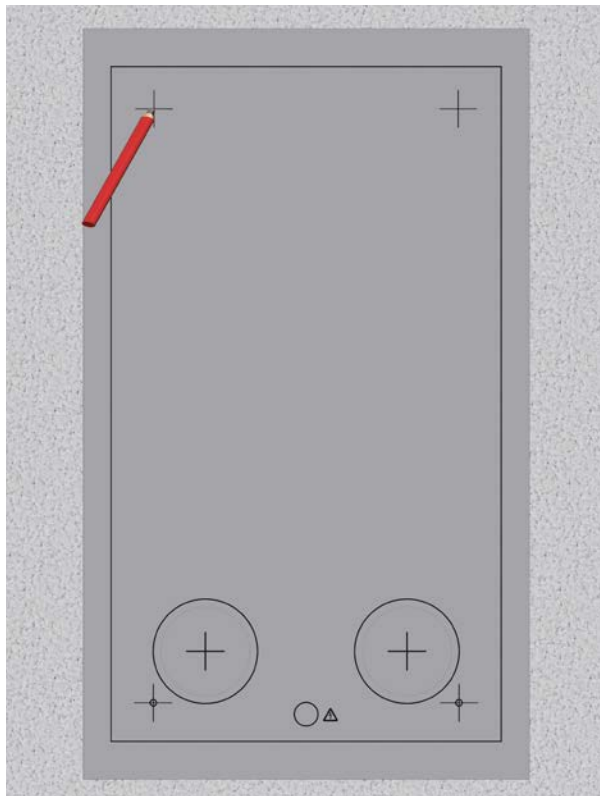


*Placing the markings on the drilling template*




*Drill the holes marked*

Afterwards, drill the corresponding holes using a 142 mm size core drill and insert the screws for fitting the surface-mounted housing.

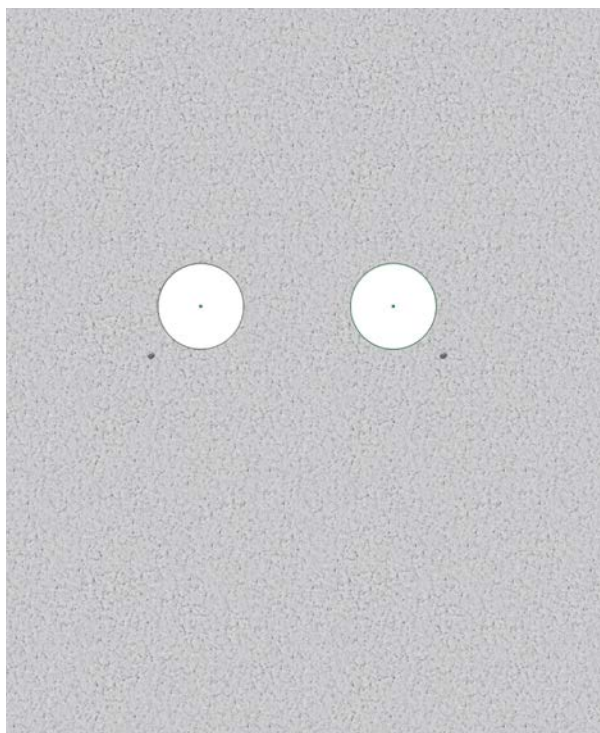


*Drill core drilling and insert screws*

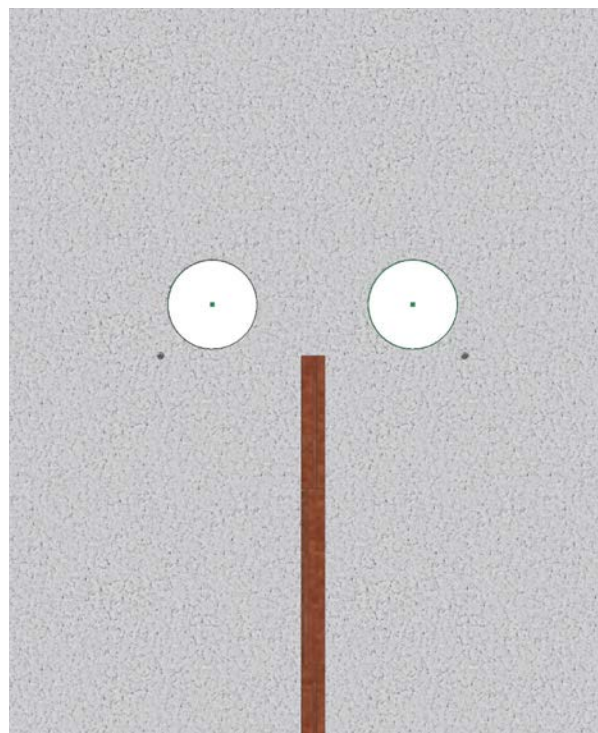


*Mill out the wall groove*



Afterwards, drill the corresponding holes using a 142 mm size core drill and insert the dowels for fitting the surface-mounted housing.

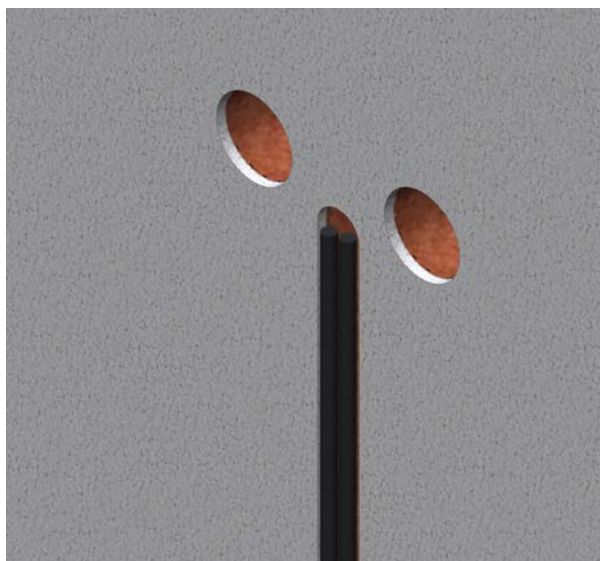

*Mount the conduit*

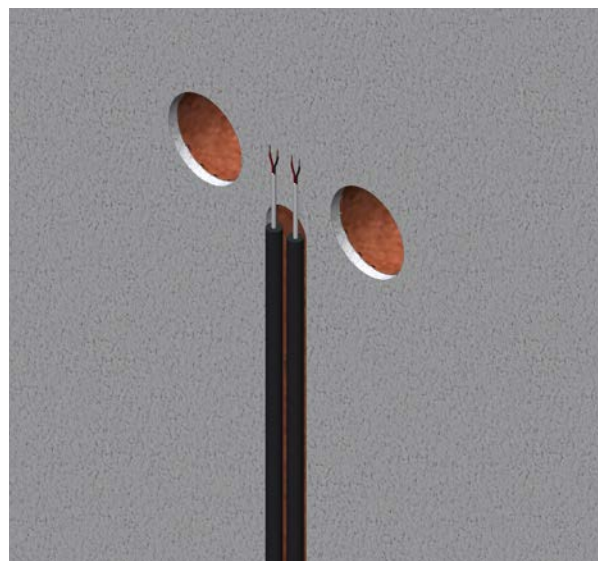

*Draw the cable*



The cable must have a minimum excess length of 50 cm.


## 16.2. Interior work

### 16.2.1. Assembling the outdoor air and exhaust air connections

The optional plastic pipe NW125 with a length of 1 metre must be shortened so that it complies with the wall thickness. If the total wall thickness is more than 50 cm, two plastic pipes have to be used. The outdoor air and exhaust air ducts must be mounted with a slight slope towards the outside.



The pipes must be insulated against the formation of condensation water using self-adhesive, closed-cell foam (e.g. synthetic rubber) and then foam them circumferentially.

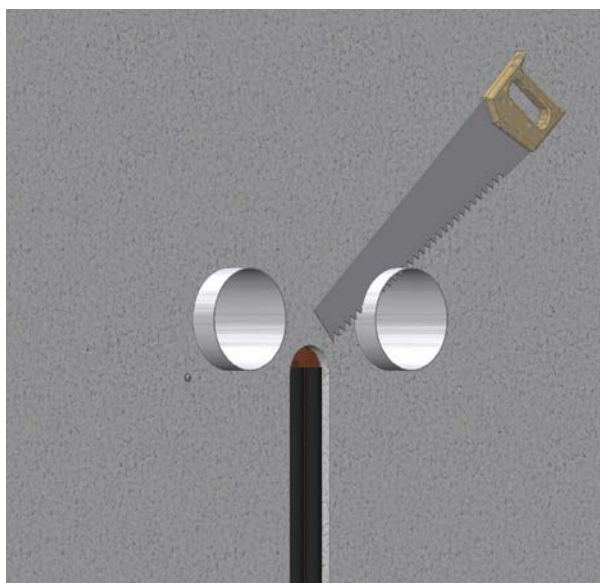

*Insulate plastic pipes and shorten them flush with the wall*




*Foam using assembly foam*






### 16.2.2. Assembly of the surface-mounted housing


The surface-mounted housing is fitted on the screws and is then screwed on.

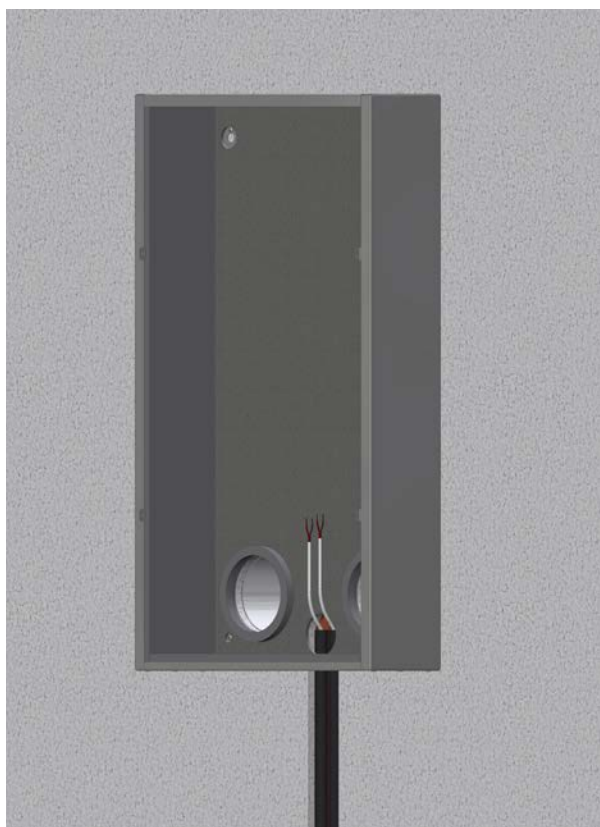

*Fit the surface-mounted housing*

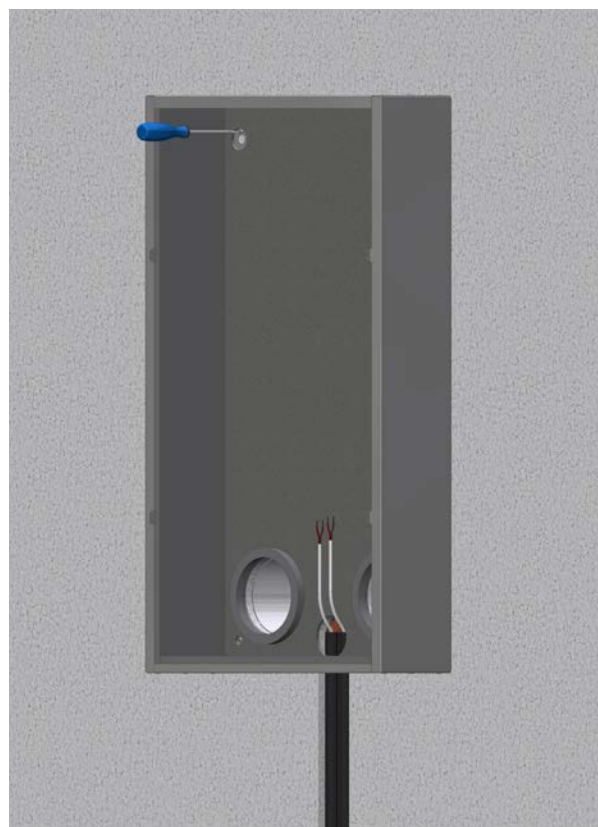

*Screw the surface-mounted housing tight*

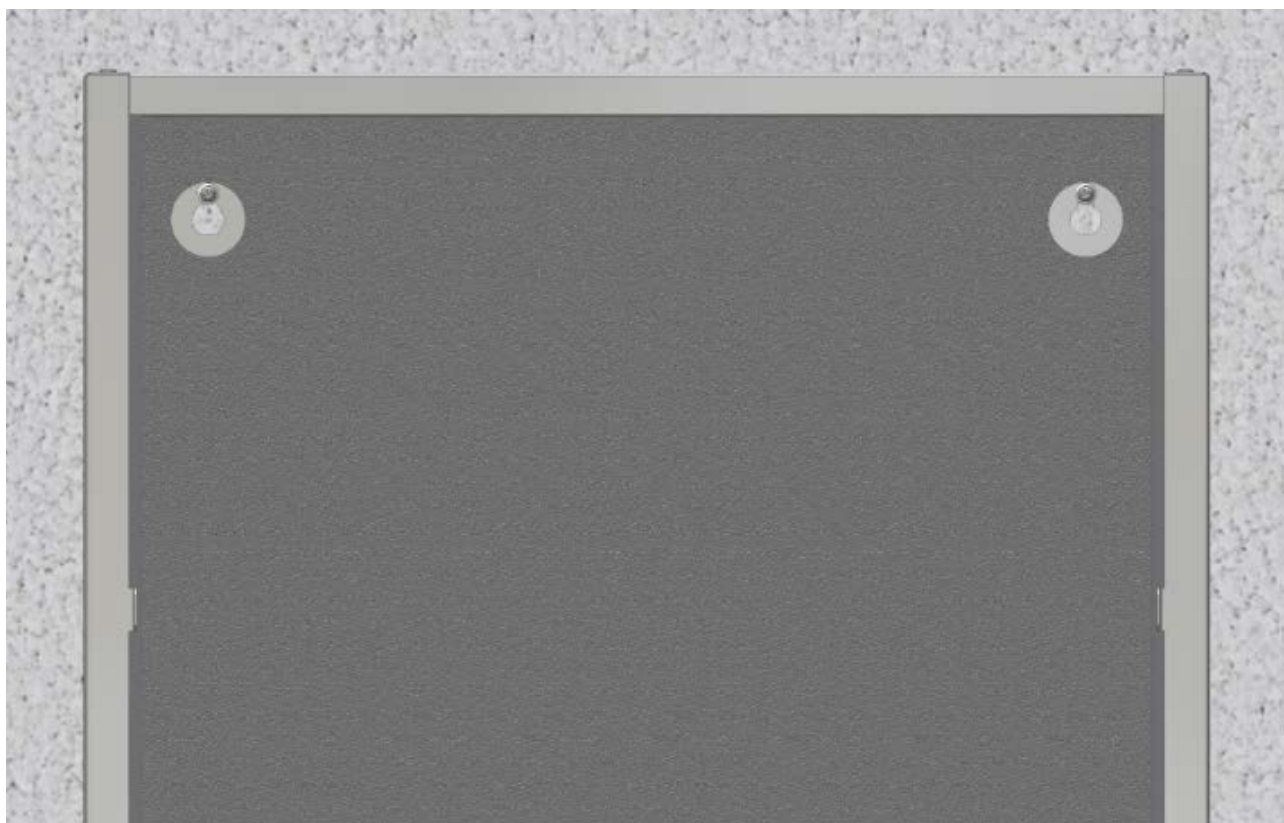

*Screw the surface-mounted housing to the wall*



### 16.2.3. Inserting the slide-in module into the surface-mounted housing



If you use weather protection grilles that can be mounted inside, they should be placed before inserting the slide-in module (for details regarding the procedure, see Section 16.4.1. "Mounting the weather protection grilles"). In the course of assembling the slide-in element in the surface-mounted housing, the electrical connection must be implemented.



*Insert the slide-in module*

### 16.3. Electrical connection



Electrical connection and work on electrical components may only be carried out by authorised electricians.




Before working on the control board, the unit must be isolated from the mains (all poles) and protected from being switched back on.



The domestic ventilation unit LG 100 may be installed and operated appropriately at a fixed electrical installation only, with a separating device for complete isolation in accordance with the conditions of overvoltage category III and the relevant regulations for installation.

In order to be able to implement the electrical connection work, you must disassemble the control housing first.

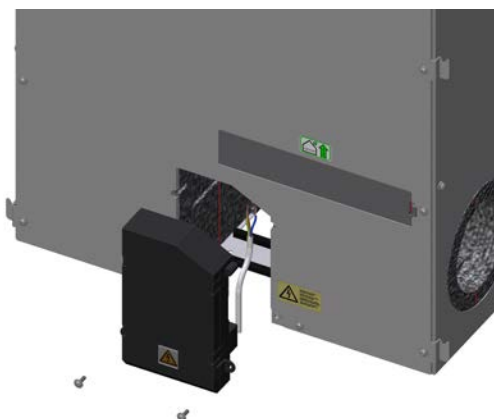


*Disassembly of the control housing*




GENERAL

USER

The strain relief of the mains supply line must be established on the control housing using cable ties.

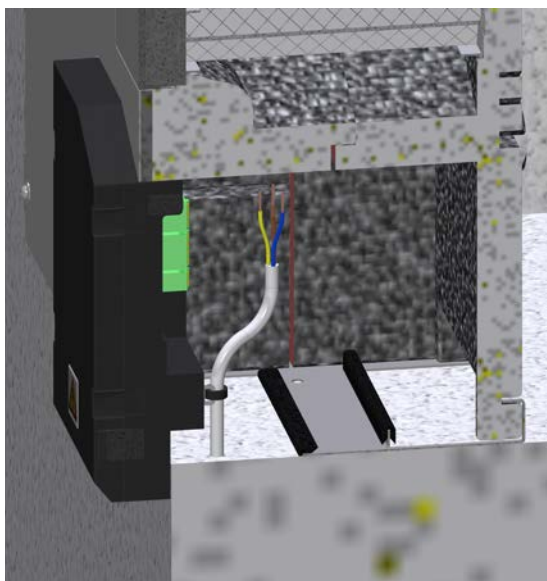


*Disassemble the control housing*

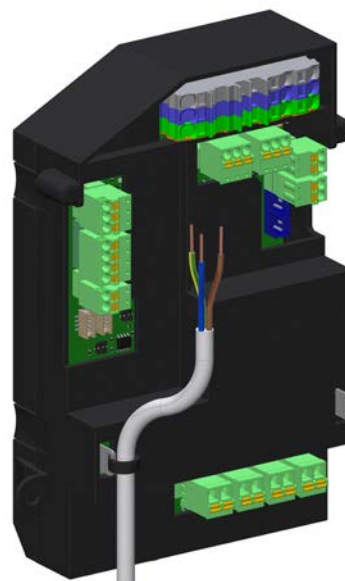

*Fix the mains supply line using cable ties*


Optionally, the ventilation unit can be controlled via the MINI control unit or via modbus RTU (GLT connection). A digital input is provided as "External off" (contact: NC or NO contact) or at "External ventilation level 3" (contact as NO contact), depending on the configuration. The standard setting configured for the digital input is "External ventilation level 3".

 Mini control panel  
(optional)



Modbus GLT

 Digital input  
(ext. stop/ext. LS3)



Strain relief

Mains supply line  
L/N/PE

*Connection diagram*



When the cabling process has been carried out successfully, fit the control housing again.



Afterwards, the slide-in module must be screwed tight to the surface-mounted housing using the 4 screws supplied.



*Completely mounted surface-mounted unit*



*Detailed view*

GENERAL

USER

SPECIALIST PERSONNEL





## 16.4. Exterior work

The circumferential gap between the core drill holes and the outdoor air / exhaust air ducts must be filled with assembly foam.




### 16.4.1. DESIGN OF THE WEATHER PROTECTION GRILLE


Depending on the type, the plastic grilles are fitted from the inside (plastic grille NW 170 folding) or from the outside (plastic grille NW 155) after having applied the façade plaster.

In the case of round weather protection grilles, we recommend inserting the outdoor air grille (in clockwise direction) in a manner slightly slanted to the right and the exhaust air grille (in counter-clockwise direction) in a manner slightly slanted to the left, in order to prevent an air short-circuit.

#### 16.4.1.1. INSTALLATION FROM THE OUTSIDE

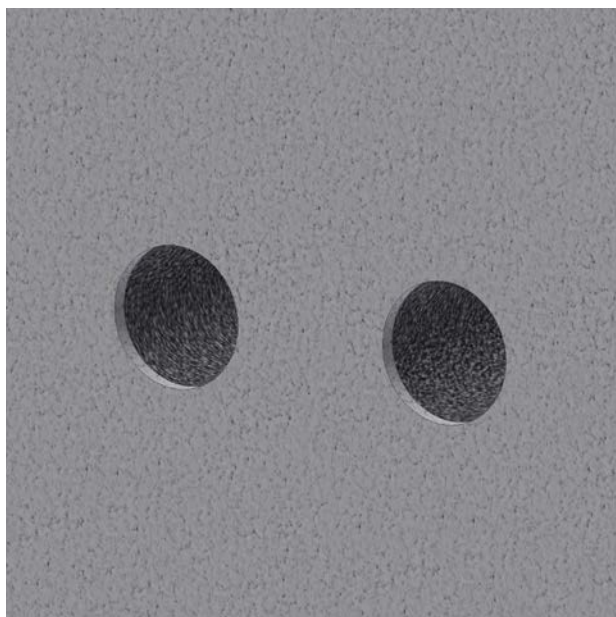

*Exterior wall apertures*

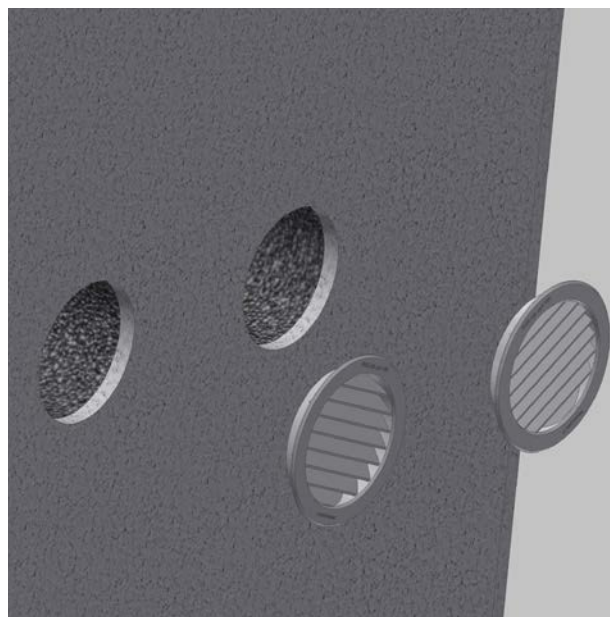

*Fit plastic grille NW 155 from the outside  
in a slightly twisted fashion*







#### 16.4.1.2. INSTALLATION FROM THE INSIDE



*Pass the plastic grille NW170 through the opening*

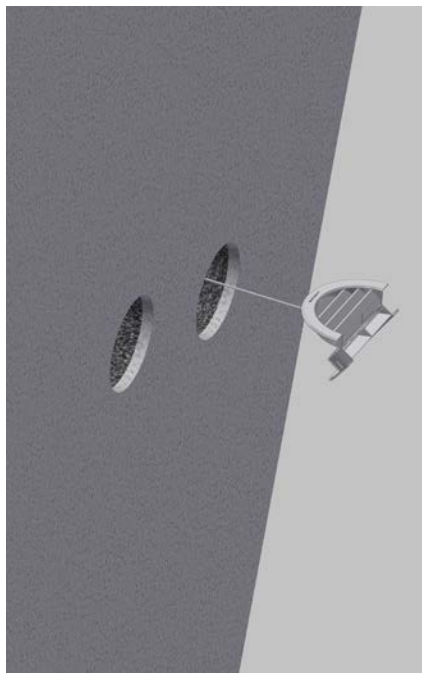


*Open up the grill and draw it back*

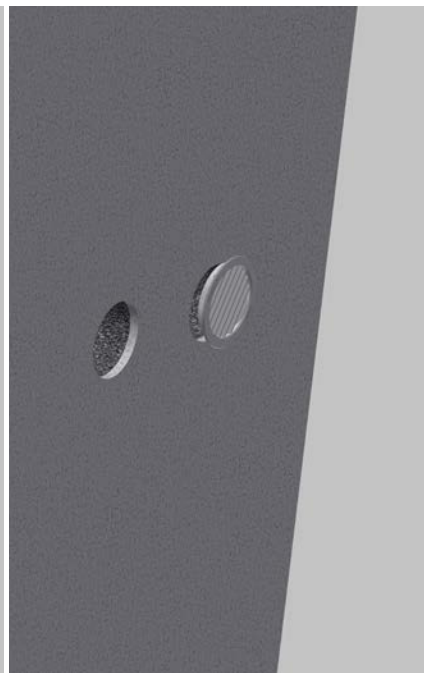

*Fix grille and place safety lanyard into the flush-mounted housing*

#### 16.4.2. Assembly of the design front

In order to close the unit, the design front must be fastened at the retention points of the slide-in module. For this purpose, the cover plate is pressed against the wall and slid into the retention points top down.

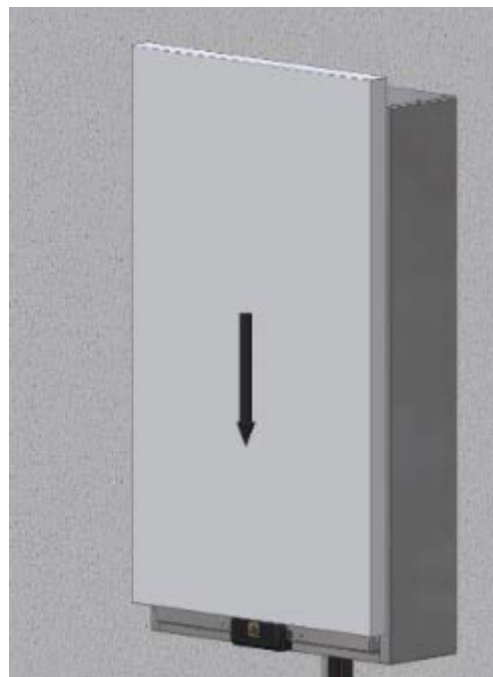

*Installation of the design front - in 2 steps*



In order to ensure that the design front is tight, it has to be fastened properly!



## SPECIALIST PERSONNEL - COMMISSIONING

### 17. Maintenance and cleaning

#### 17.1. Safety instructions



For all cleaning or servicing work on the ventilation unit, always pull the mains plug or fully disconnect the unit from the mains (all poles)!

Further installation and system components must be maintained and cleaned in compliance with specifications and instructions. Be acutely aware of hazards and safety when opening the sealing plate or potential covers. If possible, use a vacuum cleaner to remove dirt and dust. Applying force or using compressed air for cleaning may damage the components and surfaces. Never use aggressive or solvent-containing cleaning agents. The electrical components must not be exposed to moisture or wet conditions. The safety information in Section 5 and in particular the item on electrical connections must be observed when performing any electrical work.

#### 17.2. Maintenance instructions



Only specialists are allowed to carry out the work specified below on the ventilation unit. Any defects detected during servicing must be remedied immediately to ensure safe operation of the unit. Only original spare parts may be used for repairs and replacements.

#### 17.3. Cleaning the enthalpy exchanger

**Annual cleaning** is recommended at the least, depending on the degree of soiling of the enthalpy exchanger. When maintenance work is performed, the enthalpy exchanger must be carefully removed from the unit. Cleaning is carried out by rinsing with warm water (maximum temperature 50 °C). By no means blow through the enthalpy exchanger using compressed air. This might damage the device!

##### 1.) Dismounting the design front:



*Lift the design front*




*Open the sealing plate*

This requires removing the design front and furthermore opening and removing the sealing plate on the screws at the side.



## 2.) Pulling out and cleaning the heat exchanger:

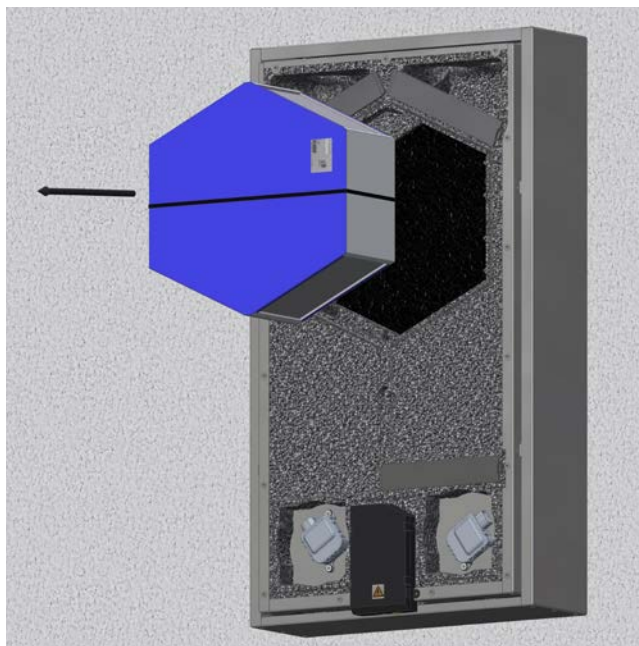


*Remove the heat exchanger*

First loosen the screws, then remove the sealing plate and, in a next step, pull out and clean the heat exchanger. After cleaning, let the heat exchanger dry, insert it again carefully, and mount the sealing plate. The design front can now be remounted.

### 17.4. Cleaning the unit housing

We recommend **cleaning at least once a year**, depending on the level of soiling. Handle the device surface with care when cleaning it. Using excessive force during cleaning can cause damage to the surfaces! Preferably use a cloth or a vacuum cleaner to remove dust. Electrical components may not be exposed to moisture or wet conditions. Be particularly careful not to damage the integrated sensor system and the electronic connecting cables and components.

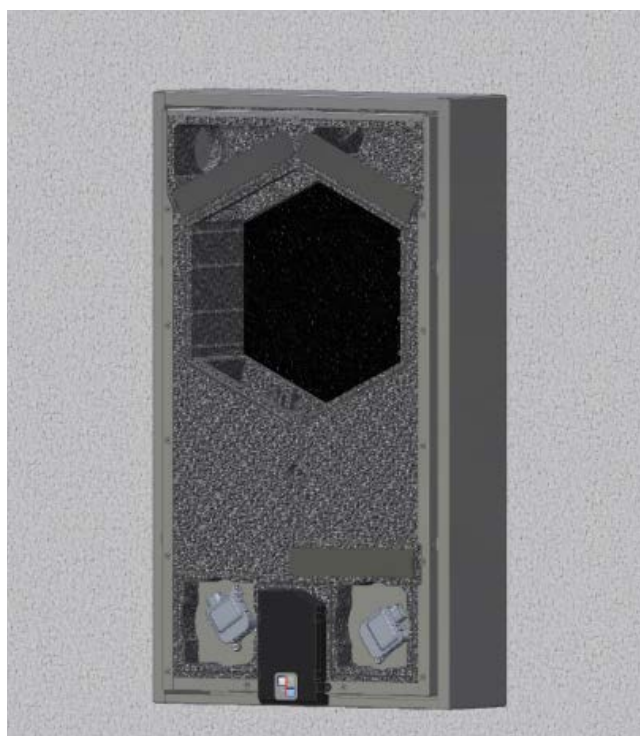

*Device cleaning*



## 17.5. Service table

In order to document maintenance work, this table must be completed after carrying out work on the unit:

System commissioned by:			Date
No.	Maintenance work (e.g. filter change)	Performed by Signature	Date
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			



GENERAL

USER

SPECIALIST PERSONNEL

11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			



## 18. Commissioning



The ventilation system must be complete, connected and ready for operation before it is put into operation for the first time. The unit can be put into operation and system settings can be configured only when all work on the system is complete. The factory settings on the control unit may only be changed by a specialised company. Incorrect settings may cause the unit to malfunction.

Ventilation level	Operating mode	Designation	Factory setting - single-room application
0	Standby mode	Standby mode means that the flaps are closed and the building is not ventilated	No volume flow
1	Reduced ventilation	Operation with a reduced volume flow for minimum ventilation of the building	25 m <sup>3</sup> /h
2	Standard ventilation	Operation with the dimensioned volume flow for normal ventilation of the building	42 m <sup>3</sup> /h
3	Intensive ventilation	Operation with an increased volume flow, boost ventilation for short, intensive ventilation of the building	60 m <sup>3</sup> /h
4	Automatic	Operation with demand-oriented control via VOC- sensor	25 - 60 m <sup>3</sup> /h

### 18.1. Basic questions with regard to commissioning

- Are all air ducts and components fully installed and airtight?
- Are all system components fitted and electrically connected?
- Is the electric wiring complete and the control unit fitted?
- Is the control unit provided with a proper electrical connection?

### 18.2. Setting system parameters

- Check system components and correct settings where necessary.
- Set system parameters, e.g. adjust volume flow/ventilation level.
- Configure system extensions correctly.



## 19. Error description

### 19.1. Error description for the MINI control unit

Error descriptions are provided for the corresponding light patterns in the following table.  
Errors can be located precisely using the service software (available to specialist personnel only).

Pattern	Error
Error LED flashes 1x	Z04, Z05 (fan error)
Error LED flashes 2x	Z06 - Z13 (combi sensor error)
Error LED flashes 3x	Z14, Z15 (sensor error)
Error LED flashes 4x	Z17, Z18 (flap error)
Error LED flashes 5x	Z02, Z03 (data transmission error)
Error LED flashes 6x	Z19, Z20, Z21 (risk of frost)
Error LED flashes 7x	Z01 (no Internet connection possible)
Filter LED flashes	Z16 (filter message)

Error	Description
Z01	No Internet connection possible
Z02	Communication of combi sensor 1
Z03	Communication of combi sensor 2
Z04	Exhaust air fan blocked (speed monitoring)
Z05	Outdoor air fan blocked (speed monitoring)
Z06	Combi sensor 1: T1 - outdoor air
Z07	Combi sensor 1: volume flow - outdoor air
Z08	Combi sensor 1: relative humidity - outdoor air
Z09	Combi sensor 1: VOC/CO2 sensor - outdoor air
Z10	Combi sensor 2: T2 - exhaust air
Z11	Combi sensor 2: volume flow - exhaust air
Z12	Combi sensor 2: relative humidity - exhaust air
Z13	Combi sensor 2: VOC/CO2 sensor - exhaust air
Z14	T3 - extract air
Z15	T4 - supply air
Z16	Replace air filters
Z17	Outdoor air flap (current monitoring)
Z18	Exhaust air flap (current monitoring)
Z19	No power output from preheating battery
Z20	Risk of frost
Z21	Risk of condensation



## 19.2. Error description for the unit

Error descriptions are provided for the corresponding light patterns in the following table.  
Errors can be located precisely using the service software (available to specialist personnel only).

Pattern	Error
Red LED flashes once	Z04, Z05 (fans)
Red LED flashes twice	Z06 - Z013 (invalid values of combi sensors)
Red LED flashes 3 times	Z14, Z15 (thermal sensor)
Red LED flashes 4 times	Z17, Z18 (flaps)
Red LED flashes 5 times	Z02, Z03 (communication of combi sensors)
Red LED flashes 6 times	Z19, Z20, Z21 (hazard of frost or condensate formation)
Red LED flashes 7 times	Z01 (no Internet connection)
Green and red LEDs flash alternately	Z16 (filter message)

Error	Description
Z01	No Internet connection possible
Z02	Communication of combi sensor 1
Z03	Communication of combi sensor 2
Z04	Exhaust air fan blocked (speed monitoring)
Z05	Outdoor air fan blocked (speed monitoring)
Z06	Combi sensor 1: T1 - outdoor air
Z07	Combi sensor 1: volume flow - outdoor air
Z08	Combi sensor 1: relative humidity - outdoor air
Z09	Combi sensor 1: VOC/CO2 sensor - outdoor air
Z10	Combi sensor 2: T2 - exhaust air
Z11	Combi sensor 2: volume flow - exhaust air
Z12	Combi sensor 2: relative humidity - exhaust air
Z13	Combi sensor 2: VOC/CO2 sensor - exhaust air
Z14	T3 - extract air
Z15	T4 - supply air
Z16	Replace air filters
Z17	Outdoor air flap (current monitoring)
Z18	Exhaust air flap (current monitoring)
Z19	Pre-heating battery has no power
Z20	Risk of frost
Z21	Risk of condensation

## 20. Installation/operation of service software and firmware updates

The control unit must be connected to a laptop via the micro-USB cable or a WLAN connection with the unit must be established in order to perform troubleshooting. To ensure a stable WLAN connection of the LG 100 it may be required to boost the WLAN signal by using WLAN repeaters or to establish a mesh network.

Further information on installation/operation of service software and firmware updates is available from certified partners on request.

**Service hotline:** +43 (0)463 32769-290

**Email:** service@pichlerluft.at





## 21. Spare parts and accessories



Only original spare parts may be used for repair and replacement work. Dependable operation is ensured only if original spare parts are used!

### 21.1. Control elements

Designation	Item number
OPTIONALLY: MINI control unit for LG 100	08LGMINI100
Shielded connecting cable J-Y(ST)Y 2 x 2 x 0.8	40LG040340

### 21.2. Air filter

Designation	Item number
ODA/ETA filter ISO Coarse 70% for the outdoor air and extract air	40LG0500006A
SUP filter ISO ePM1 55% for the supply air	40LG0500007A

### 21.3. Gateway

Designation	Item number
MODBUS/KNX-GATEWAY	08KNXGAB

## 22. Changes reserved

It is our constant endeavour to technically improve and optimise our products and we reserve the right to change the design of the units or the technical specifications without prior notice.



## 23. EC Declaration of Conformity

**Hersteller / Manufacturer:** J. Pichler Gesellschaft m.b.H.  
**Anschrift / Address:** Karlweg 5  
 A-9021 Klagenfurt am Wörthersee  
**Bezeichnung / Product description:** Dezentrales Kompaktlüftungsgerät mit integrierter Steuerung  
**Ausführungen / Type:** LG 100 UP / LG 100 AP / LG100 DE  
 mit Bedieneinheit MINI

**Die bezeichneten Produkte stimmen in der von uns in Verkehr gebrachten Ausführung mit den Vorschriften folgender europäischen Richtlinien überein:**

*The products described above in the form as delivered are in conformity with the provisions of the following European Directives:*

- 2014/35/EU** Zur Harmonisierung der Rechtsvorschriften der Mitgliedsstaaten über die Bereitstellung elektrischer Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen auf dem Markt  
*On the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits*
- 2014/30/EG** Zur Harmonisierung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit  
*On the harmonisation of the laws of the Member States relating to electromagnetic compatibility*
- 2009/125/EG** Richtlinie des Europäischen Parlaments und des Rates zur Angleichung der Rechtsvorschriften der Mitgliedsstaaten zur Schaffung eines Rahmens für die Festlegung von Anforderungen an die umweltgerechte Gestaltung energieverbrauchsrelevanter Produkte  
*Council Directive on the approximation of the laws of the Member States establishing a framework for the setting of ecodesign requirements for energy-related products*

**Die Konformität mit den Richtlinien wird nachgewiesen durch die Einhaltung folgender Normen und Verordnungen:**

*Conformity to the Directives is assured through the application of the following standards and regulations:*

**VO 1253/2014/EU Verordnung (EU) der Kommission zur Durchführung der Richtlinie 2009/125/EG des Europäischen Parlaments und des Rates hinsichtlich der Anforderungen an die umweltgerechte Gestaltung von Lüftungsanlagen**  
**COMMISSION REGULATION (EU) implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for ventilation units**

**VO 1254/2014/EU zur Ergänzung der Richtlinie 2010/30/EU des Europäischen Parlaments und des Rates im Hinblick auf die Kennzeichnung von Wohnraumlüftungsgeräten in Bezug auf den Energieverbrauch**  
**VO 1254/2014/EU supplementing Directive 2010/30/EU of the European Parliament and of the Council with regard to energy labelling of residential ventilation units**

DIN EN 60335-1:2012-10 + Ber.1:2014-04 + Ber.2:2014-11+Bbl.1:2016-06+A13:2018-07  
 DIN EN 60335-2-40:2014-01  
 ETSI EN 301 489-1 V2.1.1:2017-02  
 ETSI EN 301 489-17 V3.1.1:2017-02  
 EN IEC 61000-3-2:2019-03  
 EN 61000-3-3:2013-08  
 EN 62233:2008-04  
 EN 55014-1:2017-04  
 EN 55014-2:2015-04

**Eine vom Lieferzustand abweichende Veränderung des Gerätes führt zum Verlust der Konformität.**

*Product modifications after delivery may result in a loss of conformity.*

**Diese Erklärung bescheinigt die Übereinstimmung mit den genannten Richtlinien, ist jedoch keine Zusicherung von Eigenschaften. Die Sicherheitsinformationen der mitgelieferten Produktdokumentation sind zu beachten.**

*This declaration certifies the conformity to the specified directives but contains no assurance of properties. The safety documentation accompanying the product shall be considered in detail.*

J. Pichler Gesellschaft m.b.H.  
 Geschäftsleitung / General Manager

Klagenfurt, am 16. Juni 2020



## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

SPECIALIST PERSONNEL



**ErP 2018**

Fulfills the requirements of the Ecodesign Directive in accordance with EU Regulation 1253/2014.

**EPREL**

Our LG 100 compact ventilation unit is listed in the European Product Database for Energy Labelling (EPREL).



*Responsible for the content* J. PICHLER Gesellschaft m.b.H.

*Photos:* Ferdinand Neumüller, archive J. PICHLER Gesellschaft m.b.H. | *Text:* J. PICHLER Gesellschaft m.b.H.  
All rights reserved | All photos Symbol photos | Subject to change without notice | *Version:* 05/2024 eh



*Systematic ventilation.*

**J. PICHLER**  
Gesellschaft m.b.H.

office@pichlerluft.at  
www.pichlerluft.at

**AUSTRIA**  
**9021 KLAGENFURT**  
**AM WÖRTHERSEE**  
Karlweg 5  
T +43 (0)463 32769  
F +43 (0)463 37548

**AUSTRIA**  
**1100 WIEN**  
Doerenkampgasse 5  
T +43 (0)1 6880988  
F +43 (0)1 6880988-13

Sales offices  
in Slovenia and Serbia.  
Sales partner in Europe.

