

OPERATING AND INSTALLATION MANUAL FLUSH-MOUNTED UNIT LG 100 UP



EU-regulation
1253/2014



EPREL



**COMFORT
VENTILATION**

 **PICHLER**

Systematic ventilation.

Contents

GENERAL

1. Introduction

Page 4

2. General

Page 4

USERS

2.1. VERSION

PAGE 5

2.1.1. SINGLE-ROOM APPLICATION

PAGE 5

2.1.2. MULTI-ROOM APPLICATION

PAGE 6

2.2. INSTALLATION VARIANT WITH CONNECTION TO THE REVEAL

PAGE 7

2.2.1. SINGLE-ROOM APPLICATION

PAGE 7

2.2.2. MULTI-ROOM APPLICATION

PAGE 8

2.3. OVERVIEW OF COMPONENTS

PAGE 9

3. Functionality of the ventilation system

Page 9

4. Designated use

Page 9

4.1. INTENDED USE

PAGE 9

4.1.1. STIPULATIONS FOR OPERATION WITH FIREPLACES

PAGE 10

4.1.2. STIPULATIONS FOR OPERATION WITH EXTRACTOR HOODS

PAGE 10

4.1.3. LIABILITY

PAGE 10

4.1.4. WARRANTY

PAGE 11

5. Safety

Page 11

5.1. SYMBOLS USED IN THIS DOCUMENT

PAGE 11

5.2. SAFETY REGULATIONS

PAGE 12

5.3. SETTING UP THE UNIT

PAGE 12

5.4. ELECTRICAL CONNECTION WORK

PAGE 12

5.5. PLANT OPERATION

PAGE 13

6. Customer service

Page 14

7. Design of the ventilation unit

Page 14

8. How to operate the unit

Page 15

9. MINI control unit

Page 16

9.1. FUNCTIONS

PAGE 16

9.2. BUTTONS AND LEDS

PAGE 16

10. Operation via PICHLER APP and PICHLER Connect

Page 17

10.1. EASY OPERATION WITH THE PICHLER APP

PAGE 17

10.2. REMOTE ACCESS WITH PICHLER CONNECT

PAGE 17

10.3. DATA PROTECTION

PAGE 17

10.4. CREATE AN ACCOUNT

PAGE 18

11. Error & warning messages

Page 20

11.1. LED ON THE VENTILATION UNIT

PAGE 20

11.2. MINI CONTROL UNIT

PAGE 20

11.3. PICHLER APP

PAGE 20

12. Filter service

Page 21

12.1. MINI CONTROL UNIT FILTER MESSAGE

PAGE 21

12.1.1. CLEARING THE MINI CONTROL UNIT FILTER MESSAGE

PAGE 21

12.2. FILTER MESSAGE ON THE UNIT

PAGE 21

12.3. FILTER MESSAGE VIA PICHLER APP

PAGE 21

12.4. FILTER CHANGE

PAGE 22

12.5. PROCEDURE FOR THE FILTER CHANGE

PAGE 22



SPECIALIST PERSONNEL - ASSEMBLY/INSTALLATION

13. Transport, storage and disposal

- 13.1. TRANSPORT, STORAGE AND PACKAGING
- 13.2. DISPOSAL

14. Technical specifications

- 14.1. UNIT SET-UP AND DIMENSIONS
- 14.2. SYSTEM DIAGRAM
- 14.3. SAFETY DEVICES
- 14.4. DEVICE DATA
- 14.5. SOUND DATA

15. Control

- 15.1. FROST PROTECTION WITH PREHEATING BATTERY
- 15.2. MOISTURE PROTECTION
- 15.3. FROST PROTECTION WITHOUT A PREHEATING BATTERY
- 15.4. VOC/ECO2 CONTROL
- 15.5. OUTDOOR AIR QUALITY CONTROL
- 15.6. SERVICE LEVEL OPERATION VIA APP

16. Mounting

- 16.1. INSTALLATION OF THE SLIDE-IN MODULE IN THE FLUSH-MOUNTED HOUSING
- 16.2. ELECTRICAL CONNECTION
- 16.3. ADJUSTING THE AIR REGULATION SHEETS
 - 16.3.1. SINGLE-ROOM APPLICATION
 - 16.3.2. MULTI-ROOM APPLICATION
- 16.4. INSTALLATION OF THE DESIGN FRONT

SPECIALIST PERSONNEL - COMMISSIONING

17. Maintenance and cleaning

- 17.1. SAFETY INSTRUCTIONS
- 17.2. MAINTENANCE INSTRUCTIONS
- 17.3. ENTHALPY EXCHANGER
- 17.4. CLEANING THE EQUIPMENT HOUSING INSIDE
- 17.5. SERVICE TABLE

18. Commissioning

- 18.1. BASIC QUESTIONS FOR COMMISSIONING
- 18.2. SETTING SYSTEM PARAMETERS

19. Error description

- 19.1. DESCRIPTION OF ERRORS INDICATED BY THE MINI CONTROL UNIT
- 19.2. DESCRIPTION OF ERRORS INDICATED BY THE VENTILATION UNIT

20. Installation/operation of service software and firmware updates

21. Spare parts and accessories

- 21.1. CONTROL ELEMENTS
- 21.2. AIR FILTERS
- 21.3. GATEWAY

22. Changes reserved

23. EC Declaration of Conformity

Page 24

- PAGE 24
- PAGE 24

Page 25

- PAGE 25
- PAGE 26
- PAGE 27
- PAGE 27
- PAGE 28

Page 29

- PAGE 29
- PAGE 29
- PAGE 29
- PAGE 30
- PAGE 30
- PAGE 30

Page 31

- PAGE 31
- PAGE 35
- PAGE 37
- PAGE 37
- PAGE 38
- PAGE 39

Page 40

- PAGE 40
- PAGE 40
- PAGE 40
- PAGE 41
- PAGE 42

Page 44

- PAGE 44
- PAGE 44

Page 45

- PAGE 45
- PAGE 46

Page 46

Page 47

- PAGE 47
- PAGE 47
- PAGE 47

Page 47

Page 48

GENERAL

USERS

SPECIALIST PERSONNEL



1. Introduction

Dear customer,

Thank you for choosing the decentralised compact ventilation unit LG100 from PICHLER.

To operate your compact ventilation unit safely, properly and economically, please read this manual carefully and follow the instructions provided. Keep this operating manual in a safe place and readily available at all times. These units are subject to ongoing improvement and further development. Your unit may therefore vary slightly from the description in this manual.

Use the ventilation unit only when in perfect condition and for its designated use, be aware of safety and any hazards and cognisant of all the notes and information contained in this manual.



J. Pichler
Gesellschaft m.b.H.

AUSTRIA 9021
KLAGENFURT
Karlweg 5
T +43 (0) 463 32769
www.pichlerluft.at



Equipment type: 08LG100DEFV
Volume flow: max. 80 m³/h
Dimensions WxHxD: 599x945x203 mm
Voltage/frequency: 230 V / 50 Hz
Power consumption: max. 320 W
Order number:
Serial number:

Year of manufacture:
Weight: approx. 35 kg



*Compact ventilation unit LG100 ceiling variant with
preheating battery*



J. Pichler
Gesellschaft m.b.H.

AUSTRIA 9021
KLAGENFURT
Karlweg 5
T +43 (0) 463 32769
www.pichlerluft.at



Equipment type: 08LG100APFV
Volume flow: max. 60 m³/h
Dimensions WxHxD: 525x910x203 mm
Voltage/frequency: 230 V / 50 Hz
Power consumption: max. 320 W
Order number:
Serial number:

Year of manufacture:
Weight: approx. 25 kg



*Compact ventilation unit LG100 surface-mounted variant with
preheating battery*



J. Pichler
Gesellschaft m.b.H.

AUSTRIA 9021
KLAGENFURT
Karlweg 5
T +43 (0) 463 32769
www.pichlerluft.at



Equipment type: 08LG100UPFV
Volume flow: max. 80 m³/h
Dimensions WxHxD: 504x882x192 mm
Voltage/frequency: 230 V / 50 Hz
Power consumption: max. 320 W
Order number:
Serial number:

Year of manufacture:
Weight: approx. 15 kg



*Compact ventilation unit LG100 flush-mounted variant
with preheating battery*

Please always keep the model and serial number (see name-plate on unit) at hand in the case of queries or when ordering spare parts.

Please contact us if you have any further questions or if you lose this documentation.

Your PICHLER team



J. Pichler Gesellschaft m.b.H.

9021 KLAGENFURT
Karlweg 5, Postfach 32
T +43 (0)463 32769

2. General

This manual contains notes and information on safe operation and proper installation of the decentralised compact ventilation unit LG 100 and on its use and servicing. Furthermore, reference this manual during servicing to ensure proper execution of the tasks.

Troubleshooting and procedures may be performed by an installation company (specialist company) only.

Changes reserved: This manual has been compiled with the utmost care. This does not, however, imply any rights. Your unit may therefore vary slightly from the description in this manual.

Our "General terms and conditions" in their latest version apply.




2.1. Version

2.1.1. SINGLE-ROOM APPLICATION

The compact ventilation unit LG100 in flush-mounted design consists of a flush-mounted housing (3) and a ventilation unit as slide-in module (2).

The ventilation unit is closed with a design front (1) at its front side. The outdoor air and exhaust air connections are led outside through a wall duct (5). On the rear side of the housing the compensation plate (4) still has to be mounted. The outdoor air and exhaust air connections are sealed by means of weather protection grilles (6a or 6b).

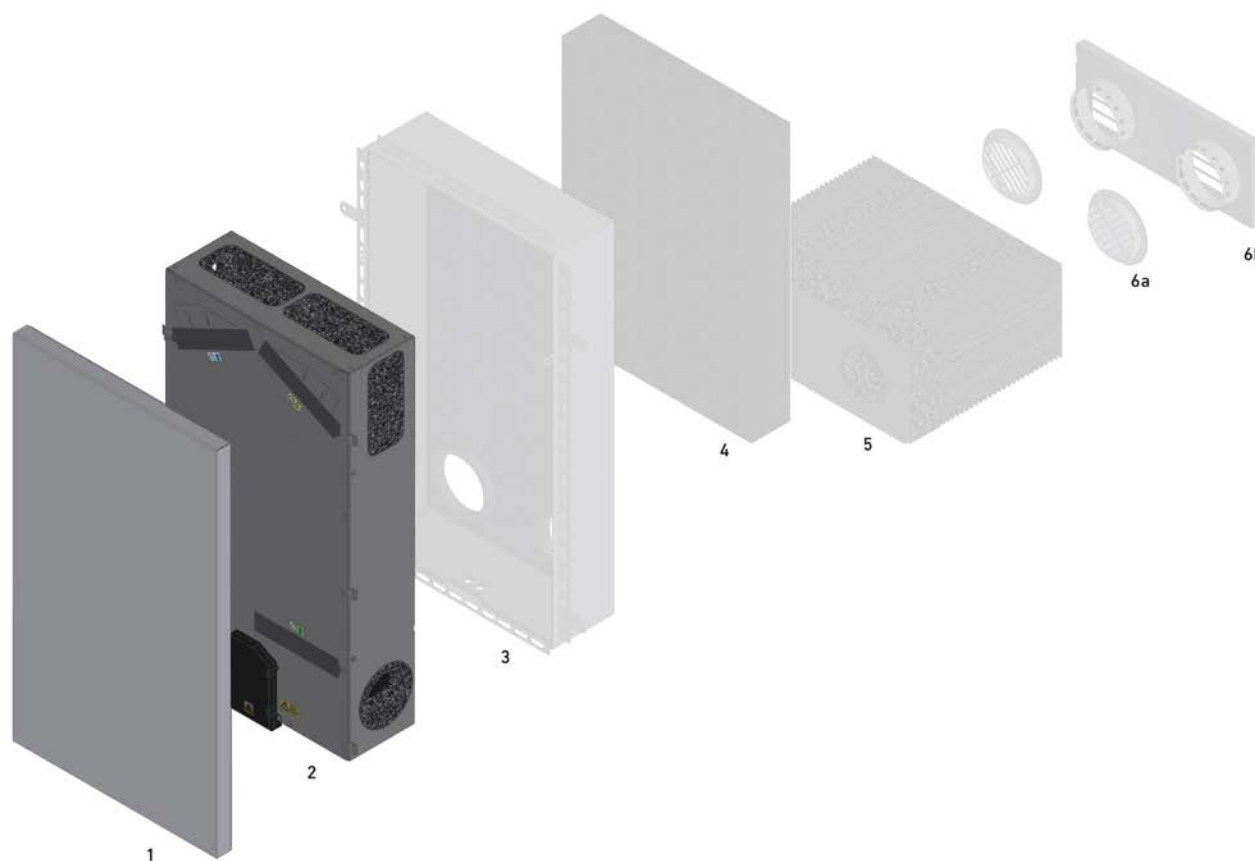

Single-room application

In the shell construction phase, the flush-mounted housing (3) including the compensation plate (4) and wall duct (5) is mounted. In the course of the installation work, the slide-in module (2) is inserted into the flush-mounted housing (3) and is electrically connected.




3, 4, 5, 6a and 6b are not dealt with in this installation manual.



2.1.2. MULTI-ROOM APPLICATION

The compact ventilation unit LG100 in flush-mounted design consists of a flush-mounted housing (3) with pre-assembled connectors and a ventilation unit as slide-in module (2).

The ventilation unit is closed with a design front (1) at its front side. The outdoor air and exhaust air connections are led outside through a wall duct (5). On the rear side of the housing the compensation plate (4) has to be mounted. The outdoor air and exhaust air connections are sealed by means of weather protection grilles (6a or 6b).

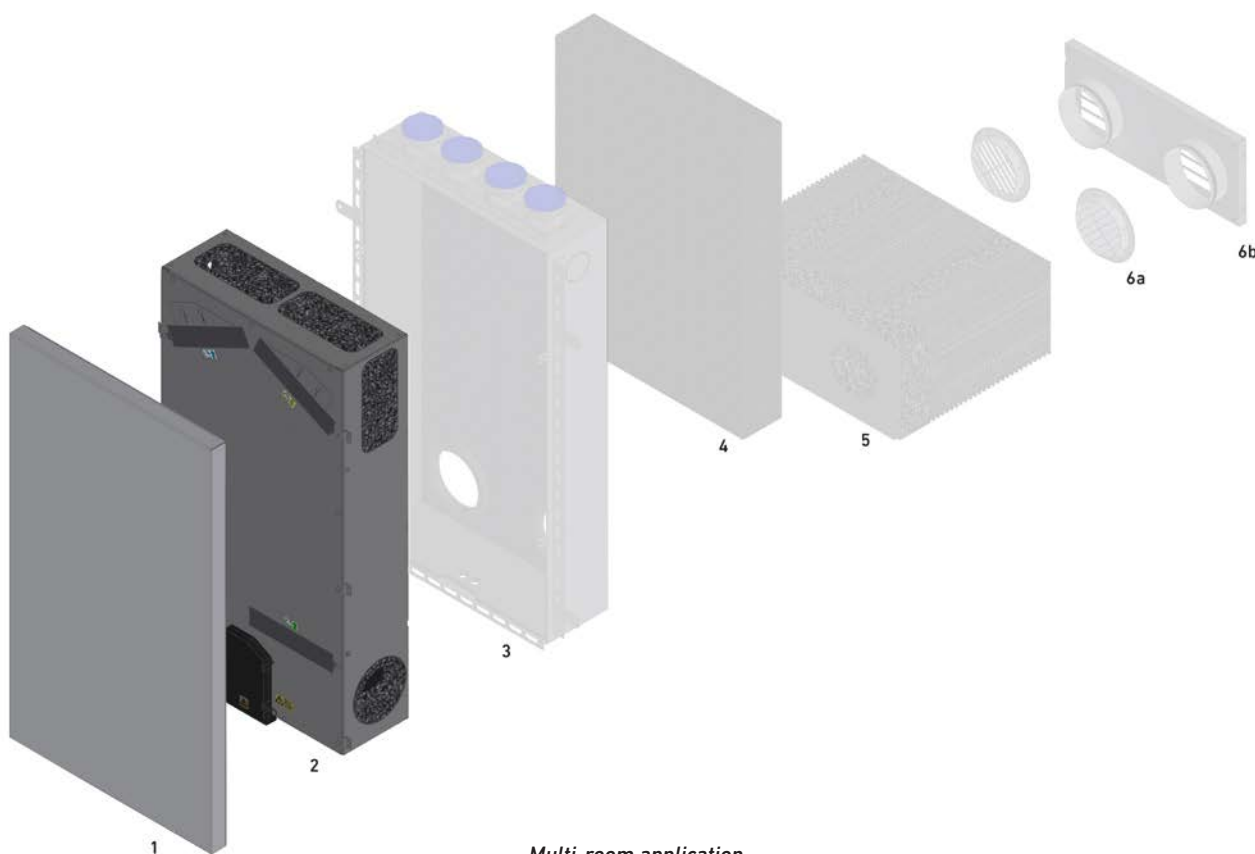

Multi-room application

In the shell construction phase, the flush-mounted housing (3) including the compensation plate (4) and wall duct (5) is mounted.

For multi-room applications, the piping leading upwards for the supply and extract air is provided in addition. In the course of the installation work, the slide-in module (2) is inserted into the flush-mounted housing (3) and is electrically connected.



3, 4, 5, 6a and 6b are not dealt with in this installation manual.




2.2. Installation variant with connection to the reveal

2.2.1. SINGLE-ROOM APPLICATION

The compact ventilation unit LG100 in flush-mounted design for reveals consists of a flush-mounted housing (3) and a ventilation unit as slide-in module (2).

The ventilation unit is closed with a design front (1) at its front side. The outdoor air and exhaust air connections are led outside through a wall duct (4) and must be flush with the masonry. The wall duct is connected to the connection set (6) and led towards the reveal. The outdoor and exhaust air connections are sealed by means of a weather protection grille (7).

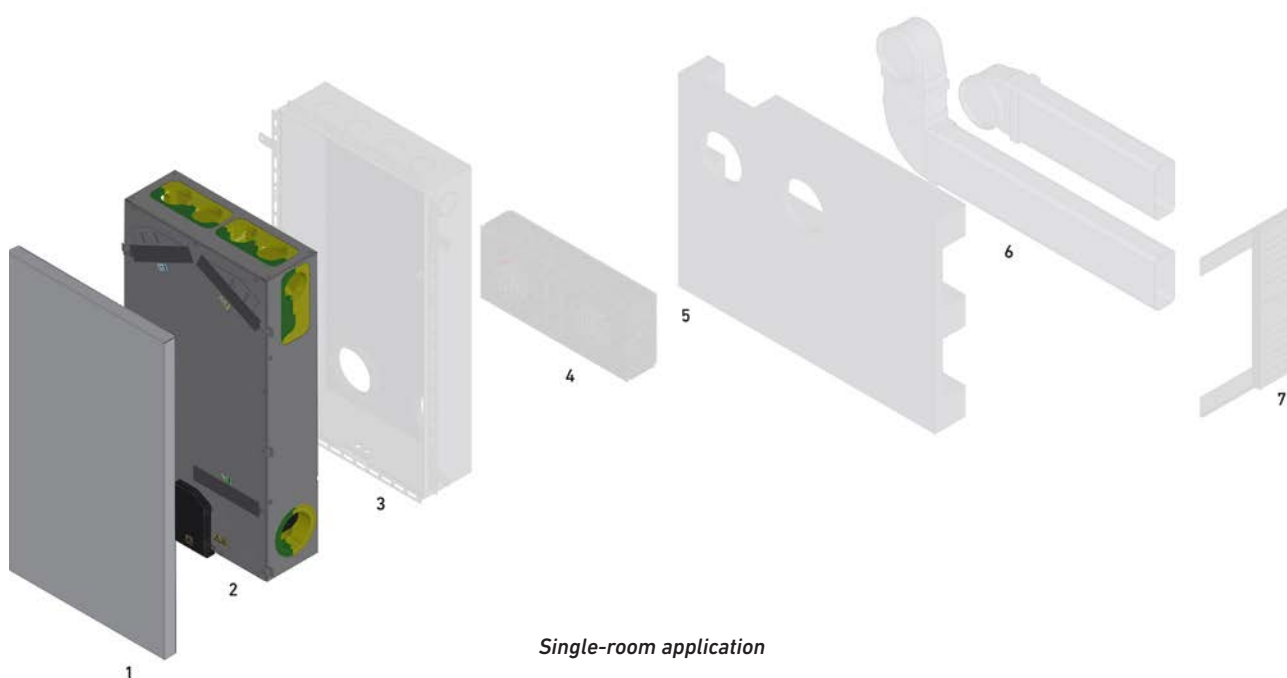

In the shell construction phase, the flush-mounted housing (3) including the wall duct (4) is mounted.

The connection set (6) is mounted in the process of insulating the exterior walls and integrated into the insulation. In the course of the installation work, the slide-in module (2) is inserted into the flush-mounted housing (3) and is electrically connected.




3, 4, 5, 6 and 7 are not dealt with in this installation manual.



2.2.2. MULTI-ROOM APPLICATION

The compact ventilation unit LG100 in flush-mounted design for reveals consists of a flush-mounted housing (3) with pre-assembled connectors and a ventilation unit as slide-in module (2).

The ventilation unit is closed with a design front (1) at its front side. The outdoor air and exhaust air connections are led outside through a wall duct (4) and must be flush with the masonry. The wall duct is connected to the connection set (6) and led towards the reveal. The outdoor and exhaust air connections are sealed by means of a weather protection grille (7).

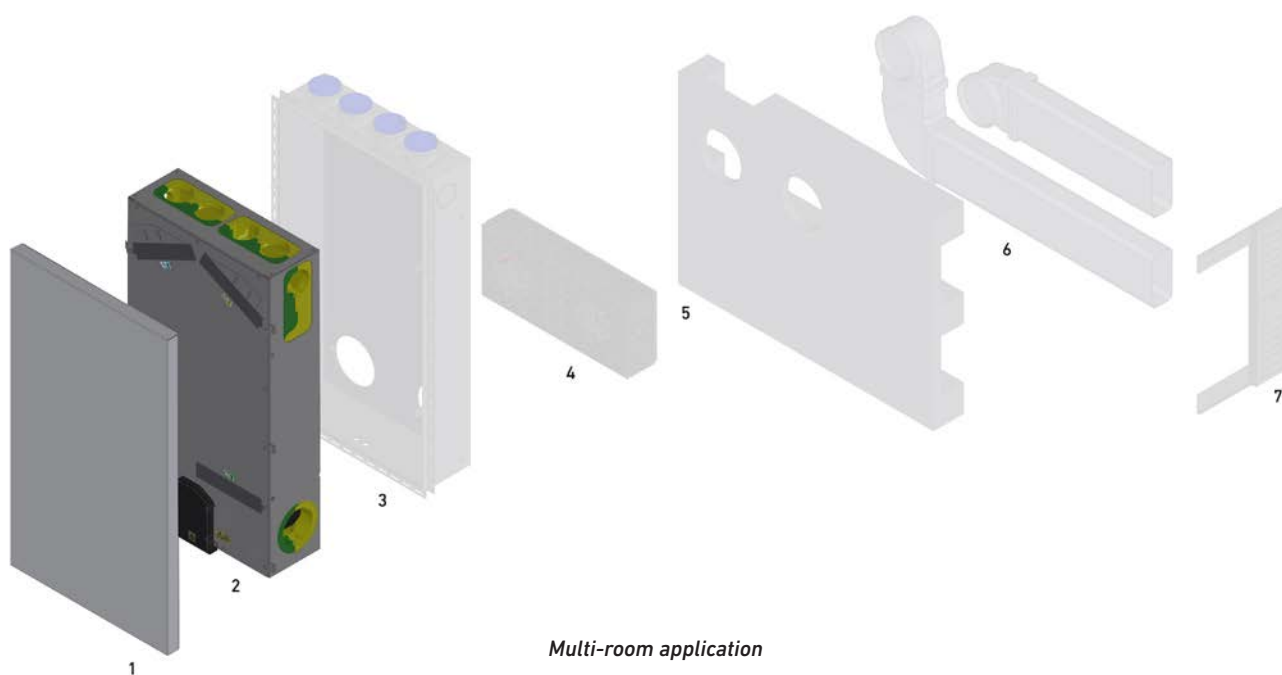

In the shell construction phase, the flush-mounted housing (3) including the wall duct (4) is mounted.



For multi-room applications, the piping leading upwards for the supply and extract air is provided in addition. The connection set (6) is mounted in the process of insulating the exterior walls and integrated into the insulation. In the course of the installation work, the slide-in module (2) is inserted into the flush-mounted housing (3) and is electrically connected.



3, 4, 5, 6 and 7 are not dealt with in this installation manual.



2.3. Overview of components

Komponentenübersicht		
Bezeichnung	Artikelnummer	Skizze
Scope of supply Slide-in module and design front	Slide-in module with preheating battery 08LG100UPF Slide-in module without preheating battery 08LG100UPFV	
	Standard design front 08LG100UPAPDF1A Further design fronts available on request!	

3. Functionality of the ventilation system

With the ventilation unit LG100 you can provide a maximum degree of flexibility to your ventilation concept. Depending on the design variants of the flush-mounted housing, further rooms can be integrated via the KOMFLEX air duct system. The used air is extracted from the living areas, and fresh, filtered outdoor air is supplied. In this process, the high-quality enthalpy exchanger allows for efficient heat and moisture recovery and ensures a well-balanced room humidity and a pleasant room climate.

Highly efficient and low noise EC radial fans allow for extremely energy-saving and low-noise operation. In the switched off state, the outdoor and exhaust air openings are automatically closed mechanically. The integrated sensors record the VOC and eCO₂ concentration of the extract air and, in automatic mode, allow for an operation depending on the room air quality.

The decentralised compact ventilation unit LG100 is controlled easily and intuitively via a pushbutton that is positioned directly on the unit, or via the PICHLER APP. Therefore the unit comes with a WLAN connection as a standard feature. Optionally you can additionally connect an external control unit via cable connection. To ensure a stable WLAN connection of the LG 100 it may be required to boost the WLAN signal by using WLAN repeaters or to establish a mesh network.

4. Designated use

4.1. Intended use

The compact ventilation unit LG 100 is intended for the installation into ventilation and air conditioning systems for controlled domestic ventilation in small and medium-sized residential units (approx. 80 m²). The purpose of controlled mechanical ventilation and deaeration of domestic areas is to improve air quality and reduce the heating energy demand through the use of a highly efficient heat recovery system, and to influence indoor air humidity. The scope and intended use of the unit is limited to the application in residential and recreational spaces for the suction of used air and the supply of fresh, tempered outdoor air at maximum air flow temperatures of -15 °C to +35 °C. Furthermore the airflow must be free from aggressive vapours and substances causing increased wear. Any other use shall be deemed contrary to designated use. The manufacturer shall accept no responsibility for damages or consequential damages arising from improper use. Designated use also includes adherence to our prescribed operating and installation manual. This unit is available to the general public and is intended for installation in residential or industrial buildings. The unit is used for mechanical aeration and ventilation of indoor air and, when combined with a heater battery, is also used to preheat air. The compact ventilation unit LG 100 is not suitable for outdoor installation and may be installed in suitable and frost-free interior areas only. The ventilation unit is not suitable for drying new buildings.

This unit can be used by children from an age of 8 years and furthermore by persons with reduced physical, sensory or mental capabilities or a lack of experience or knowledge, if they are supervised or if they have been instructed on how to use the unit safely and if they understand the hazards resulting therefrom. Children must not play with the unit. Cleaning and user maintenance must not be carried out by children without supervision.





In order to prevent uncontrolled condensate formation in the unit, continuous operation at outdoor temperatures below 0 °C with an extract humidity of more than 60% must be avoided (e.g. private spa area).

The compact ventilation unit is not a ready-to-use product. It must not be put into operation until it has been properly installed and connected. Only qualified and instructed personnel may carry out connection and service work on the unit.



Persons transporting, installing or working on the unit must have read and understood the operating instructions, in particular Section 5 "Safety". The end user must also be instructed on potential hazards.

GENERAL

USERS

4.1.1. STIPULATIONS FOR OPERATION WITH FIREPLACES

Local requirements must be taken into consideration by compliance with corresponding standards, laws and directives.

The decentralised compact ventilation unit LG 100 may only be installed in rooms, flats or utilisation units of a comparable size in which fireplaces dependent on room air are installed, if:

- simultaneous operation of room air-dependent fireplaces and the air extraction unit is prevented by safety devices, or
- the flue gas evacuation of the room air-dependent fireplace is monitored by special safety devices. In the case of room-air dependent fireplaces for liquid or gaseous fuels, activation of the safety device must lead to the switch-off of the fireplace or ventilation unit. In the case of room-air dependent fireplaces for solid fuels, activation of the safety device must lead to the switch-off of the ventilation unit.

The ventilation units for the controlled aeration and ventilation of a flat or a comparable living unit must not be installed if room air-dependent fireplaces in the living unit are connected to exhaust gas systems, which themselves have multiple connections. Normal operation of the ventilation systems requires the possibility of shutting potentially available combustion air ducts as well as exhaust gas systems off from room air-dependent fireplaces. In the case of exhaust gas systems of fireplaces for solid fuels, it must be ensured that the shut-off device can only be operated manually. The position of the shut-off device must be identifiable by the setting of the operating handle. This specification is considered as complied with if a shut-off device against soot is used.

Fire protection requirement: With regard to the fire protection installation regulations for the set-up of the ventilation unit, the provisions of national law, in particular the building regulation concerning the fire protection requirements with regard to ventilation systems in the relevant latest version must be observed.

SPECIALIST PERSONNEL

4.1.2. STIPULATIONS FOR OPERATION WITH EXTRACTOR HOODS

Due to the heavy load as well as the irregular operation, the extract air of an existing kitchen extractor hood must not be integrated into the dwelling's ventilation system. Extract air from such extractor hoods must be conducted separately by means of an exhaust air pipe via the roof. The supply air must be provided for separately (e.g. by window ventilation).

If an extractor hood without the separate provision of supply air is operated, the balance of the air volume in the dwelling is no longer provided for and the proper function of the dwelling's ventilation system is no longer ensured (odour diversion, etc.). Another option is to operate the extractor hood in recirculation mode.

4.1.3. LIABILITY

The compact ventilation unit LG 100 has been developed and manufactured for controlled mechanical ventilation and deaeration of spaces with purposes similar, for example, to seminar rooms and small offices. Proper use of the ventilation systems have the facility to be shut off from fireplaces dependent on ambient air.

Any other use than the one described in Section 4 shall be deemed improper and may cause personal injury or damage to the compact ventilation unit, for which the manufacturer shall accept no liability.



The manufacturer accepts no responsibility for any damage due to:

- non-compliance with the safety, operating and servicing instructions given in this operating and installation manual.
- the installation of spare parts that have not been supplied by the manufacturer, the responsibility for the use of such spare parts being fully borne by the system builder/installer.
- normal wear and tear.

4.1.4. WARRANTY

The warranty period shall commence after the unit is put into operation, but no later than one month after delivery. Warranty details can be found in our "General terms and conditions" in their latest version as well as the merchant conditions of your respective country. The warranty shall be subject to proof of services performed as per our instructions and executed by a licensed installer/specialised company. Warranty claims shall be limited to material and/or constructional defects occurring during the warranty period. In the event of a warranty claim, the compact ventilation unit LG 100 must not be dismantled without prior written authorisation from the manufacturer. The manufacturer's liability shall be limited to spare parts installed by an installation company approved by the manufacturer. The warranty shall automatically lapse at the end of the warranty period, following improper operation such as operation without filters, if parts other than original manufacturer-supplied parts are installed, or if unauthorised changes are made to the unit. Furthermore, the warranty is automatically rendered void by failure to comply with the information in this operating and installation manual.

5. Safety

Read this operating and installation manual carefully and observe the safety instructions while you carry out installation, commissioning, servicing or general work on the ventilation unit. Keep the operating and installation manual near the unit for its entire service life.

Always observe the safety regulations, warnings, notes and instructions given in this operating manual. The specifications given in this document must not be altered. Non-observance of these safety regulations, warnings, notes and instructions may lead to physical injury or damage to the compact ventilation unit.

The conclusion of a service contract is recommended to ensure that the unit will be checked at regular intervals. Ask your supplier about approved specialised companies/installers in your area.

5.1. Symbols used in this document

The following Safety symbols highlight text containing warnings in respect of danger and potential hazards. Please familiarise yourself with these symbols.

**Attention/Note!****Attention! Ignoring this warning may lead to injury or threat to life and limb and/or damage to the unit.****Attention – High voltage! Ignoring this warning may lead to injury or threat to life and limb.**

5.2. Safety regulations

Installation, initial start-up, maintenance and repairs must only be carried out by an authorised specialist company.

Over and above this operating and installation manual, local and national regulations and standards shall also apply to the operation of this unit without limitation.

Take instruction from your installer on the unit and on its control unit following installation. The ventilation unit must only be used in accordance with the information provided in Section 4 "Designated use".

All safety and danger notices attached to the unit and specified in this description must be observed.

In the event of malfunctioning, switch off the unit immediately and disconnect the power plug. The unit must be appropriately secured against restart. Faults must be remedied immediately.

After repairs and maintenance work, qualified personnel must verify that the unit is safe to operate.

Attachment or installation of additional parts and components is not permitted. Any modification of the compact ventilation unit is prohibited. Only original spare parts may be used.

Modifications and alterations to the ventilation unit are prohibited and absolve the manufacturer from all warranties and liability.

Ensure that children do not play with the unit.

5.3. Setting up the unit



The national and local regulations must be heeded when installing and setting up the unit. The unit may only be installed in compliance with national installation regulations.

Installation shall be carried out in accordance with the general local building, safety and installation regulations of the relevant community or the water and electricity department and other bodies. The unit may only be installed in frost-free and dry rooms. The room temperature at the place of installation must be consistently between +5 °C min. and +35 °C max. The unit is designed for upright installation or wall installation and may only be set up on a suitable, load-bearing construction. The unit must not be exposed to vibration of any kind.

Suitable drainage of condensate arising during operation of the unit will be required, including an effective odour blocking trap (siphon). Installations for water, heating and condensate connections may be performed by a specialist only. The unit must be installed and executed appropriately so as to ensure seal-tightness and effective condensate drainage in order to exclude the possibility of building damage. Effective condensate drainage must be verified on-site prior to initial start-up and after servicing the unit. The maximum permissible load must be observed when transporting the unit.

Components of the ventilation unit, e.g. air ducts which may need to be installed in unheated areas, must be suitably insulated to prevent heat loss or condensate formation (for temperatures below dew point). Observe all locally-applicable construction and fire protection guidelines, regulations and standards. If necessary, appropriate suitable measures should be taken when installing the unit, e.g. installation of fire dampers in air ducts, etc.

5.4. ELECTRICAL CONNECTION WORK



Warning: hazardous electrical voltage! Ignoring the danger may result in death, injuries or material damage. Before carrying out any work on live parts, the unit must always be disconnected completely from the power supply (all poles) and secured against being switched back on.



Electrical connection work and work on the system's electrical components may be carried out by authorised electricians only, in compliance with national and local regulations.





Before opening the unit and when carrying out work on the unit, e.g. maintenance work and repairs, the unit must be isolated from the mains (all poles disconnected) and secured against being switched back on for the duration of the work. The compact ventilation unit must be connected to a 230V / 50Hz voltage supply and with the correct phases. The mains supply cable must be provided with a strain relief.

To the external interfaces exclusively fittings may be connected for which it is proven that there is an electrically protective separation between the interface and those active parts of the fitting, which are not operated with safety extra-low voltage (SELV/PELV), in compliance with DIN EN 1140, e.g. by double or reinforced insulation complying with DIN EN 60335-1 or DIN EN 60730-1.



Any work practices that could potentially impair the safety of the unit are prohibited! To ensure safe operation, safety devices must not be removed or bypassed.

Electrical equipment and the unit's warning and protective devices must be inspected regularly to ensure that they are in perfect working order. In the event of faults in the electrical power supply or identification of defects e.g. loose connections or burnt cables, the unit must be put out of operation immediately. Damaged or faulty power supply cables to the unit must be repaired immediately to avoid hazards. The unit may not be operated until safe operational conditions are restored.

Fault finding and immediate remediation of electrical defects and malfunctions shall be carried out by authorised electricians only. All protective measures must be inspected (e.g. earth resistance etc.) after completion of electrical work on the unit. For details, see Section 16.2. "Electrical connection"

5.5. Plant operation



Operation of the ventilation unit is permitted only if all built-in parts provided, e.g. silencers etc., have been properly connected.



In the event of any errors or defects that can cause harm to persons or property, the system must be put out of operation immediately. Further use must be actively prevented until the unit is fully repaired.

If error messages are output or in the case of damage, the ventilation unit must be switched off and disconnected from the mains immediately. When opening the unit or when removing cover fronts, keep safety and potential hazards in mind. Any work practices that could potentially impair the safety of the unit are prohibited.



Operation of the unit is exclusively permissible with a connected air duct or mounted system components such as silencers, in order to ensure that, for example, fans or electrical installation parts cannot be touched with the hand.

The compact ventilation unit may be operated only in accordance with the project documentation, which shall comply with the Equipment and Product Safety Act and the pertinent provisions of the EC Directives and Standards. Consider environmental impacts and refrain from installing the ventilation unit in the vicinity of flammable liquids or gases, in swimming pools or in areas exposed to chemicals or hazardous substances. Never operate the ventilation unit without air filters. The air filters must be checked regularly for dirt and damage and replaced, if necessary. The air filters must be changed at least every six months or when the "Change Filter" message appears on the control unit. Use original replacement filters only. If the plant is not used in summer, the air filters must, for hygienic reasons, be replaced prior to restarting.

Comply with safety requirements and standards when operating the ventilation unit simultaneously with ambient air-dependent fireplaces. When using fireplaces dependent on ambient air, combustion air supply must be provided separately. Due to the heavy load as well as the irregular operation, extractor hoods must in no case be integrated into the exhaust duct of the compact ventilation unit. Exhaust air extractor hoods must be operated via separate air pipes with suitable air replenishment, e.g. by means of window ventilation or in air recirculation mode. For details regarding this matter, see Section 4.1.1. and 4.1.2.



6. Customer service

Please contact the installer of your ventilation and air conditioning system or contact us directly for any questions relating to the compact ventilation unit LG 100.



J. Pichler Gesellschaft m.b.H.

9021 KLAGENFURT
Karlweg 5, Postfach 32
T +43 (0)463 32769

7. Design of the ventilation unit

The compact ventilation unit LG 100 consists of:

- a compact, thermally insulated and soundproof EPP housing
- a device enclosure made of galvanised sheet steel
- a design front that comes equipped as a standard with an exterior powder coating in RAL 9003
- a highly efficient enthalpy exchanger
- energy-saving EC radial fans
- an integrated sensor system for measuring the volumetric flow, temperature, relative humidity and VOC/eCO₂ concentration
- Outdoor air and extract air filters ISO Coarse 70% and supply air filter ISO ePM1 55%
- an integrated filter monitoring function – when the time interval is reached
- standard operation via pushbutton on the unit, WLAN interface for control via the PICHLER APP and for remote access via PICHLER Connect and optionally with the control unit "MINI" for setting the basic functions.

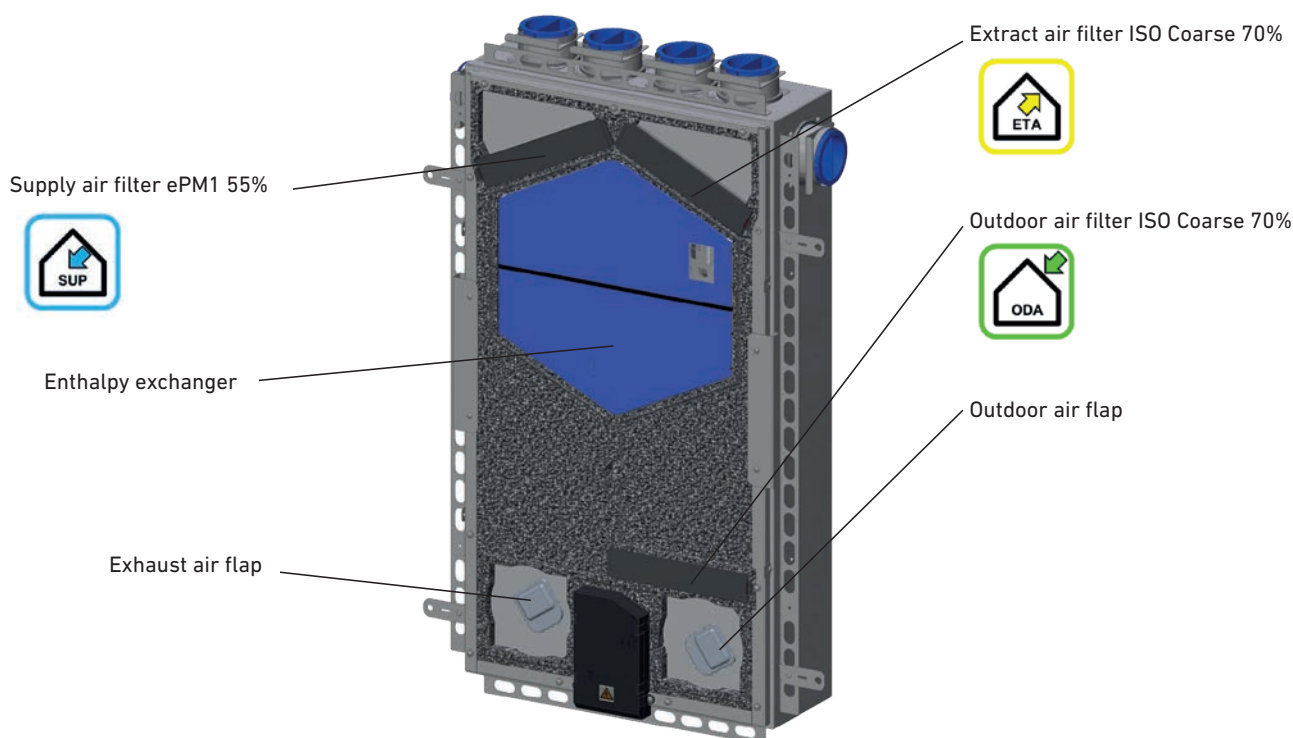


Illustration showing the design of a ventilation unit




8. How to operate the unit

The ventilation unit can be operated without a control unit via a button on the bottom side of the unit. A green LED indicates the different operating states of the ventilation unit. A red LED indicates an error or a warning message of the unit. A detailed description of the error codes can be found in Section 19.2.

Pattern	Operation
Flashing red 1-5 x	Switch the unit to a deenergized state by switching it off and on. If the error message remains active, please contact the customer service.
Flashing red 6 x	Merely indicates a risk of frost or condensation, but is still in operation.
Flashing red 7 x	The unit cannot establish an Internet connection.



LED and operating button on the bottom side of the unit

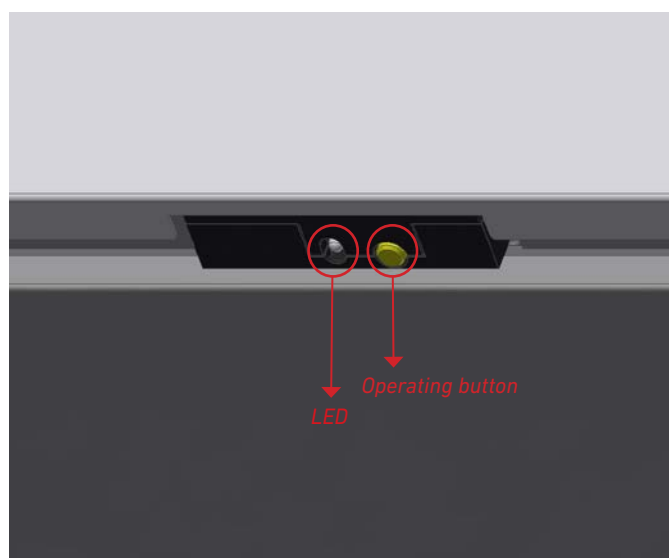

Detailed view

The ventilation unit is switched on by pressing the operating button twice and starts running at ventilation level 1. The LED blinks three times at frequent intervals with one green flash in each case. The outdoor air and exhaust air flap opens and the fans convey the selected operating volume flow of ventilation level 1. With every further push of the button the ventilation unit is switched to the next higher ventilation level. When the "Automatic" ventilation level (LED flashing green 4 x) has been reached, the ventilation unit switches back to the "Standby" mode, and switching starts again from the first level. In the Standby mode, the fans switch off, and the outdoor air and exhaust air flap closes. The current operating state is indicated by the flashing patterns specified in the table below.

Wake-up call:

After showing the respective flashing pattern, the LED changes to the "Sleeping mode", the ventilation unit continuing its operation at the ventilation level currently set.

By pressing the operating button, a "wake-up call" is carried out first and the sleeping mode of the LED is stopped. The LED indicates the current operating status (ventilation level, error and filter messages) by the different flashing modes. The flashing modes are repeated 3x, then the LED returns to the sleeping mode again.

In order to change the ventilation level, the button on the ventilation unit must be pressed after the "wake-up call" and within the flashing pattern (3 repetitions).

Pattern	Operation
Flashing green 1 x	Ventilation level 1
Flashing green 2 x	Ventilation level 2
Flashing green 3 x	Ventilation level 3
Flashing green 4 x	"Automatic" ventilation level
LED flashing green permanently	Access point for coupling to the WLAN



9. MINI control unit

9.1. Functions


The following compact ventilation unit functions can be indicated and configured with the MINI control unit:

- Ventilation level of the compact ventilation unit
- Display of the filter change message
- Display of the fault messages via LED
- Boost ventilation mode for a defined time
- WiFi-modes



Bedieneinheit MINI

9.2. Buttons and LEDs

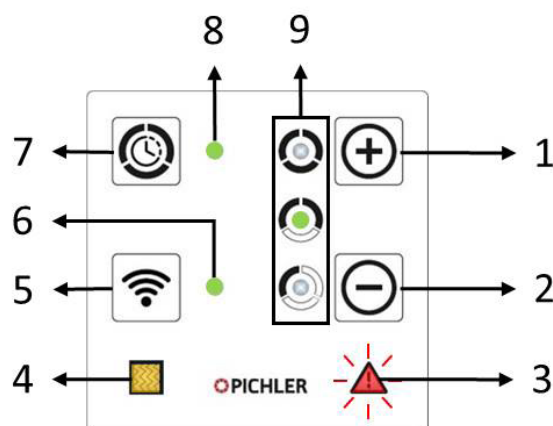

Functions of the MINI control unit

1. Plus button

Increasing the ventilation level

2. Minus button

Reducing the ventilation level

3. Error LED

Indicates errors with different flashing patterns that light up

4. Filter LED

After the filter time has elapsed, the filter must be checked.
For acknowledging the filter message, push the reset button.

5. WiFi button

- Press 1x to activate the WiFi mode
- Press for 2 sec. to deactivate the WiFi mode
- Press for 5 sec. to call the Access Point mode

6. WiFi LED

- LED off = WiFi deactivated
- LED is lit = WiFi mode
- LED flashes = Access Point mode

7. Boost button

Activates ventilation level 3 (boost ventilation level) for a defined period of time (standard: 60 minutes).

8. Boost LED

Is lit if activated.

The LED of the current ventilation level is lit and the LED of ventilation level 3 flashes.

9. Ventilation level LEDs

Indicate the current ventilation level.


If all three LEDs are active, this corresponds to the automatic mode. The ventilation unit follows a demand-responsive air volume regulation via VOC.




Pattern	Operation
Green LED level 1 is lit	Ventilation level 1
Green LED level 2 is lit	Ventilation level 2
Green LED level 3 is lit	Ventilation level 3
Green LED levels 1 to 3 are lit	"Automatic" ventilation level



Ventilation level 1

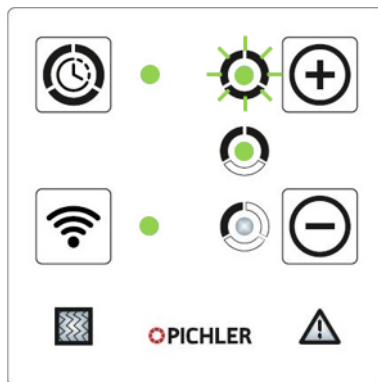Boost ventilation mode for a defined time

Ventilation level 2

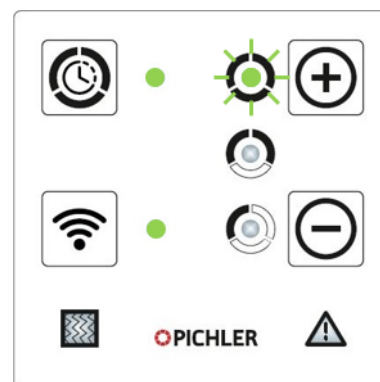Boost ventilation mode for a defined time

Ventilation level 3


Boost ventilation mode for a defined time

When the defined time (configurable) has elapsed in the highest ventilation level, ventilation operation switches back automatically to the ventilation level set last. Alternatively, you can end the boost ventilation mode manually before the time has passed. Simply press the [-]-button on your control unit.

10. Operation via PICHLER APP and PICHLER Connect

To ensure a stable WLAN connection of the LG 100 it may be required to boost the WLAN signal by using WLAN repeaters or to establish a mesh network.


10.1. Easy operation with the PICHLER APP

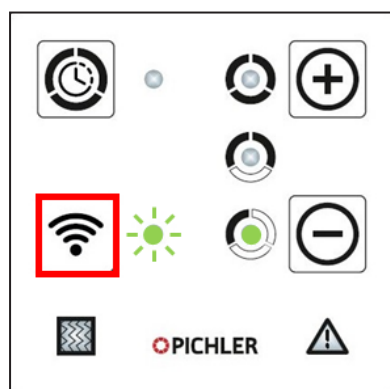

User-friendly: the compact ventilation unit can be operated easily with our free smartphone app for Android and iOS, whether you are at home or on the move.

Load and install the PICHLER APP from the App Store or from the Google Play Store. The PICHLER APP can control the ventilation unit directly or via the Internet.

By pressing the WiFi button (see red marking in the illustration on the left) for 5 seconds, the Access Point mode of the ventilation unit is activated, which is indicated when the WiFi LED flashes green.

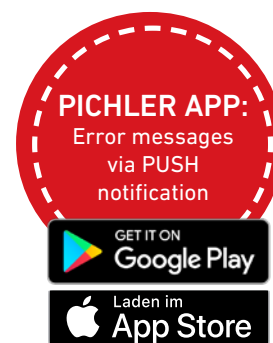

10.2. Remote access with PICHLER Connect

Operational safety: remote access allows the PICHLER customer service to respond quickly and easily in the event of faults.



10.3. Data protection

When you have installed the PICHLER APP and establish a connection to the device, we assume that you accept our current data privacy statement (see: www.pichlerluft.at/datenschutz.at).




10.4. Create an account


When the Access Point mode is active, the ventilation unit is visible via the WLAN settings of the smartphone. Select the network "LG100AHU" and enter the password "Pichler1234".

When a connection with the ventilation unit has been established successfully, open the PICHLER APP.

The following screen is shown:

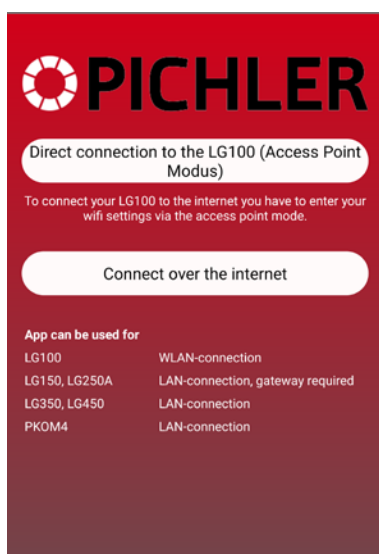

Press the "LG100 Direct" button in order to establish a direct connection with the ventilation unit.

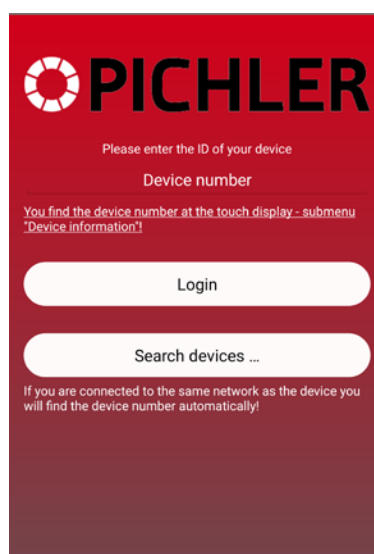


Then press the "Search units ..." button.

If the ventilation unit is found via the Access Point mode, a 12-digit number is shown.

→ If no number is shown, the smartphone is no longer connected to the ventilation unit. Please start again.

The following screen will open.

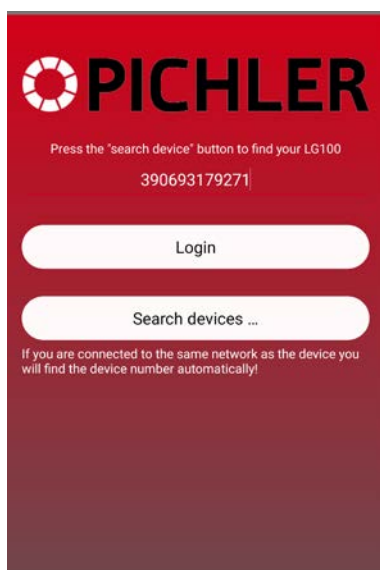


Press the "Login" button. The app checks the connection and loads the data of the ventilation unit.




Go to the „Wifi settings“ menu.



In order to connect the ventilation unit with the Internet router, you have to enter the network name (WiFi-SSID), the WiFi password and the WiFi encryption. Then press "Accept". The direct connection between the ventilation unit and your smartphone is interrupted.

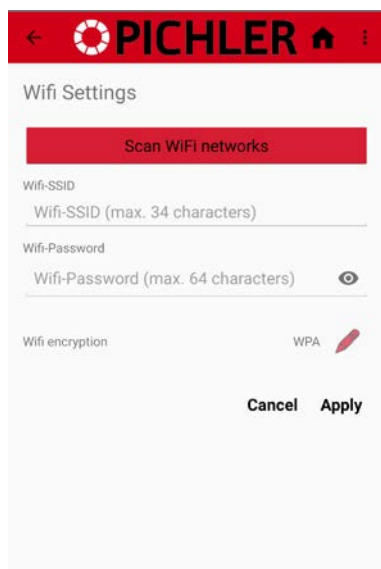



Connect your smartphone with the Internet router and select "Connect via Internet" on the screen.

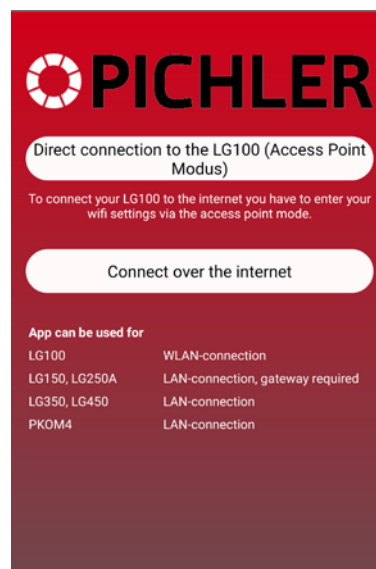

As you are connected with the same network, press the "Search units ..." button.

The same 12-digit number as in the Access mode is shown.

→ If no number is shown, either the ventilation unit or your smartphone is not connected to the Internet router. Please start again.

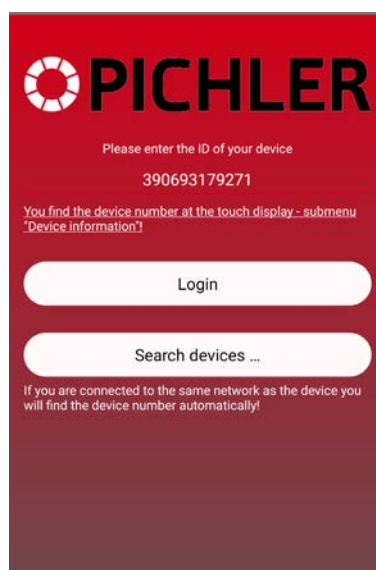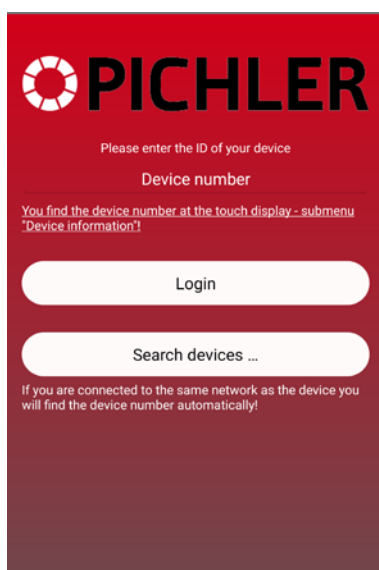

If you have successfully established a connection between the ventilation unit and your smartphone via the Internet, you have to allocate an account name, e-mail address and a password. Press the "Save" button and your account is created. Then you can control your ventilation unit globally via your smartphone.




11. Error & warning messages

11.1. LED on the ventilation unit



The error messages of the compact ventilation unit are indicated by red LED flashing patterns on the bottom side of the ventilation unit.

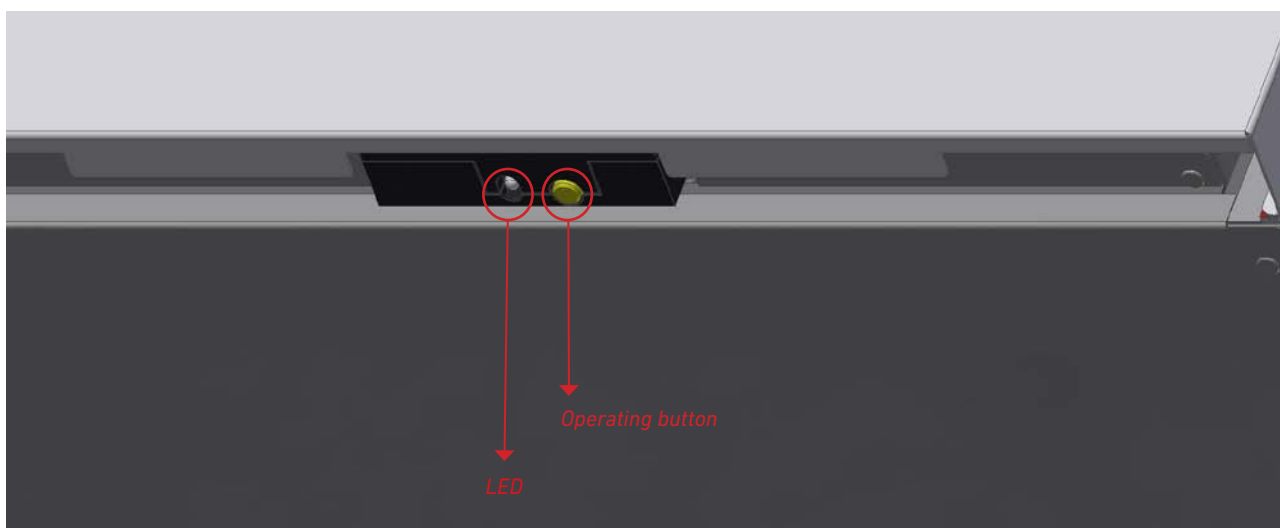


Display of error messages on the unit

The meaning of the different flashing codes is described in greater detail in Section 19 "Error description" ("Specialized personnel" section). In any case, check the Internet connection and switch the unit on and off before consulting an expert.

11.2. MINI control unit



The error messages of the compact ventilation unit on the MINI control unit are indicated by red error LED flashing patterns.

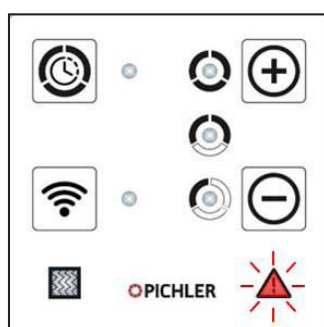

MINI control unit error message

The meaning of the different flashing codes is described in greater detail in Section 19 "Error description" ("Specialized personnel" section). In any case, check the Internet connection and switch the unit on and off before consulting an expert.

11.3. PICHLER-APP

The app indicates a group error message via push notification. To obtain an exact error indication, please read off the flashing pattern from the control unit or the ventilation unit.



12. Filter service



Each time the filters are maintained, always all three filters must be replaced.

12.1. MINI control unit filter message

When the filter lifetime has expired (factory default: 6 months), the control unit indicates the necessity of a filter check via the LED provided for this purpose (bottom left), which is then lit yellow permanently.

12.1.1. Clearing the MINI control unit filter message

Required filter change

Reset the filter counter after changing the filters.

Press the [+] -button and the [-] -button at the same time for 5 seconds in order to do this. The filter message disappears after entering this combination.

Premature filter change

If the air filters are replaced prematurely, the filter counter must be reset without a pending filter message.


To do this, you again press the [+] -button and the [-] -button simultaneously for five seconds.

12.2. Filter message on the unit


When the filter lifetime has expired (factory default: 6 months), the unit indicates a filter change on its control unit by alternating flashing of the LED in green and red. To acknowledge the filter message, keep the button pressed for **5 seconds**.

12.3. Filter message via PICHLER APP

When the filter lifetime has expired, the app indicates a filter message via push notification.

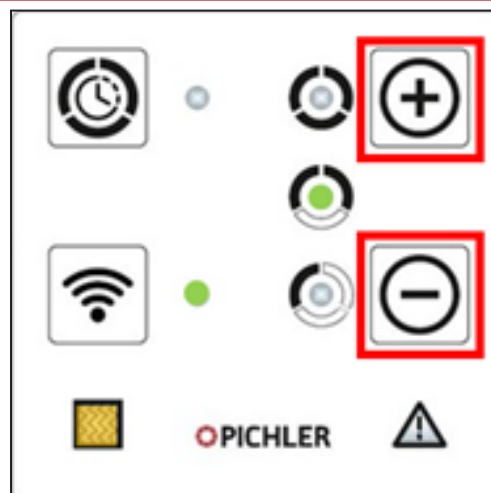

MINI control unit filter message

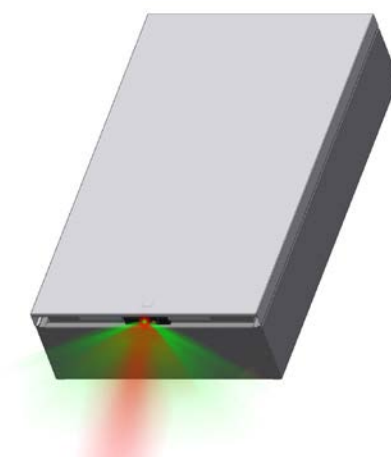

Flashing LED






12.4. Filter change



Only original replacement filters of the specified filter class may be used.



When replacing the air filters, avoid soiling the unit and its components. Dirty air filters must be immediately and suitably disposed of. The used air filters can be disposed of as residual waste.

Symbol	Designation	Item no.
	ODA pre-filter (outdoor air)	40LG0500006A
	ETA filter (extract air)	
	SUP fine filter (supply air)	40LG0500007A


12.5. Procedure for the filter change

1. Filter message via flash code on the unit, on the MINI control unit, or via the Pichler app
2. Set the unit to Standby.
3. Remove the design front
4. Remove the filter covers by pressing the latches positioned at the sides towards the inside.
5. Remove the respective air filter by the flaps.
6. Insert the new air filter and close the filter cover.
7. Mount the design front again.
8. Acknowledge the filter message.




When inserting the new filters, observe the mounting position (direction of air).




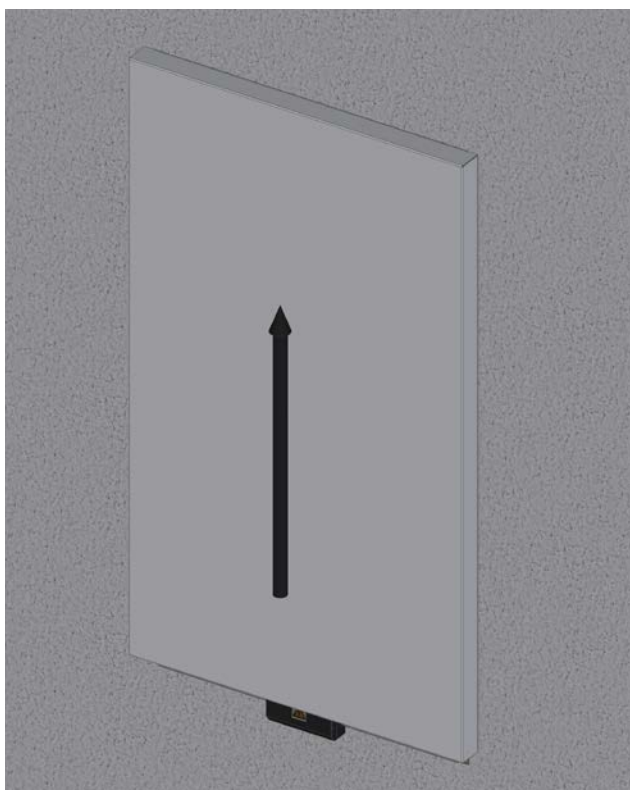


Push the design front upwards

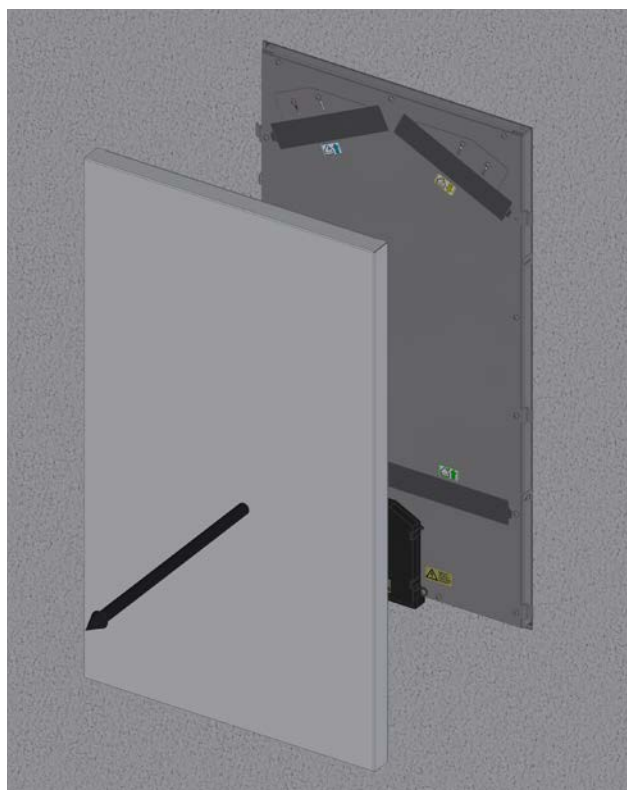


Remove the design front

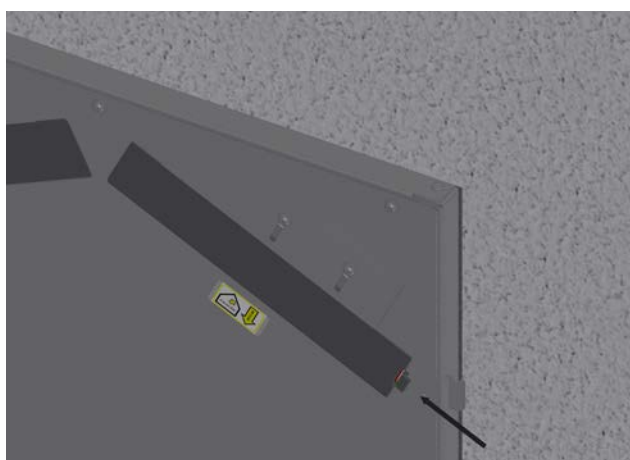


Open the filter cover

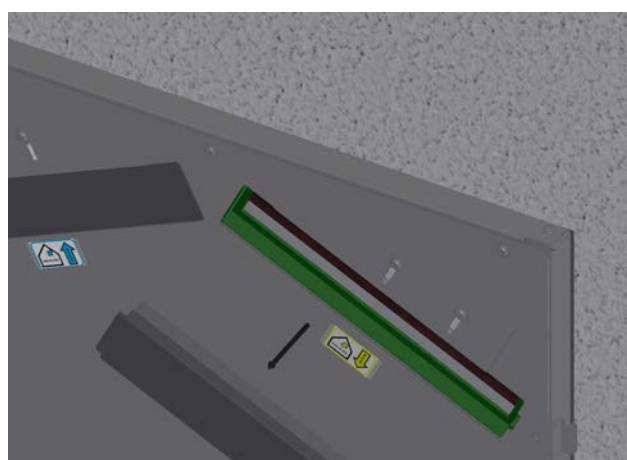

Remove the filter cover

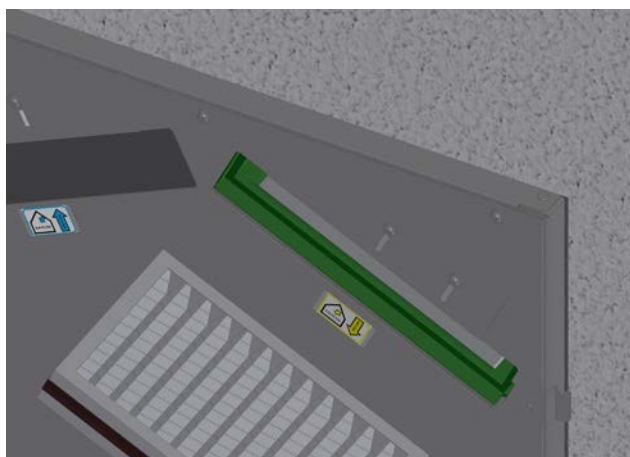

Remove the filter

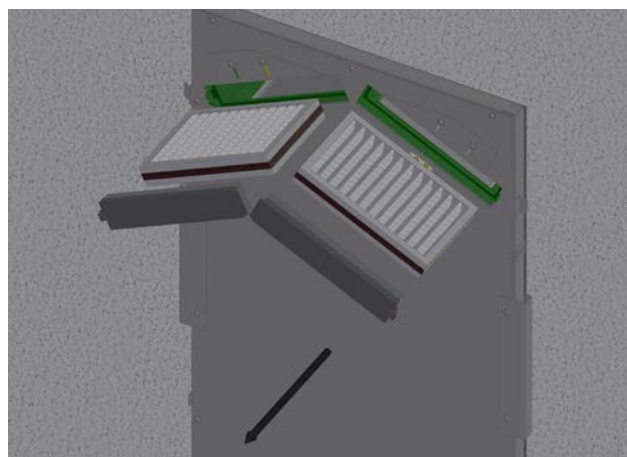

All 3 filters removed



SPECIALIST PERSONNEL - ASSEMBLY/INSTALLATION

13. Transport, storage and disposal



Any transport damage and/or missing parts must be reported immediately in writing to the forwarder or supplier.

13.1. Transport, storage and packaging

The compact ventilation unit is delivered in a transport packaging. The safety markings on the packaging must be observed. The unit must be stored in its packaging and in a suitable dry space.

In order to prevent possible transport damage, the compact ventilation unit LG 100 has to be handled with care and secured correspondingly during transport. Ensure that the unit is not damaged, toppled or overturned. Avoid knocks and blows during transportation. Applicable safety and accident regulations must be complied with during transportation. If transported manually, ensure that necessary human lifting and carrying forces are reasonable.

13.2. Disposal







The packaging materials must be disposed of in accordance with local regulations; wooden pallets or cartons must be recycled, for instance.

Units that are no longer in working order must be dismantled by a specialised company and properly disposed of via suitable collection centres in accordance with the Waste Electrical and Electronic Equipment Ordinance (WEEE), which provides for the implementation of community law, Directive 2002/95/EC (RoHS) and Directive 2002/96/EC (WEEE Directive).




14. Technical specifications


14.1. Unit set-up and dimensions

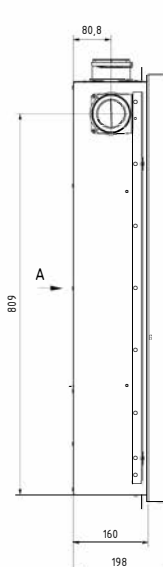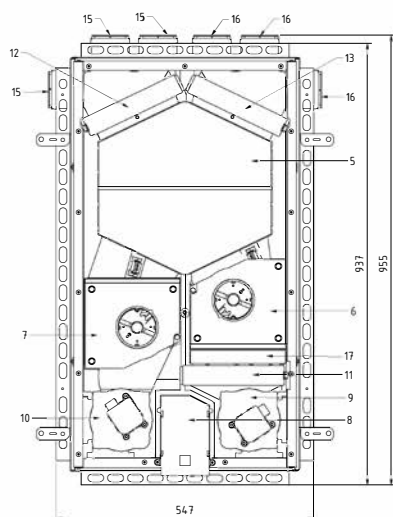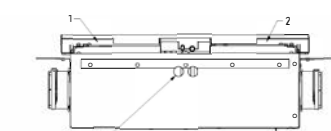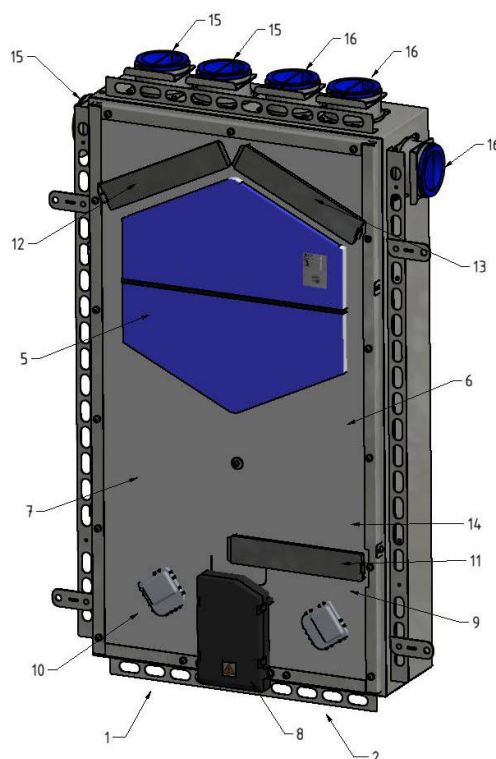


rear view
A (1 : 5)

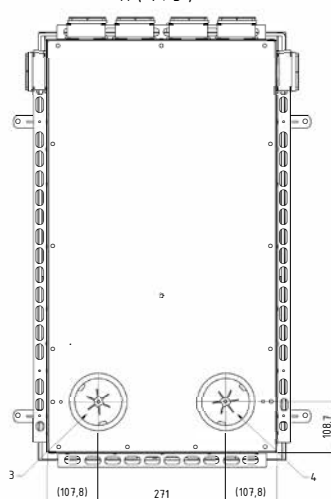

- 1 Supply air (SUP)
- 2 Extract air (ETA)
- 3 Outdoor air (ODA) (100 mm)
- 4 Exhaust air (EHA) (100 mm)
- 5 Enthalpy exchanger
- 6 Outdoor air fan
- 7 Exhaust air fan
- 8 Controller
- 9 Outdoor air flap
- 10 Exhaust air flap
- 11 Outdoor air filter ISO Coarse 70%
- 12 Supply air filter ISO ePM1 55 %
- 13 Extract air filter ISO Coarse 70%
- 14 Cable inlets
- 15 Supply air connections for multi-room applications
- 16 Extract air connections for multi-room applications
- 17 Electrical pre-heating battery

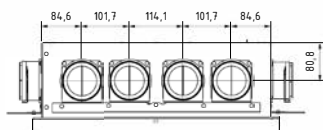

14.2. System diagram

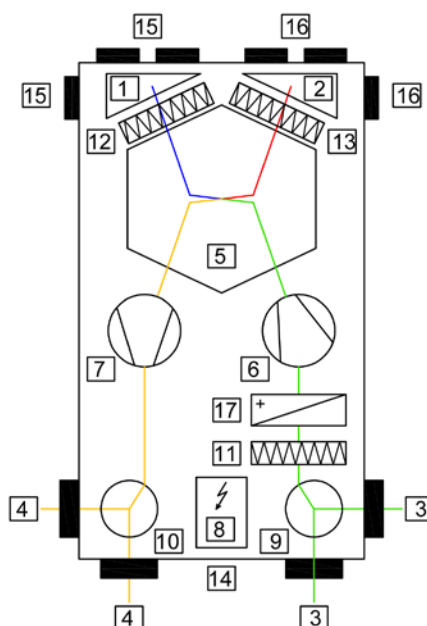

1. Supply air (SUP)	Supply air is the air supplied to the room.
2. Extract air (ETA)	Extract air is the air that is extracted from the room.
3. Outdoor air (ODA)	Outdoor air is the air that is drawn in from outside.
4. Exhaust air (EHA)	Exhaust air is the air that is blown out into the open.
5. Enthalpy exchanger	Serves to transfer heat and recover humidity from the warmer to the colder air.
6. Outdoor air fan	Sorgt für den erforderlichen Luftvolumenstrom in der Zuluft.
7. Exhaust air fan	Provides for the required air volume flow in the extract air.
8. Controller	The ventilation unit is regulated in a demand-oriented fashion via the VOC/eCO ₂ sensor system integrated into the ventilation unit. The ventilation unit can be optionally controlled by means of a push button on the unit, via Pichler-APP, or via the "MINI" control panel.
9. Outdoor air flap	Closes the outdoor air connection of the unit when the unit is switched off.
10. Exhaust air flap	Closes the exhaust air connection of the unit when the unit is switched off.
11. Outdoor air filter Iso Coarse 70%	Serves to pre-filter the outdoor air and to protect the unit interior. Furthermore the filter replacement intervals of the supply air filter are prolonged.
12. Supply air filter ISO ePM1 55%	Serves to filter particulate matter in the supply air.
13. Extract air filter ISO Coarse 70%	Serves to filter the coarse impurities from the extract air, in order to protect the unit's interior from being contaminated.
14. Cable inlets	Electrical connection cable
15. Supply air connections for multi-room applications	Serves to provide the KOMFLEX system connection with the possibility of ventilating further rooms.
16. Extract air connections for multi-room applications	Serves to provide the KOMFLEX system connection with the possibility of air extraction from further rooms.
17. Electrical pre-heating battery	Serves to offer protection against the formation of condensate and icing in the heat exchanger in the case of very low outdoor temperatures. By means of the optional electrical pre-heating battery, the outdoor air is preheated as a function of the outdoor and exhaust air temperature.



14.3. Safety devices



To ensure safe operation of the system, safety devices and covers must by no means be rendered inoperative; nor may measures be taken to bypass or dismantle them.

In the event of any errors or defects on the ventilation unit, which may cause harm to persons or property, the system must be put out of operation immediately and protected against being switched back on. Further use must be actively prevented until the unit is fully repaired. The unit may only be repaired by a specialised company.

14.4. Device data

Equipment type		LG 100 UP - flush-mounted	
Application	Single-room application	Multi-room application	
Article number ventilation unit	08LG100UPF	08LG100UPF	
Article number ventilation unit with preheating battery	08LG100UPFV	08LG100UPFV	
Article number of housing	08LG100UPGERA	08LG100UPGMRA	
Article number design front, RAL 9003	08LG100UPAPDF1A	08LG100UPAPDF1A	
Device data			
Ventilation stages	1 - 2 - 3 - automatic		
Level 1 - basic ventilation	25	25	
Level 2 - normal ventilation	42	56	
Level 3 - intensive ventilation	60	80	
Automatic (demand-based)	25 - 60	25 - 80	
Energy efficiency class	A	A	
Properties			
Volume flow constant function	yes		
Humidity control	yes		
Air quality control (VOC, eCO2)	yes		
Mechanical cover flap in the outdoor air and exhaust air pipe	yes		
Characteristic values in compliance with EN13141-8:2014 ¹⁾			
Temperature ratio	83.6 %	80.4 %	
Humidity ratio supply air	69.1 %	64.3 %	
Specific input power SIP	0.28 Wh/m³	n.a.	
Classification of air filters in accordance with EN ISO 16890			
ODA filter (outdoor air - pre-filter)	ISO Coarse 70 %		
SUP filter (supply air - fine filter)	ISO ePM1 55 %		
ETA filter (extract air)	ISO Coarse 70 %		
Operating conditions			
Permissible operating temperature (outdoor air) with / without preheating battery	-15 °C / -5°C		
Condensate drainage	not required ²⁾		
Electrical system			
Electrical connection	230 V / 1 ~ / 50 Hz / 13 A		
Power consumption of ventilation unit	8 – 40 watts		
Power consumption pre-heating battery	280 watts		



Materials and components		
Inner part	EPP and galvanised steel sheets	
Design front	Steel sheet, galvanised and powder-coated	
Heat exchanger	Enthalpy counterflow heat exchanger with a polymer membrane	
Fans	EC radial fans	
Air connections		
Outdoor / exhaust air	100 mm	
Multi-room connection supply air	-	3 x KOMFLEX 75
Multi-room connection extract air	-	3 x KOMFLEX 75
Sound levels		
Level of acoustic insulation standby	57 dB(A)	
Level of acoustic insulation operation	55 dB(A)	
Dimensions and weight		
Unit dimensions W x H x D (without connections)	547 x 937 x 200 mm	
Weight	25 kg	
Design front	525 x 908 x 43 mm	
Weight	5 kg	
Certifications		
TÜV-tested	yes	
Building inspection approval (DIBt - German Institute for Structural Engineering)	Z-51.3-489	

¹⁾ At 70% of the max. volume flow; corresponds to ventilation level 2

²⁾ When used as intended as living space ventilation unit, no condensate will form

14.5. Sound data

SINGLE-ROOM APPLICATION	Volume flow m³/h		
	42	56	60
Housing			
Sound pressure level at a distance of 1m L_{PA1m} dB(A)	< 20	22	29
Sound power level L_{WA} dB(A)	29	35	43
Outdoor air / exhaust air			
Sound pressure level L_{PA} dB(A) weather protection	41	53	62
Sound power level L_{WA} dB(A) reveal	39	50	58

MULTI-ROOM APPLICATION (distribution: Design front approx. 1/3, KOMFLEX pipes approx. 2/3)	Volume flow m³/h			
	42	56	70	80
Housing				
Sound pressure level at a distance of 1m L_{PA1m} dB(A)	< 20	22	27	29
Sound power level L_{WA} dB(A)	32	35	40	42
Outdoor air / exhaust air				
Sound pressure level L_{PA} dB(A) weather protection	48	55	57	64
Sound power level L_{WA} dB(A) reveal	45	52	54	60



15. Control

15.1. Frost protection with preheating battery

Optionally, the ventilation unit LG 100 is available with an integrated electrical PTC preheating battery. With activated preheating-battery the cold outdoor air is preheated via the electrical PTC heating element. This operating mode provides a guaranteed balanced air volume flow between supply air and extract air.

- At very low outside temperatures, with temperatures falling below a defined exhaust air temperature value, and if the defined temperature difference between extract air and supply air is exceeded, the preheating battery is switched on and remains in the switched-on state for a minimum runtime.
- If the exhaust air temperature exceeds a defined value, the preheating battery is switched off after the minimum runtime.
- If the unit is switched off and the preheating battery has been active beforehand, the fans continue running for a bit.

15.2. Moisture protection

In order to prevent the formation of condensate, the ventilation unit regulates the humidity value to ventilation level 3 when a defined exhaust humidity value is exceeded. If the exhaust humidity continues increasing nevertheless, the supply air volume flow is slightly reduced and the unit runs in disbalance, thus ensuring that moisture is effectively transported from the room. This means that the infeed of supply air to the rooms by the ventilation unit is lower than the amount of extract air discharged. The slight negative pressure in the living space is compensated by an inflow of air due to leakages in the building (e.g. entrance door).

Note: If the disbalance control mode is not required or is not permissible (e.g. if there is a gas hot water heater), this function must be deactivated during commissioning by the specialist personnel.

The ventilation unit only regulates back when the exhaust moisture falls below the value defined.

If the exhaust moisture remains at a high level in spite of this safety function, the ventilation unit switches to standby operation after approximately 30 minutes. After approximately one hour in standby operation, the ventilation unit will restart automatically, initiating a restart of the safety function.

15.3. Frost protection without a preheating battery

Ventilation units without a preheating battery are subjected to the risk that the heat exchanger will freeze when outdoor temperatures fall to a very low level. Since the ventilation unit is not provided with a condensate connection, the formation of condensate is to be avoided by all means. Therefore the ventilation unit is automatically switched off for approximately one hour for reasons of safety at outdoor temperatures below -5°C , and the mechanical flaps in the outdoor and exhaust air aperture are closed automatically. After this time, the ventilation unit is automatically restarted.



Attention! This safety function interrupts the ventilation operation at low outdoor temperatures.




15.4. VOC/eCO₂ control

The room air quality is measured via VOC and eCO₂ sensors, and the air volume flow is controlled in a demand-oriented fashion. In the automatic mode, the ventilation unit regulates the air volume flow as a function of the air quality (VOC) or the eCO₂ values on a needs-based basis. The greater the value, the larger the volume flow.

An acceptable room air quality should not exceed a CO₂ value of approx. 1000 ppm and its air quality class should be 1 to 2.


Room air quality / IAQ rating	Reference Level	TVOC (mg/m ³)	Air quality
< 2.0	Level 1	< 0.3	Very good
2.0 to 2.99	Level 2	0.3 to 1.0	Good
3.0 to 3.99	Level 3	1.0 to 3.0	Medium
4.0 to 4.99	Level 4	3.0 to 10	Poor
5.0	Level 5	> 10	Bad

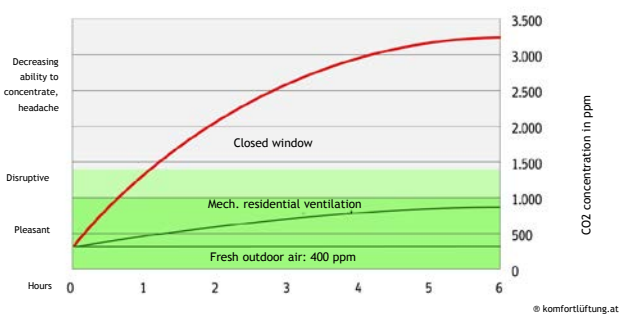

Structural-physical upper limit
(condensate, mildew ...) approx.
45 % to 55 %

Ideal 35 % to 45 % RH

Lower comfort limit for humans 20 %

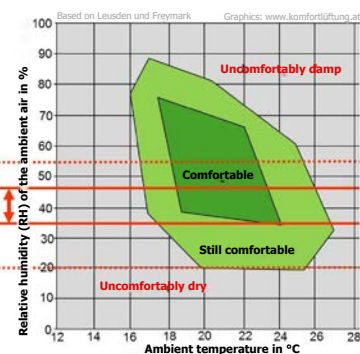

15.5. Outdoor air quality control

If the ventilation unit is configured with an (optional) VOC/eCO₂ sensor in the outdoor air by the factory, the function can be activated via the app. If the outdoor air quality (VOC value) is poorer than level 4 for a certain time, the ventilation unit changes to standby operation. After approx. one hour in standby operation, the ventilation unit is restarted automatically.

15.6. Service level operation via app

In order to define the device type (single-room or multi-room), a connection with the service software or the app in service mode (password required) must be started.



16. Mounting


16.1. Installation of the slide-in module in the flush-mounted housing

Before inserting the slide-in module into the flush-mounted housing, the cables must be threaded by specialist personnel responsible.

Depending on the version, the required number of cables must be available. Provide a cable for the device supply and for a possible BMS connection in the first installation tube (is led to the fuse box). Provide a cable (that is led directly to the control unit) for operation via the control unit in the second installation tube.




To be connected to the unit, the cables must protrude at least 40 cm from the flush-mounted housing.

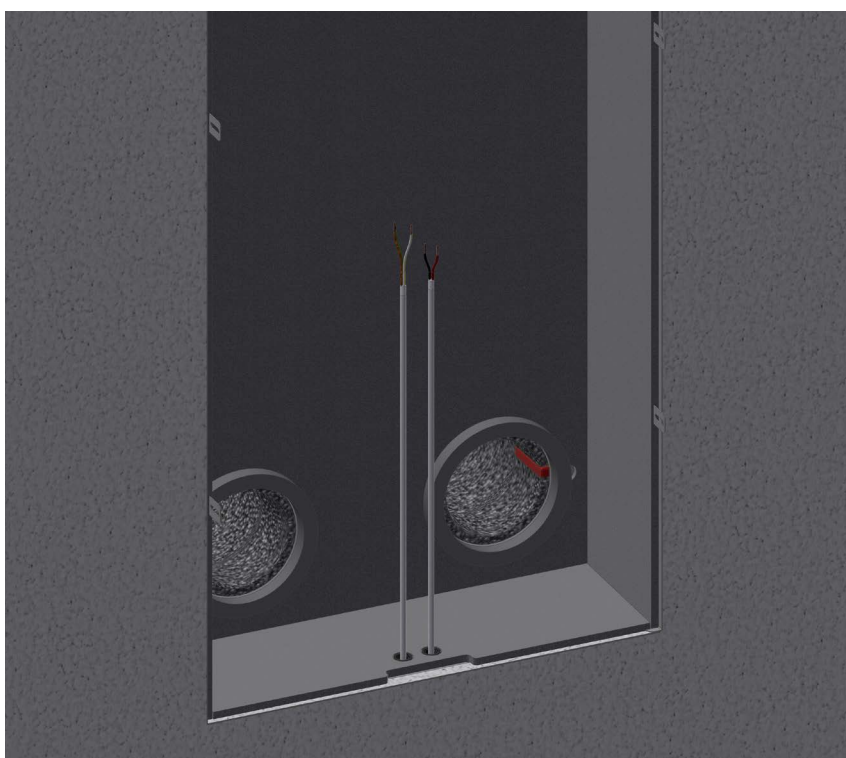


Built-in flush-mounted housing - see separate mounting instructions



Then the four screws from the slide-in module for fastening on the flush-mounted housing are removed. Keep the screws safe. The slide-in module can then be inserted into the flush-mounted housing by means of an assembly aid.

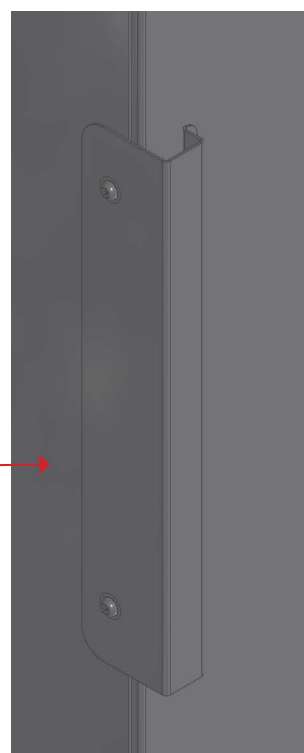*Detailed view**Screws for fastening at the flush-mounted housing**Assembly aid**Detailed view*

In order to provide for a correct insertion position, the slide-in module must be inserted into the flush-mounted housing up to the point that the assembly aids touch the interior plaster closely.

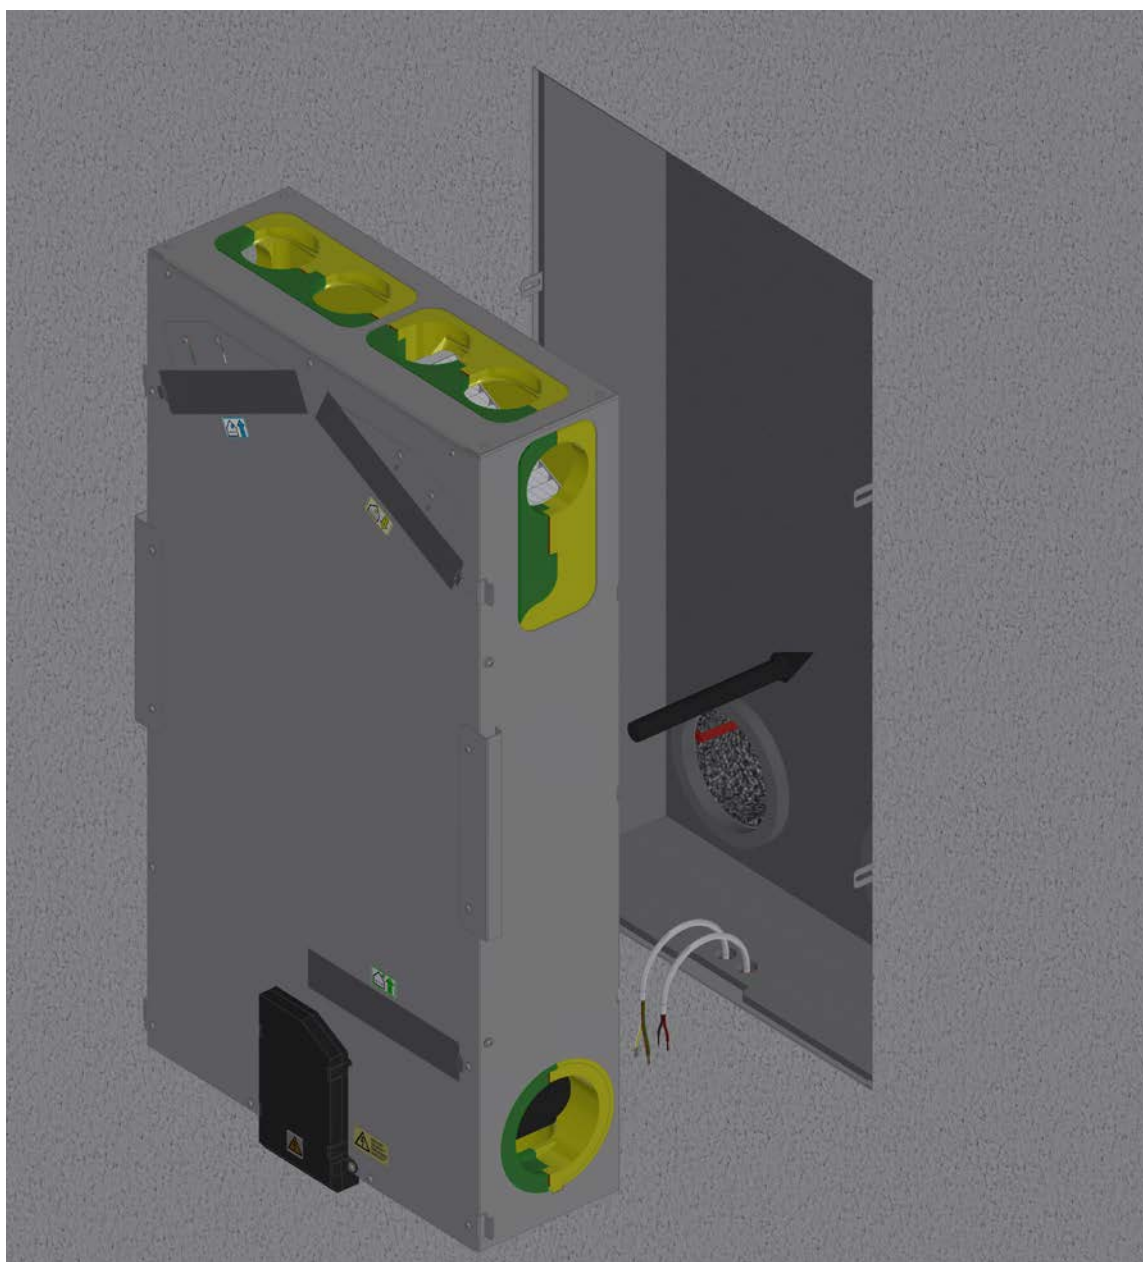

Inserting the slide-in module

GENERAL



USERS

SPECIALIST PERSONNEL



GENERAL


USERS

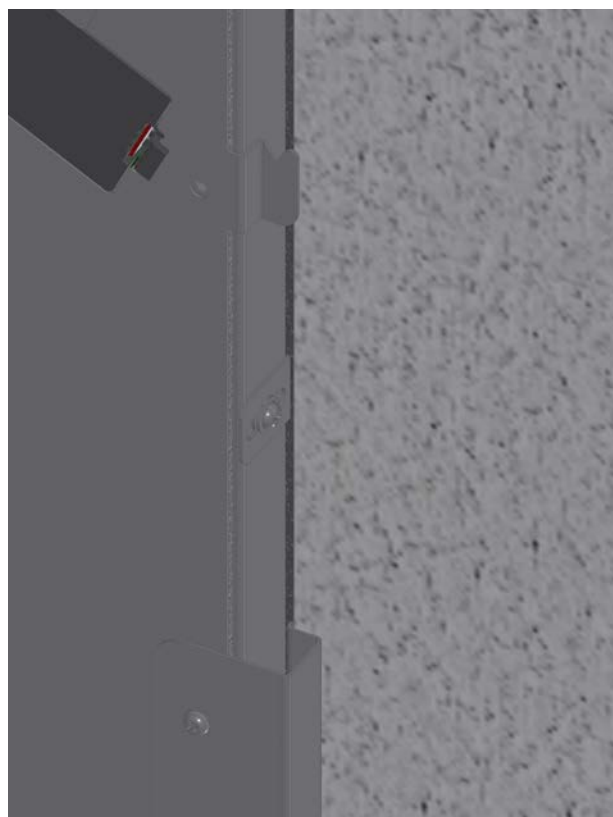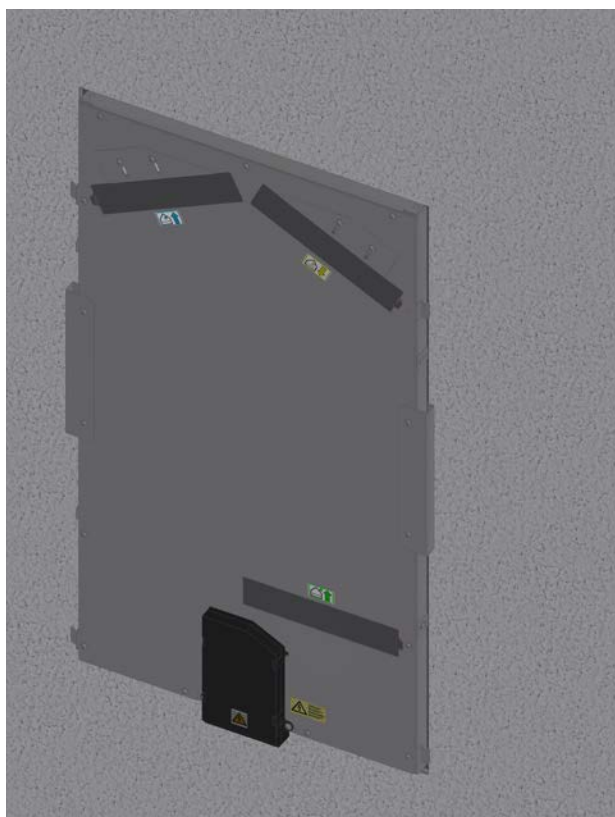

Assembly aids must touch the interior plaster closely

When the assembly aids touch the interior plaster, the correct position is ensured and the slide-in module is fastened to the four mounting brackets of the flush-mounted housing using the screws removed previously.

SPECIALIST PERSONNEL

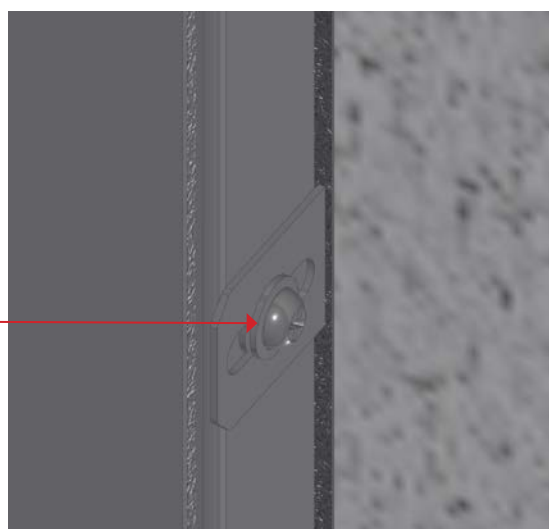

Detailed view

Screwing on the slide-in module



16.2. Electrical connection



Electrical connection and work on electrical components may only be carried out by authorised electricians.




Before working on the control board, the unit must be isolated from the mains (all poles) and protected from being switched back on.




The LG 100 domestic ventilation unit may be installed and operated appropriately at a fixed electrical installation only, with a separating device for complete isolation in accordance with the conditions of overvoltage category III and the relevant regulations for installation.

To be able to implement the electrical connection, first the control housing has to be dismantled.

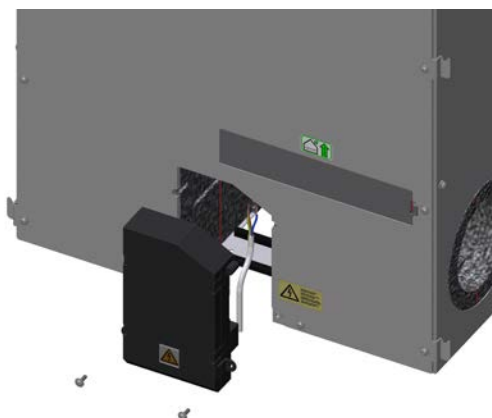


Disassembling the control housing

The strain relief of the mains supply cable must be established on the control housing by using cable ties.

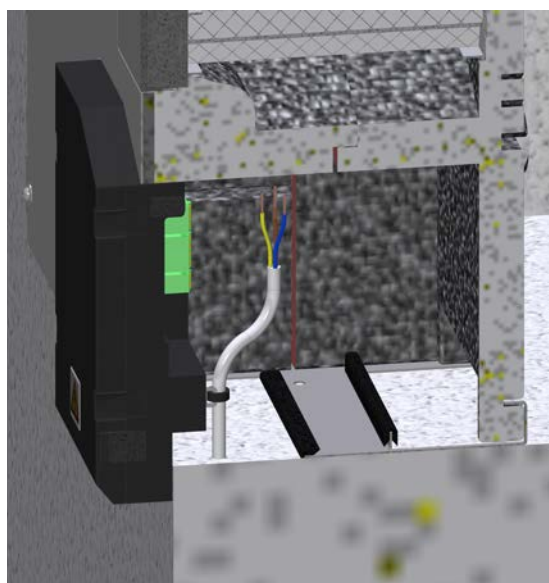


Disassembling the control housing

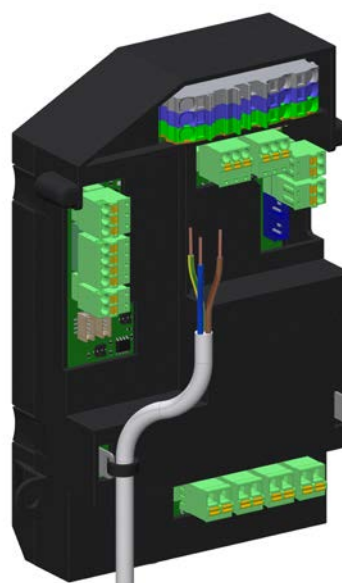

Fasten the mains supply cable using cable ties



Optionally, the ventilation unit can be controlled via the MINI control unit or via modbus RTU (GLT connection). A digital input is provided as "External off" (contact: NC or NO contact) or at "External ventilation level 3" (contact as NO contact), depending on the configuration. The standard setting configured for the digital input is "External ventilation level 3".

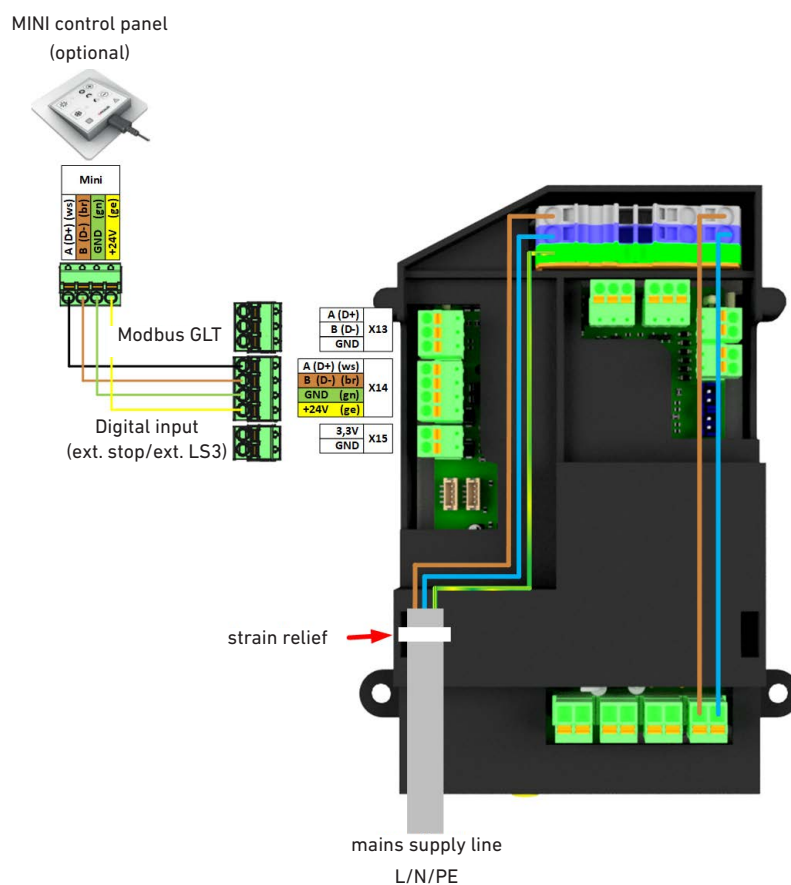

Connection diagram



When the cabling process has been carried out successfully, fit the control housing again.




16.3. Adjusting the air regulation sheets

The LG 100 as flush-mounted type allows for single-room and multi-room application. For this purpose it is essential to adjust the air regulation sheets according to the application. The air regulation sheets are located above the supply air and extract air filters, respectively.

16.3.1. SINGLE-ROOM APPLICATION

When the air regulation sheets are fully opened (delivered condition), the air is guided from the front across the design sheet and guided into the room via the outlets at the bottom side. The entire ventilation and deaeration is performed in the room where the unit is installed.

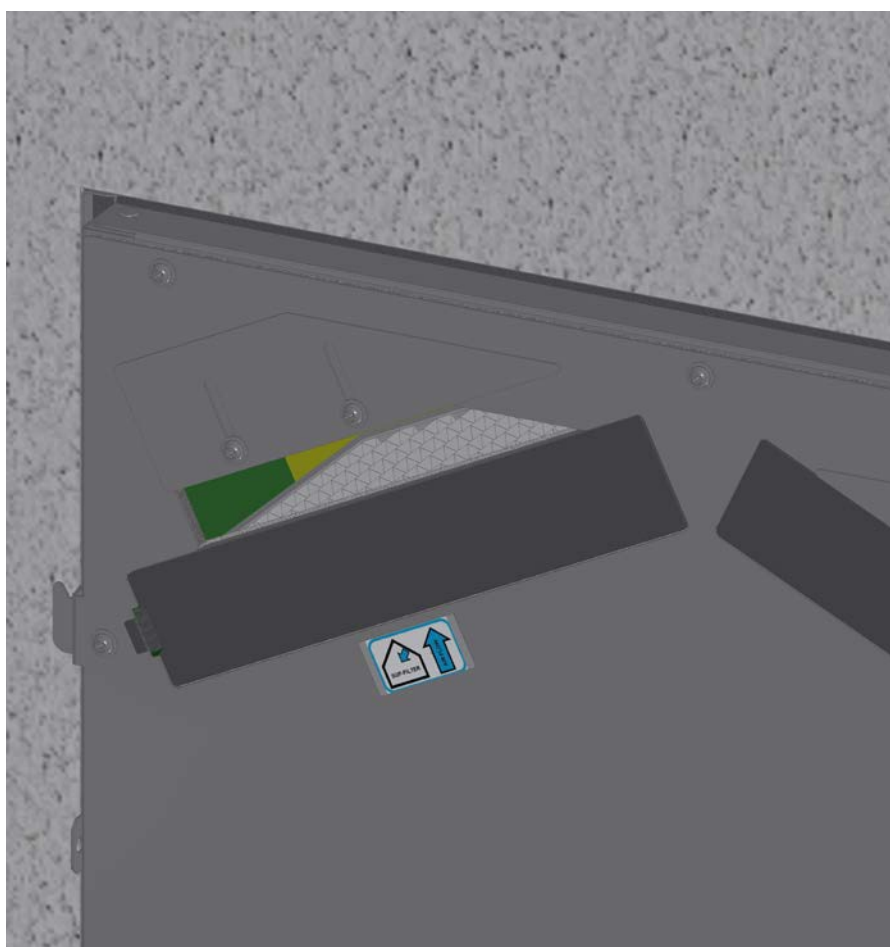


Air regulation sheet - fully opened



16.3.2. MULTI-ROOM APPLICATION

In order to be able to adjust the air regulation sheets, the screws must be unscrewed first.

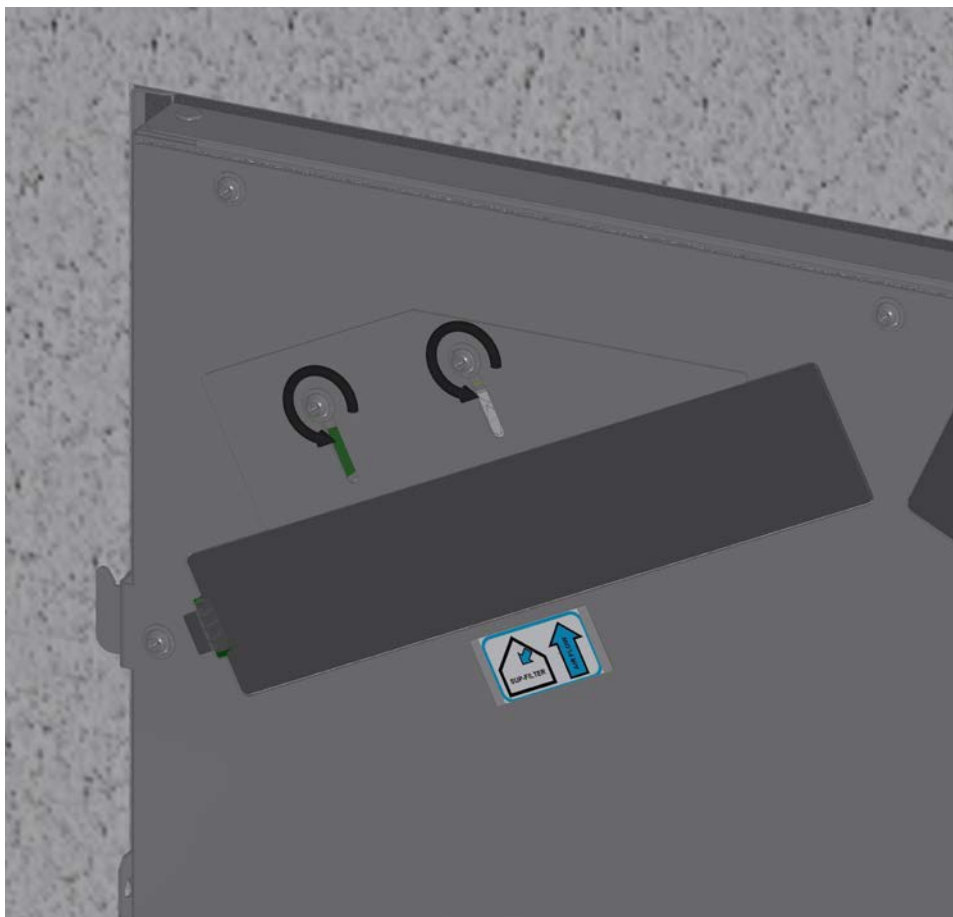


Air regulation sheet - fully opened

To adjust the correct air volume flow for a multi-room application, the air regulation sheet must be adjusted and the air volume flow must be measured on the outlet valve of the corresponding adjoining rooms. Depending on the requirement, adjust the air regulation sheet and measure the air volume flow again, if necessary.



16.4. Installation of the design front

In order to close the unit, the design front must be fastened at the retention points of the slide-in module. For this purpose, the cover front is pressed against the wall and slid into the retention points top down.

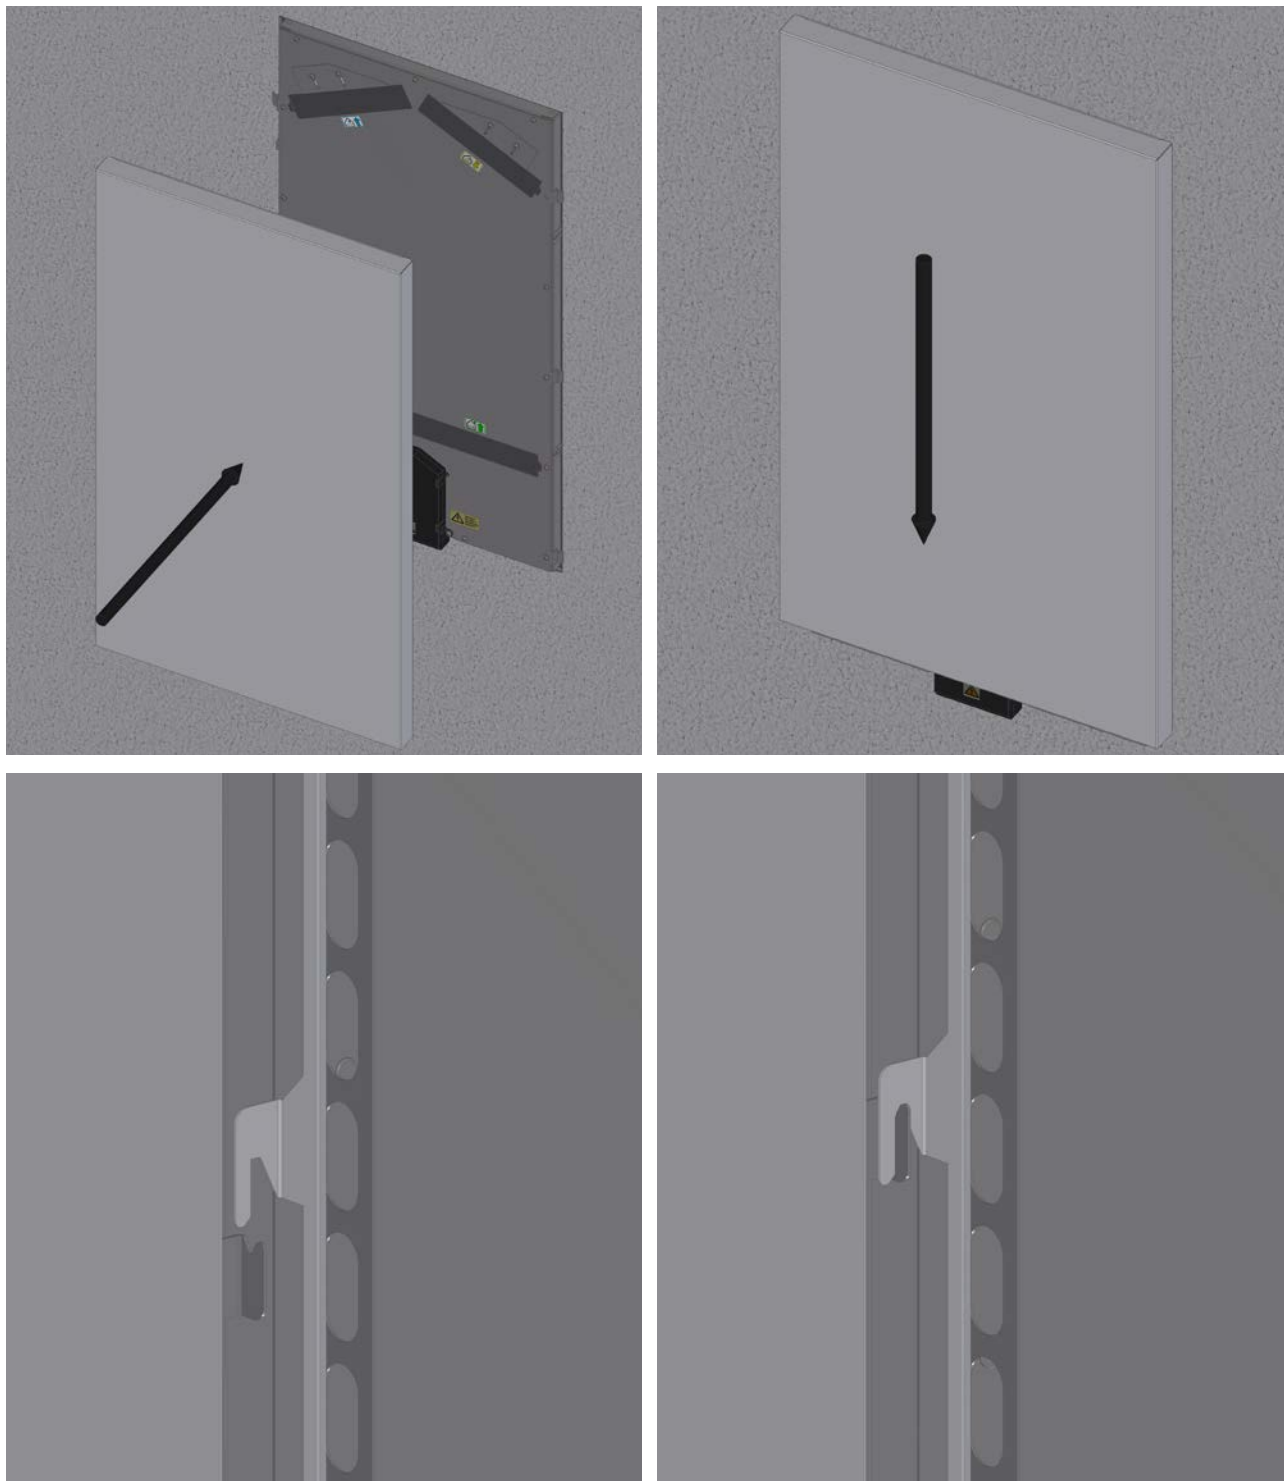

Installation of the design front - in 4 steps



In order to ensure that the design front is tight, it has to be fastened properly!



SPECIALIST PERSONNEL - COMMISSIONING

17. Maintenance and cleaning

17.1. Safety instructions



For all cleaning or servicing work on the ventilation unit, always pull the mains plug or fully disconnect the unit from the mains (all poles)!

Further installation and system components must be maintained and cleaned in compliance with specifications and instructions. Be acutely aware of hazards and safety when opening the sealing plate or any covers. If possible, use a vacuum cleaner to remove dirt and dust. Applying force or using compressed air for cleaning may damage the components and surfaces. Never use aggressive or solvent-containing cleaning agents. The electrical components must not be exposed to moisture or wet conditions. The safety information under Section 5 and, in particular, the item regarding the electrical connections must be observed when performing any electrical work.

17.2. Maintenance instructions




Only specialists are allowed to carry out the work specified below on the ventilation unit. Any defects detected during servicing must be remedied immediately to ensure safe operation of the unit. Only original spare parts may be used for repairs and replacements.


17.3. Enthalpy exchanger

Annual cleaning is recommended at the least, depending on the degree of soiling of the enthalpy exchanger. When maintenance work is performed, the enthalpy exchanger must be carefully removed from the unit. Cleaning is performed by rinsing with warm water (maximally 50 °C). By no means blow through the enthalpy exchanger using compressed air. This might damage the device!

1.) Dismounting the design front:

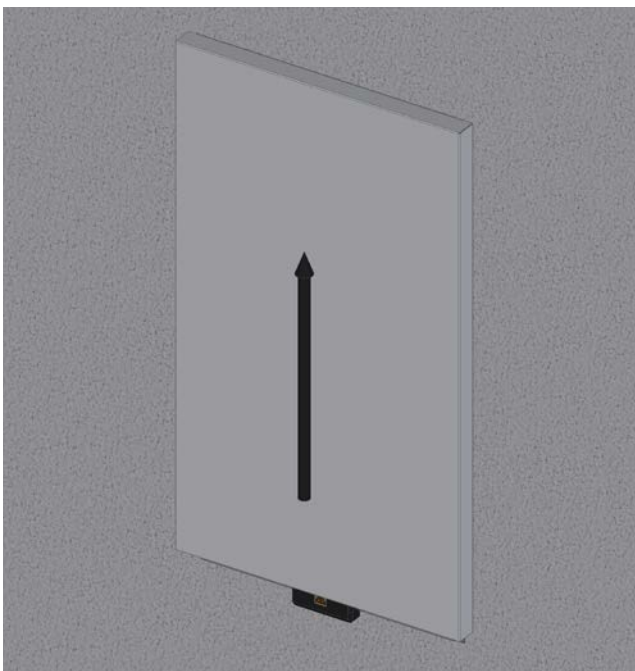

Lifting the design front

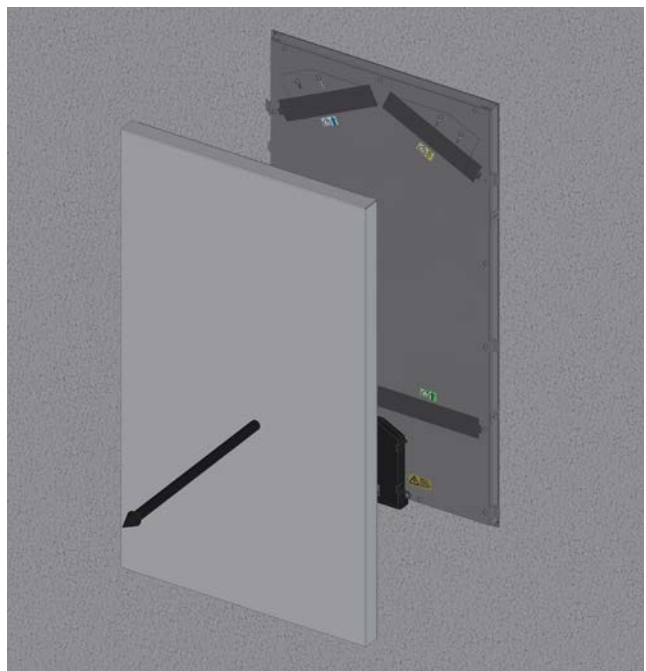


Opening the sealing plate

For this purpose, the design front must be removed, and the sealing plate must be opened by loosening the screws at the side and removed as well.




2.) Removing the heat exchanger:

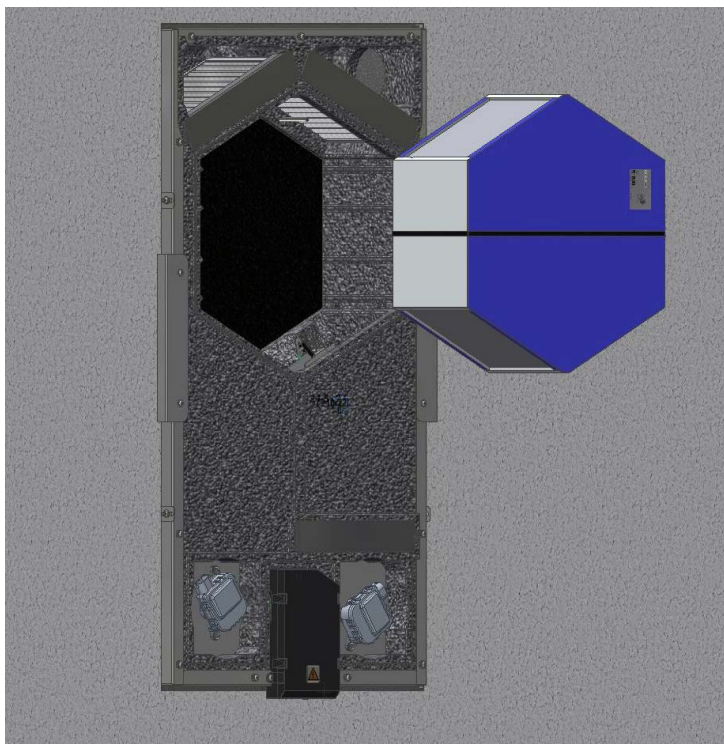

Removing the heat exchanger

17.4. Cleaning the equipment housing inside

We recommend cleaning at least once a year, depending on the level of soiling. Handle the device surface with care when cleaning it. Using excessive force during cleaning can cause damage to the surfaces! Preferably use a cloth or a vacuum cleaner to remove dust. Electrical components may not be exposed to moisture or wet conditions. Be particularly careful not to damage the integrated sensor system and the electronic connecting cables and components.

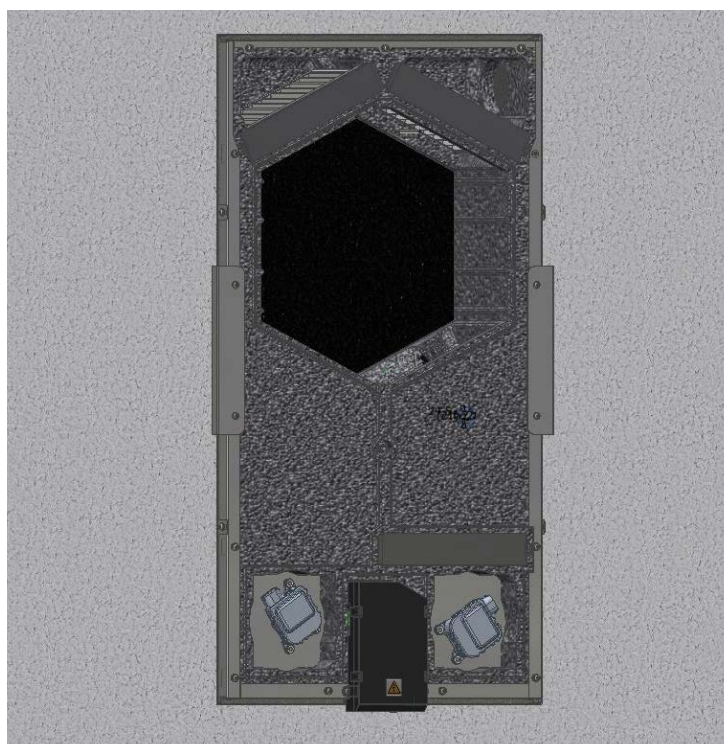

Device cleaning



17.5. Service table

In order to document maintenance works, this table must be completed after performance of works on the unit:

System commissioned by:			Date
No.	Maintenance work (e.g. filter change)	Performed by (signature)	Date
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			



GENERAL

USERS

SPECIALIST PERSONNEL

11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			



18. Commissioning



The ventilation system must be complete, connected and ready for operation before it is put into operation for the first time. The unit can be put into operation and system settings can be configured only when all work on the system is complete. The factory settings on the control unit may only be changed by a specialised company. Incorrect settings may cause the unit to malfunction.

Ventilation level	Operating mode	Designation	Volume flow LG 100 - single-room	Recommendation for air change - multi-room
0	Standby operation	Standby operation means that the flaps are closed and the building is not ventilated	No volume flow	No volume flow
1	Reduced ventilation	Reduced ventilation with minimum aeration of the building	25 m ³ /h	25 m ³ /h
2	Standard ventilation	Operation with increased volume flow, with normal aeration of the building	42 m ³ /h	56 m ³ /h
3	Intensive ventilation	Operation with increased volume flow, boost ventilation for short, intensive building ventilation	60 m ³ /h	80 m ³ /h
4	Automatic	Operation with demand-oriented control via VOC-sensor	25 - 60 m ³ /h	25 - 80 m ³ /h

18.1. Basic questions for commissioning

- Are all air ducts and components fully installed and airtight?
- Are all system components fitted and electrically connected?
- Is the electric wiring complete and the control unit fitted?
- Has the electrical connection of the control unit been implemented correctly?

18.2. Setting system parameters

- Check system components and correct settings where necessary.
- Set system parameters, e.g. adjust volume flow/ventilation level.
- Configure system extensions correctly.



19. Error description

19.1. Description of errors indicated by the MINI control unit

Error descriptions for the corresponding light patterns are provided in the following table.
Errors can be located precisely using the service software (available to specialist personnel only).

Pattern	Error
Error LED flashes 1x	Z04, Z05 (fan error)
Error LED flashes 2x	Z06 - Z13 (combi sensor error)
Error LED flashes 3x	Z14, Z15 (sensor error)
Error LED flashes 4x	Z17, Z18 (flap error)
Error LED flashes 5x	Z02, Z03 (data transmission error)
Error LED flashes 6x	Z19, Z20, Z21 (risk of frost)
Error LED flashes 7x	Z01 (no Internet connection possible)
Filter LED flashes	Z16 (filter message)

Error	Description
Z01	No Internet connection possible
Z02	Communication of combi sensor 1
Z03	Communication of combi sensor 2
Z04	Exhaust air fan blocked (speed monitoring)
Z05	Outdoor air fan blocked (speed monitoring)
Z06	Combi sensor 1: T1 - outdoor air
Z07	Combi sensor 1: volume flow - outdoor air
Z08	Combi sensor 1: relative humidity - outdoor air
Z09	Combi sensor 1: VOC/CO2 sensor - outdoor air
Z10	Combi sensor 2: T2 - exhaust air
Z11	Combi sensor 2: volume flow - exhaust air
Z12	Combi sensor 2: relative humidity - exhaust air
Z13	Combi sensor 2: VOC/CO2 sensor - exhaust air
Z14	T3 - extract air
Z15	T4 - supply air
Z16	Replace air filters
Z17	Outdoor air flap (current monitoring)
Z18	Exhaust air flap (current monitoring)
Z19	No power output from preheating battery
Z20	Risk of frost
Z21	Risk of condensation



19.2. Description of errors indicated by the ventilation unit

Error descriptions for the corresponding light patterns are provided in the following table.
Errors can be located precisely using the service software (available to specialist personnel only).

Pattern	Error
Red LED flashes 1x	Z04, Z05 (fans)
Red LED flashes 2x	Z06 - Z013 (invalid values of combi sensors)
Red LED flashes 3x	Z14, Z15 (thermal sensor)
Red LED flashes 4x	Z17, Z18 (flaps)
Red LED flashes 5x	Z02, Z03 (communication of combi sensors)
Red LED flashes 6x	Z19, Z20, Z21 (hazard of frost or condensate formation)
Red LED flashes 7x	Z01 (no Internet connection)
Green and red LEDs flash alternately	Z16 (filter message)

Error	Description
Z01	No Internet connection possible
Z02	Communication of combi sensor 1
Z03	Communication of combi sensor 2
Z04	Exhaust air fan blocked (speed monitoring)
Z05	Outdoor air fan blocked (speed monitoring)
Z06	Combi sensor 1: T1 - outdoor air
Z07	Combi sensor 1: volume flow - outdoor air
Z08	Combi sensor 1: relative humidity - outdoor air
Z09	Combi sensor 1: VOC/CO2 sensor - outdoor air
Z10	Combi sensor 2: T2 - exhaust air
Z11	Combi sensor 2: volume flow - exhaust air
Z12	Combi sensor 2: relative humidity - exhaust air
Z13	Combi sensor 2: VOC/CO2 sensor - exhaust air
Z14	T3 - extract air
Z15	T4 - supply air
Z16	Replace air filters
Z17	Outdoor air flap (current monitoring)
Z18	Exhaust air flap (current monitoring)
Z19	No power output from preheating battery
Z20	Risk of frost
Z21	Risk of condensation

20. Installation/operation of service software and firmware updates

The control unit must be connected to a laptop via the micro USB cable or a WLAN connection with the unit must be established in order to perform troubleshooting. To ensure a stable WLAN connection of the LG 100 it may be required to boost the WLAN signal by using WLAN repeaters or to establish a mesh network.

Further information on installation/operation of service software and firmware updates is available to certified partners on request.

Service hotline: +43 (0)463 32769-290

Email: service@pichlerluft.at



21. Spare parts and accessories



Only original spare parts may be installed or used for replacements and repairs. Dependable operation is ensured only if original spare parts are used!

21.1. Control elements

Designation	Item number
OPTIONALLY: MINI control unit for LG 100	08LGMINI100
Shielded connecting cable J-Y(ST)Y 2 x 2 x 0.8	40LG040340

21.2. Air filters

Designation	Item number
ODA/ETA filter ISO Coarse 70%	40LG0500006A
SUP filter ISO ePM1 55%	40LG0500007A

21.3. Gateway

Designation	Item number
MODBUS/KNX-GATEWAY	08KNXGAB

22. Changes reserved

It is our constant endeavour to technically improve and optimise our products and we reserve the right to change the design of the units or the technical specifications without prior notice.



23. EC Declaration of Conformity

Hersteller / Manufacturer: J. Pichler Gesellschaft m.b.H.
Anschrift / Address: Karlweg 5
 A-9021 Klagenfurt am Wörthersee
Bezeichnung / Product description: Dezentrales Kompaktlüftungsgerät mit integrierter Steuerung
Ausführungen / Type: LG 100 UP / LG 100 AP / LG100 DE
 mit Bedieneinheit MINI

Die bezeichneten Produkte stimmen in der von uns in Verkehr gebrachten Ausführung mit den Vorschriften folgender europäischen Richtlinien überein:

The products described above in the form as delivered are in conformity with the provisions of the following European Directives:

- 2014/35/EU** Zur Harmonisierung der Rechtsvorschriften der Mitgliedsstaaten über die Bereitstellung elektrischer Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen auf dem Markt
On the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits
- 2014/30/EG** Zur Harmonisierung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit
On the harmonisation of the laws of the Member States relating to electromagnetic compatibility
- 2009/125/EG** Richtlinie des Europäischen Parlaments und des Rates zur Angleichung der Rechtsvorschriften der Mitgliedsstaaten zur Schaffung eines Rahmens für die Festlegung von Anforderungen an die umweltgerechte Gestaltung energieverbrauchsrelevanter Produkte
Council Directive on the approximation of the laws of the Member States establishing a framework for the setting of ecodesign requirements for energy-related products

Die Konformität mit den Richtlinien wird nachgewiesen durch die Einhaltung folgender Normen und Verordnungen:

Conformity to the Directives is assured through the application of the following standards and regulations:

VO 1253/2014/EU Verordnung (EU) der Kommission zur Durchführung der Richtlinie 2009/125/EG des Europäischen Parlaments und des Rates hinsichtlich der Anforderungen an die umweltgerechte Gestaltung von Lüftungsanlagen
COMMISSION REGULATION (EU) implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for ventilation units

VO 1254/2014/EU zur Ergänzung der Richtlinie 2010/30/EU des Europäischen Parlaments und des Rates im Hinblick auf die Kennzeichnung von Wohnraumlüftungsgeräten in Bezug auf den Energieverbrauch
VO 1254/2014/EU supplementing Directive 2010/30/EU of the European Parliament and of the Council with regard to energy labelling of residential ventilation units

DIN EN 60335-1:2012-10 + Ber.1:2014-04 + Ber.2:2014-11+Bbl.1:2016-06+A13:2018-07
 DIN EN 60335-2-40:2014-01
 ETSI EN 301 489-1 V2.1.1:2017-02
 ETSI EN 301 489-17 V3.1.1:2017-02
 EN IEC 61000-3-2:2019-03
 EN 61000-3-3:2013-08
 EN 62233:2008-04
 EN 55014-1:2017-04
 EN 55014-2:2015-04

Eine vom Lieferzustand abweichende Veränderung des Gerätes führt zum Verlust der Konformität.

Product modifications after delivery may result in a loss of conformity.

Diese Erklärung bescheinigt die Übereinstimmung mit den genannten Richtlinien, ist jedoch keine Zusicherung von Eigenschaften. Die Sicherheitsinformationen der mitgelieferten Produktdokumentation sind zu beachten.

This declaration certifies the conformity to the specified directives but contains no assurance of properties. The safety documentation accompanying the product shall be considered in detail.

J. Pichler Gesellschaft m.b.H.
 Geschäftsleitung / General Manager

Klagenfurt, am 16. Juni 2020



ErP 2018

Fulfills the requirements of the Ecodesign Directive in accordance with EU Regulation 1253/2014.



EPREL

Our LG 100 compact ventilation unit is listed in the European Product Database for Energy Labelling (EPREL).



*Responsible for the content J. PICHLER Gesellschaft m.b.H.
 Photos: Ferdinand Neumüller, archive J. PICHLER Gesellschaft m.b.H. | Text: J. PICHLER Gesellschaft m.b.H.
 All rights reserved | All images are symbolic illustrations | Subject to change without notice | Version: 05/2024 eh*



Systematic ventilation.

J. PICHLER
 Gesellschaft m.b.H.
 office@pichlerluft.at
 www.pichlerluft.at

AUSTRIA
9021 KLAGENFURT
AM WÖRTHERSEE
 Karlweg 5
 T +43 (0)463 32769
 F +43 (0)463 37548

AUSTRIA
1100 WIEN
 Doerenkampgasse 5
 T +43 (0)1 6880988
 F +43 (0)1 6880988-13

Sales offices in Slovenia and Serbia. Sales partners in Europe.

